



The following documentation is an electronically-submitted vendor response to an advertised solicitation from the *West Virginia Purchasing Bulletin* within the Vendor Self-Service portal at *wvOASIS.gov*. As part of the State of West Virginia's procurement process, and to maintain the transparency of the bid-opening process, this documentation submitted online is publicly posted by the West Virginia Purchasing Division at *WVPurchasing.gov* with any other vendor responses to this solicitation submitted to the Purchasing Division in hard copy format.

Header 4

List View

**General Information** | Contact | Default Values | Discount | Document Information | Clarification Request

Procurement Folder: 1331355  
 Procurement Type: Central Purchase Order  
 Vendor ID: VS0000044544   
 Legal Name: Design Plastic Systems Inc  
 Alias/DBA:  
 Total Bid: \$198,000.00  
 Response Date: 01/10/2024   
 Response Time: 12:04  
 Responded By User ID: DPS2024   
 First Name: Shawn  
 Last Name: McNally  
 Email: smcnally@designplasticsyste  
 Phone: 8106898108

SO Doc Code: CRFQ  
 SO Dept: 0313  
 SO Doc ID: DEP2400000023  
 Published Date: 12/26/23  
 Close Date: 1/10/24  
 Close Time: 13:30  
 Status: Closed  
 Solicitation Description: OSR HDPE Double Wall Chemical Storage Tanks  
 Total of Header Attachments: 4  
 Total of All Attachments: 4



Department of Administration  
 Purchasing Division  
 2019 Washington Street East  
 Post Office Box 50130  
 Charleston, WV 25305-0130

**State of West Virginia  
 Solicitation Response**

**Proc Folder:** 1331355  
**Solicitation Description:** OSR HDPE Double Wall Chemical Storage Tanks  
**Proc Type:** Central Purchase Order

Solicitation Closes	Solicitation Response	Version
2024-01-10 13:30	SR 0313 ESR12112300000002786	1

**VENDOR**  
 VS0000044544  
 Design Plastic Systems Inc

**Solicitation Number:** CRFQ 0313 DEP2400000023  
**Total Bid:** 198000      **Response Date:** 2024-01-10      **Response Time:** 12:04:13

**Comments:** Contract Items regarding fittings, quality and craftsmanship will meet or exceed the mandatory requirements.  
 Design Plastic Systems has been a distributor & installer of High Density Polyethylene tanks for over 40 years. We have our own delivery trucks and regularly make deliveries of tanks throughout the West Virginia regions along with the Mid Atlantic regions. Snyder Tanks has a manufacturing facility nearby in Philippe, WV where these tanks would be locally made here in the USA.

**FOR INFORMATION CONTACT THE BUYER**  
 Joseph E Hager III  
 (304) 558-2306  
 joseph.e.hageriii@wv.gov

**Vendor  
 Signature X**

**FEIN#**

**DATE**

All offers subject to all terms and conditions contained in this solicitation

Line	Comm Ln Desc	Qty	Unit Issue	Unit Price	Ln Total Or Contract Amount
1	HDPE Dual Wall Chemical Tanks delivered to Upshur County	4.00000	EA	8250.000000	33000.00

Comm Code	Manufacturer	Specification	Model #
24111805			

**Commodity Line Comments:** This tank is a 1,500 Gallon Double Walled Tank and its dimensions are approximately the same of what the specification requested. This tank is a factory item and is a dual containment tank that does not require any custom welding. Due to this being a factory item, you actually get more capacity (1,500 Gallons) vs the 1295 that the spec calls for and you do not sacrifice quality and craftsmanship. All fittings and lines requested are included in this pricing based on approved equals to the spec. Delivery is included in the quantities requested and can be within 90 days or as soon as available from the manufacturing plant. I am happy to provide any additional information. Tanks are made locally in Philippe, WV manufacturing site so delivery and handling is very local.

**Extended Description:**  
Four tanks delivered to DLM Coal Co. located in Upshur Co. WV

Line	Comm Ln Desc	Qty	Unit Issue	Unit Price	Ln Total Or Contract Amount
2	HDPE Dual Wall Chemical Tanks delivered to Marion County	9.00000	EA	8250.000000	74250.00

Comm Code	Manufacturer	Specification	Model #
24111805			

**Commodity Line Comments:** This tank is a 1,500 Gallon Double Walled Tank and its dimensions are approximately the same of what the specification requested. This tank is a factory item and is a dual containment tank that does not require any custom welding. Due to this being a factory item, you actually get more capacity (1,500 Gallons) vs the 1295 that the spec calls for and you do not sacrifice quality and craftsmanship. All fittings and lines requested are included in this pricing based on approved equals to the spec.. Delivery is included in the quantities requested and can be within 90 days or as soon as available from the manufacturing plant. I am happy to provide any additional information. Tanks are made locally in Philippe, WV manufacturing site so delivery and handling is very local.

**Extended Description:**  
Nine tanks delivered to Martinka Mine Complex located in Marion County WV

Line	Comm Ln Desc	Qty	Unit Issue	Unit Price	Ln Total Or Contract Amount
3	HDPE Dual Wall Chemical Tanks delivered to Preston County	11.00000	EA	8250.000000	90750.00

Comm Code	Manufacturer	Specification	Model #
24111805			

**Commodity Line Comments:** This tank is a 1,500 Gallon Double Walled Tank and its dimensions are approximately the same of what the specification requested. This tank is a factory item and is a dual containment tank that does not require any custom welding. Due to this being a factory item, you actually get more capacity (1,500 Gallons) vs the 1295 that the spec calls for and you do not sacrifice quality and craftsmanship. All fittings and lines requested are included in this pricing based on approved equals to the spec. Delivery is included in the quantities requested and can be within 90 days or as soon as available from the manufacturing plant. I am happy to provide any additional information. Tanks are made locally in Philippe, WV manufacturing site so delivery and handling is very local.

**Extended Description:**  
Eleven tanks delivered to T&T Fuels located in Preston County, WV



---

## STANDARD LIMITED WARRANTY

Distributors and their authorized distribution have the responsibility of calling to the attention of their customers any exceptions to the Snyder Industries standard limited warranty, prior to acceptance of an order from the customer for any Snyder Industries product.

Snyder Industries warrants to the purchaser for use that if any manufactured tank product is proven to be defective in material or workmanship within 3 YEARS from the date of original invoice from factory, and Snyder Industries is notified within 15 days after such defect is discovered, Snyder Industries will (at company option) either replace or repair said part. Snyder Industries warrants to the purchaser for use that if any tank fitting, attachment, or accessory product is proven to be defective in material or workmanship within 1 YEAR from the date of original invoice from factory, and Snyder Industries is notified within 15 days after such defect is discovered, Snyder Industries will (at company option) either replace or repair said part. This Snyder Industries Standard Limited Warranty does not apply to damage resulting from misuse, improper application of recommended materials, neglect, material wear, accident, or improper installation or maintenance. Said part will not be considered defective if it substantially fulfills performance specifications. THE FOREGOING STANDARD LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OF MERCHANTABILITY, FITNESS FOR PURPOSE AND OF ANY OTHER TYPE, WHETHER EXPRESSED OR IMPLIED. Snyder Industries neither assumes nor authorizes anyone to assume for it any other obligation or liability in connection with said tank product and will not be liable for incidental or consequential damages. THE REMEDIES STATED HEREIN SHALL BE THE EXCLUSIVE REMEDIES AVAILABLE UNDER THIS STANDARD WARRANTY. CLAIMS UNDER THIS STANDARD LIMITED WARRANTY SHALL BE HANDLED UNDER THE SNYDER INDUSTRIES SERVICE POLICY. Snyder Industries will not be responsible for any charges incurred in repairing or servicing any Snyder Industries product except as such repairs are made at Snyder Industries or by Snyder Industries personnel or as approved in writing from Snyder Industries Customer Service.

Due to the uniqueness of tank applications, Snyder Industries may offer warranties other than the standard warranty. These warranty statements will be in writing from Snyder Industries. The warranty period may be longer than 3 years as in the case for purchased extended warranties, or the warranty period may be shorter than 3 years as in the case for certain chemical/material applications. Please consult Snyder Industries if you have any questions regarding warranty coverage and/or requirements.

### WARRANTY CLAIM PROCEDURE

Snyder Industries has specific procedures for return merchandise and warranty claims. To make a claim, please contact the Customer Service Department at Snyder Industries by mail, phone or e-mail:

Snyder Industries  
6940 "O" Street, Suite 100  
Lincoln, NE 68510  
(402) 467-5221  
FAX: (402) 465-1220  
E-mail: sales@snydernet.com

The following information will be required to assist in filing your claim:

1. Product identification (tank size, part number, serial number, etc.)
2. Snyder Industries customer order number
3. Name and phone number of person making the claim
4. Distributor/company name, address, and phone number
5. Description of reason for claim
6. Pictures of failure and installation
7. MSDS of chemicals stored
8. Temperature of tank application

Dalton, GA

Hickory, NC

Mount Airy, NC

Salt Lake City, UT

## Section 1: Identification

### Product Identifier

**Trade Name:** R-10-011  
**Chemical Name:** Polyurethane Resin  
**Recommended Use:** Component for the manufacture of Polyurethanes  
**Restrictions on Use:**

### Chemical Manufacturer Information

<b>Name:</b> NCFI Polyurethanes	<b>Phone:</b> (800) 346-8229
<b>Address:</b> 1515 Carter St Mount Airy, NC 27030	<b>Fax:</b> (336) 789-9586
<b>Website:</b> <a href="http://www.NCFI.com">www.NCFI.com</a>	<b>Emergency Phone:</b> CHEMTREC: 800-424-9300

## Section 2: Hazard Identification

### Classification of the substance or mixture:

<b>GHS Classification:</b>	
• Skin irritation, Category 3	• Eye irritation, Category 2

### GHS Labeling:



### Warning

<b>Hazard Statements:</b>	
• May cause skin irritation	• May cause eye irritation
• May cause respiratory irritation	

<b>Precautionary Statements:</b>	
• Do not breathe fume/gas/mist/vapors/spray	• Wear protective gloves/eye protection/face protection
• IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing.	• IF INHALED: Remove victim to fresh air and keep at rest in a position comfortable for breathing
• IF ON SKIN: Wash with plenty of soap and water	

### Other Hazards:

Dalton, GA

Hickory, NC

Mount Airy, NC

Salt Lake City, UT

### Section 3: Composition

#### Hazardous Components

Type of product: Mixture

CAS#	Weight %	Name
460-73-1	<9	1,1,1,3,3-Pentafluoropropane (CF <sub>3</sub> CH <sub>2</sub> CHF <sub>2</sub> or HFC-245fa)
Proprietary	<4	Tertiary amine catalysts
156-60-5	<3	Trans-1,2-Dichloroethylene

### Section 4: First Aid Measures

<b>Inhalation:</b>	Move to fresh air if symptoms develop. If breathing is difficult, give oxygen and call physician.
<b>Eye Contact:</b>	Flush with water for at least 15 minutes. See a physician if irritation develops.
<b>Ingestion:</b>	Do not induce vomiting unless told to do so by a medical professional.
<b>Most Important symptoms and effects, acute and delayed:</b>	May cause skin or eye irritation upon contact. Avoid breathing vapors. The dense vapors can displace and reduce breathing air in confined or unventilated spaces causing asphyxiation. Overexposure may cause tremors, confusion, irritation, and may result in cardiac sensitization.
<b>Indication of immediate medical attention and special treatment, if applicable:</b>	N/A
<b>Skin Contact:</b>	Wash with soap and water at first opportunity.

### Section 5: Fire-Fighting Measures

<b>Suitable extinguishing media:</b>	Water, dry chemicals, CO <sub>2</sub>
<b>Unsuitable extinguishing media:</b>	None
<b>Special hazards arising from the chemical:</b>	Overheated containers may rupture due to pressure produced by CF <sub>3</sub> CH <sub>2</sub> CHF <sub>2</sub> . CF <sub>3</sub> CH <sub>2</sub> CHF <sub>2</sub> burns to form acids and noxious gases.
<b>Precautions for fire-fighters:</b>	A self-contained breathing apparatus should be worn to protect against toxic and irritating vapors.

### Section 6: Accidental Release Measures

<b>Personal precautions, protective equipment, and emergency procedures:</b>	Clear area. Ensure adequate ventilation. Wear suitable personal protective clothing and equipment.
<b>Environmental precautions:</b>	Do not discharge into drains/surface waters/groundwater
<b>Methods and material for containment and cleanup:</b>	Absorb with sawdust, etc., and shovel into container. Waste material should be disposed of under conditions which meet federal, state, and local environmental regulations.

Dalton, GA

Hickory, NC

Mount Airy, NC

Salt Lake City, UT

## Section 7: Handling and Storage

<b>Precautions for safe handling:</b>	Store between 65°F and 85°F out of sunlight. Relieve pressure slowly when opening container. Under no circumstances should empty drums be burned or cut open with an electric or gas torch.
<b>Conditions for safe storage, including any incompatibilities:</b>	Keep tightly sealed.

## Section 8: Exposure Controls and PPE

### Exposure Limits

Component:	Type	Value
1,1,1,3,3-Pentafluoropropane (CF <sub>3</sub> CH <sub>2</sub> CHF <sub>2</sub> or HFC-245fa)	TWA	300ppm recommended
Tertiary Amine Catalysts <sup>1</sup>	TWA	None established
Trans-1,2-Dichloroethylene	TWA	200ppm

<sup>1</sup>Not listed as a carcinogen (NTA, IARC, OSHA)

### Exposure Controls

<b>Respiratory Protection:</b>	The specific respirator selected must be based on contamination levels of this material found in the workplace and the working limits of the respirator. A supplied air, full-face mask, positive pressure or continuous flow respirator or a supplied air hood is required when airborne concentrations are unknown or exceed threshold limit values. A positive pressure, self-contained breathing apparatus can be used in emergencies or other unusual situations. Full-face air purifying respirators equipped with organic vapor cartridges can be used in certain situations, <i>see OSHA standard 29CFR 1910.134</i> . All equipment must be NIOSH approved and maintained.
<b>Hand, eye, skin, body protection:</b>	Wear goggles or chemical safety glasses and chemically resistant rubber or plastic gloves. Avoid eye and skin contact. Eye wash system and showers should be available.

## Section 9: Physical and Chemical Properties

### Basic chemical and physical properties

<b>Appearance:</b>	Liquid	<b>Flammability:</b>	N/A
<b>Color:</b>	Amber	<b>Upper/lower flammability or explosive limits:</b>	N/A
<b>Odor:</b>	Ethereal odor	<b>Vapor pressure:</b>	N/A
<b>Odor threshold:</b>	N/A	<b>Vapor density:</b>	N/A
<b>pH:</b>	N/A	<b>Relative density:</b>	1.2g/mL
<b>Melting pt/freezing pt:</b>	<32°F	<b>Solubility(ies):</b>	Slightly soluble in water
<b>Boiling pt/boiling range:</b>	60°F	<b>Partition coefficient (n-octanol/water):</b>	N/A
<b>Flash point:</b>	>200°F	<b>Auto-ignition temperature:</b>	>500°F
<b>Evaporation rate:</b>	Slower than ether	<b>Decomposition temperature:</b>	>500°F



Dalton, GA

Hickory, NC

Mount Airy, NC

Salt Lake City, UT

## Section 10: Stability and Reactivity

<b>Chemical stability:</b>	Stable
<b>Possibility of hazardous reactions:</b>	N/A
<b>Conditions to avoid:</b>	Temperatures over 85°F
<b>Incompatible materials:</b>	Isocyanates and other chemicals that react with hydroxyl groups.
<b>Hazardous decomposition products:</b>	When burned, CO, CO <sub>2</sub> , NO <sub>x</sub> aliphatic fragments, halogens, halogen acids, and possibly carbonyl halides.

## Section 11: Toxicological Information

<b>Acute toxicity:</b>	May cause skin irritation
<b>Chronic toxicity:</b>	Not available
<b>Likely routes of exposure:</b>	Skin
<b>Symptoms related to physical, chemical and toxicological characteristics:</b>	May cause skin irritation
<b>Delayed and immediate effects and chronic effects from short and long-term exposure:</b>	May cause skin irritation; avoid contact with eyes
<b>Numerical toxicity measures:</b>	Not available

## Section 12: Ecological Information

<b>Ecotoxicity:</b>	Not a marine pollutant
<b>Persistence and degradability:</b>	No known significant effects
<b>Bioaccumulative potential:</b>	Does not bioaccumulate
<b>Mobility in soil:</b>	

## Section 13: Disposal

<b>Waste disposal:</b>	R component drums can be sent to drum reconditioners or disposed of as ordinary industrial waste in compliance with pertinent regulations
------------------------	---

## Section 14: Transport

<b>UN number:</b>	Not regulated
<b>UN Proper shipping name:</b>	Not regulated
<b>Transport Hazard class(es):</b>	Not regulated
<b>Packing group, if applicable:</b>	Not regulated
<b>Marine pollutant (Y or N):</b>	N
<b>Special precautions:</b>	None



Dalton, GA

Hickory, NC

Mount Airy, NC

Salt Lake City, UT

## **Section 15: Regulatory**

---

### **Relevant safety, health, and environmental regulations**

<b>Inventory Status:</b>	All components TSCA listed
<b>US Regulations:</b>	No ingredients listed
<b>US Superfund Amendments and Reauthorization Act (SARA) Title III Section 313 information:</b>	No ingredients listed

## **Section 16: Other**

---

<b>SDS Preparation Date:</b>	06/26/2014
<b>Revision Date:</b>	

### **IMPORTANT NOTICES**

This notification is a part of the Safety Data Sheet document and must not be detached. Any copying and redistribution of the Safety Data Sheet shall include copying of this notice and attaching the copy to the redistributed Material Safety Data Sheet copies.

This information is furnished without warranty, expressed, or implied, except that it is accurate to the best knowledge of NCFI. The data on this sheet relates only to the specific material designated herein. NCFI assumes no legal responsibility for use or reliance upon these data.

Dalton, GA

Hickory, NC

Mount Airy, NC

Salt Lake City, UT

## Section 1: Identification

### Product Identifier

**Trade Name:** A-10-011  
**Chemical Name:** Diphenylmethane Diisocyanate (MDI)  
**Recommended Use:** Component for production of polyurethanes  
**Restrictions on Use:**

### Chemical Manufacturer Information

**Name:** NCFI Polyurethanes **Phone:** (800) 346-8229  
**Address:** 1515 Carter St Mount Airy, NC 27030 **Fax:** (336) 789-9586  
**Website:** [www.NCFI.com](http://www.NCFI.com) **Emergency Phone:** CHEMTREC: 800-424-9300

## Section 2: Hazard Identification

### Classification of the substance or mixture

GHS Classification:	
• Skin irritation, Category 2	• Acute toxicity, Inhalative, Category 4
• Sensitization of respiratory airways, Category 1	• Eye irritation, Category 2
• Carcinogenicity, Category 2	• Sensitization of the skin, Category 1
• Specific target organ toxicity (repeated exposure), Category 2	• Specific target organ toxicity (single exposure), Category 3

### GHS Labeling:



**Danger**

Hazard Statements:	
• May cause an allergic skin reaction	• Causes skin irritation
• Harmful if inhaled	• Causes serious eye irritation
• May cause respiratory irritation	• May cause allergy or asthma symptoms or breathing difficulties if inhaled
• May cause damage to organs through prolonged or repeated exposure	• Suspected of causing cancer

Precautionary Statements:	
• Do not breathe dust/fume/gas/mist/vapors/spray	• IF INHALED: Remove victim to fresh air and keep at rest in a position comfortable for breathing
• Wear protective gloves/eye protection/face protection	• IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing.
• IF ON SKIN: Wash with plenty of soap and water	

**Other Hazards:** Persons with respiratory conditions should avoid handling this product.

Dalton, GA

Hickory, NC

Mount Airy, NC

Salt Lake City, UT

### Section 3: Composition

#### Hazardous Components

Type of product: substance

CAS#	Weight %	Name
101-68-8	38.0%	Diphenylmethane-4,4'-diisocyanate (MDI)
26447-40-5	< 10.0%	MDI Mixed Isomers
9016-87-9	< 55.0%	P-MDI

### Section 4: First Aid Measures

<b>General:</b>	Remove contaminated clothing
<b>Inhalation:</b>	Remove affected individual to fresh air and keep person calm. Assist in breathing if necessary. Immediate medical attention required.
<b>Skin Contact:</b>	Wash affected areas with soap and water. Seek medical attention for irritation.
<b>Eye Contact:</b>	Rinse for at least 15 minutes with water. Immediate medical attention required.
<b>Ingestion:</b>	Rinse mouth and drink plenty of water. Do not induce vomiting. Immediate medical attention required.

### Section 5: Fire-Fighting Measures

<b>Suitable extinguishing media:</b>	Carbon dioxide, foam, dry powder, water spray
<b>Unsuitable extinguishing media:</b>	High volume water jet
<b>Special hazards arising from the chemical:</b>	Burning releases CO, CO <sub>2</sub> , oxides of nitrogen, isocyanate vapors and traces of hydrogen cyanide.
<b>Precautions for firefighters:</b>	Firefighters should be equipped with self-contained breathing apparatus and turn-out gear.

### Section 6: Accidental Release Measures

<b>Personal precautions, protective equipment, and emergency procedures:</b>	Clear area. Ensure adequate ventilation. Wear suitable personal protective clothing and equipment.
<b>Environmental precautions:</b>	Do not discharge into drains/surface waters/groundwater
<b>Methods/material for containment and cleanup:</b>	Remove mechanically; cover remainder with wet, absorbent material (e.g. sawdust, chemical binder based on calcium silicate hydrate, sand). After approx. one hour transfer to waste container and do not seal (evolution of CO <sub>2</sub> ?). Keep damp in a safe ventilated area for several days.

Spill area can be decontaminated with the following recommended decontamination solution:

Decontamination Solution #1: 8-10% sodium carbonate and 2% liquid soap in water

Decontamination Solution #2: Liquid/yellow soap (potassium soap with ~15% anionic surfactant): 20 ml; Water: 700 ml; Polyethylene glycol (PEG 400): 350 ml

Dalton, GA

Hickory, NC

Mount Airy, NC

Salt Lake City, UT

## Section 7: Handling and Storage

<b>Precautions for safe handling:</b>	Provide sufficient air exchange and/or exhaust in work rooms. Occupational exposure limits should not be exceeded (refer to Section 8). Contact with skin and eyes and inhalation of vapors must be avoided. Keep away from foodstuffs, drinks, and tobacco. Wash hands before breaks and at end of work.
<b>Conditions for safe storage, including any incompatibilities:</b>	Keep container tightly closed and protect against moisture. Segregate from bases. Store from 32° F – 110° F.

## Section 8: Exposure Controls and PPE

### Exposure Limits

Component	Type	Value
P-MDI	OSHA PEL	CLV 0.02 ppm 0.2 mg/m <sup>3</sup>
Diphenylmethane-4,4'-diisocyanate (MDI)	OSHA PEL	CLV 0.02 ppm 0.2 mg/m <sup>3</sup>

### Exposure Controls

<b>Respiratory Protection:</b>	Respiratory protection required in insufficiently ventilated working areas and during spraying. An air-fed mask, or for short periods of work, a combination of charcoal filter and particulate filter is recommended.
<b>Hand, eye, skin, body protection:</b>	Chemical resistant protective gloves should be worn to prevent all skin contact. Wear eye/face protection. Wear suitable protective clothing

## Section 9: Physical and Chemical Properties

### Basic chemical and physical properties

<b>Appearance:</b>	liquid	<b>Flammability</b>	not applicable
<b>Color</b>	dark amber	<b>Upper/lower flammability or explosive limits</b>	
<b>Odor</b>	earthy, musty	<b>Vapor pressure</b>	0.00016 mmHg
<b>Odor threshold</b>	not established	<b>Vapor density</b>	not established
<b>pH</b>	not established	<b>Relative density</b>	1.24
<b>Melting pt/freezing pt</b>	3° C	<b>Solubility(ies)</b>	Reacts with water
<b>Boiling pt/boiling range</b>	> 300° C	<b>Partition coefficient (n-octanol/water)</b>	not established
<b>Flash point</b>	> 250° C	<b>Auto-ignition temperature</b>	not applicable
<b>Evaporation rate</b>	not established	<b>Decomposition temperature</b>	not established

## Section 10: Stability and Reactivity

<b>Chemical stability:</b>	Polymerizes at about 200° C with evolution of CO <sub>2</sub>
<b>Possibility of hazardous reactions:</b>	Exothermic reaction with amines and alcohols; reacts with water forming CO <sub>2</sub> ; in closed containers, risk of bursting owing to increase of pressure
<b>Conditions to avoid:</b>	Avoid moisture
<b>Incompatible materials:</b>	water, alcohols, strong bases

Dalton, GA

Hickory, NC

Mount Airy, NC

Salt Lake City, UT

<b>Hazardous decomposition products:</b>	carbon monoxide, hydrogen cyanide, nitrogen oxides, aromatic isocyanates, gases/vapors
--	--

## Section 11: Toxicological Information

<b>Acute toxicity (inhalation):</b>	LC50: 490mg/kg , vapor, 4hr rat
<b>Chronic toxicity:</b>	2 years, inhalation; NOAEL: 0.2mg/m <sup>3</sup> , (rat, Male/Female, 6hrs/day 5 days/week)
<b>Likely routes of exposure:</b>	Skin, inhalation
<b>Symptoms related to physical, chemical and toxicological characteristics:</b>	Minor skin irritation; asthma-like symptoms
<b>Delayed and immediate effects and chronic effects from short and long-term exposure:</b>	Possible sensitization
<b>Numerical toxicity measures:</b>	

## Section 12: Ecological Information

<b>Ecotoxicity:</b>	LC0: >1,000mg/l (Zebra fish 96 hrs) LC0: >3,000mg.l (Killifish 96hrs)
<b>Persistence and degradability:</b>	0%
<b>Bioaccumulative potential:</b>	Does not bioaccumulate
<b>Mobility in soil:</b>	

## Section 13: Disposal

<b>Waste disposal:</b>	Incinerate or dispose of in a licensed facility. Do not discharge substance/product into sewer system. Do not burn empty drums or cut open with gas or an electric torch as toxic decomposition products may be liberated. Do not reuse empty containers.
------------------------	---

## Section 14: Transport

### Land transport

<b>USDOT</b>	Not classified as dangerous good
<b>China</b>	Not classified as dangerous good

### Sea transport

<b>IMDG</b>	Not classified as dangerous good
-------------	----------------------------------

### Air transport

<b>IATA/ICAO</b>	Not classified as dangerous good
------------------	----------------------------------

### Further information

DOT: This product is regulated if the amount in a single receptacle exceeds the Reportable Quantity (RQ). Refer to Section 15 for the RQ of this product.



Dalton, GA

Hickory, NC

Mount Airy, NC

Salt Lake City, UT

## Section 15: Regulatory

<b>Relevant safety, health, and environmental regulations:</b>	
<b>Inventory Status:</b>	TSCA listed
<b>US Regulations:</b>	Not regulated
<b>US Superfund Amendments and Reauthorization Act (SARA) Title III Section 313 information:</b>	Methylene Bis Phenylisocyanate 101-68-8 5000 lbs. See SDS – A Component (Same as Diphenylmethane diisocyanate (MDI) Polymeric Diphenylmethane diisocyanate 9016-87-9 See SDS – A Component

## Section 16: Other

<b>SDS Preparation Date:</b>	06/26/2014
<b>Revision Date:</b>	

### IMPORTANT NOTICES

This notification is a part of the Safety Data Sheet document and must not be detached. Any copying and redistribution of the Safety Data Sheet shall include copying of this notice and attaching the copy to the redistributed Safety Data Sheet copies.

This information is furnished without warranty, expressed, or implied, except that it is accurate to the best knowledge of NCFI. The data on this sheet relates only to the specific material designated herein. NCFI assumes no legal responsibility for use or reliance upon these data.



## SAFETY DATA SHEET

### Evercoat EC

According to Appendix D, OSHA Hazard Communication Standard 29 CFR §1910.1200

#### 1. Identification

##### Product identifier

**Product name** Evercoat EC

##### Recommended use of the chemical and restrictions on use

**Application** Coating.

**Uses advised against** No specific uses advised against are identified.

##### Details of the supplier of the safety data sheet

**Manufacturer** Everest Systems  
1926 Rankin Road #110  
Houston, TX 77073  
USA  
T: 800.575.8966  
E: inquiries@everestsystemsco.com

##### Emergency telephone number

**Emergency telephone** 832.922.2926

#### 2. Hazard(s) identification

##### Classification of the substance or mixture

**OSHA Regulatory Status** This Product is Hazardous under the OSHA Hazard Communication Standard.

**Physical hazards** Not Classified

**Health hazards** Carc. 1A - H350

##### Label elements

##### Pictogram



**Signal word** Danger

**Hazard statements** H350 May cause cancer.

**Precautionary statements** P201 Obtain special instructions before use.  
P202 Do not handle until all safety precautions have been read and understood.  
P280 Wear protective gloves/ protective clothing/ eye protection/ face protection.  
P308+P313 If exposed or concerned: Get medical advice/ attention.  
P405 Store locked up.  
P501 Dispose of contents/ container in accordance with national regulations.

**Contains** Titanium Dioxide, Quartz (SiO<sub>2</sub>), Biocide - withheld as TRADE SECRET

##### Other hazards

This product does not contain any substances classified as PBT or vPvB.

#### 3. Composition/information on ingredients

##### Mixtures



## Evercoat EC

<b>Limestone</b> CAS number: 1317-65-3	<b>10 - &lt;50%</b>
<b>Titanium Dioxide</b> CAS number: 13463-67-7	<b>1 - &lt;15%</b>
<b>Zinc oxide</b> CAS number: 1314-13-2	<b>0 - &lt;5%</b>
<b>Aluminum hydroxide</b> CAS number: 21645-51-2	<b>0 - &lt;15%</b>
<b>Quartz (SiO<sub>2</sub>)</b> CAS number: 14808-60-7	<b>&lt;1%</b>
<b>Ammonia</b> CAS number: 1336-21-6	<b>&lt;1%</b>
<b>Biocide - withheld as TRADE SECRET</b> CAS number: Proprietary	<b>&lt;1%</b>
<b>Kaolin</b> CAS number: 1332-58-7	<b>&lt;1%</b>

**Composition comments**      The exact percentage is withheld as a trade secret in accordance with 29 CFR 1910.1200.  
The product identifiers are withheld as a trade secret in accordance with 29 CFR 1910.1200.

#### 4. First-aid measures

##### Description of first aid measures

<b>General information</b>	Get medical attention if any discomfort continues. Show this Safety Data Sheet to the medical personnel.
<b>Inhalation</b>	Move affected person to fresh air and keep warm and at rest in a position comfortable for breathing. Maintain an open airway. Loosen tight clothing such as collar, tie or belt. Get medical attention if symptoms are severe or persist.
<b>Ingestion</b>	Rinse mouth thoroughly with water. Give a few small glasses of water or milk to drink. Stop if the affected person feels sick as vomiting may be dangerous. Do not induce vomiting unless under the direction of medical personnel. If vomiting occurs, the head should be kept low so that vomit does not enter the lungs. Never give anything by mouth to an unconscious person. Move affected person to fresh air and keep warm and at rest in a position comfortable for breathing. Place unconscious person on their side in the recovery position and ensure breathing can take place. Keep affected person under observation. Get medical attention if symptoms are severe or persist.
<b>Skin Contact</b>	Rinse with water.

## Evercoat EC

<b>Eye contact</b>	Rinse immediately with plenty of water. Do not rub eye. Remove any contact lenses and open eyelids wide apart. Continue to rinse for at least 10 minutes. Get medical attention if any discomfort continues.
<b>Protection of first aiders</b>	First aid personnel should wear appropriate protective equipment during any rescue.
<b><u>Most important symptoms and effects, both acute and delayed</u></b>	
<b>General information</b>	See Section 11 for additional information on health hazards. The severity of the symptoms described will vary dependent on the concentration and the length of exposure.
<b>Inhalation</b>	Prolonged inhalation of high concentrations may damage respiratory system. Prolonged or repeated exposure may cause the following adverse effects: May cause cancer.
<b>Ingestion</b>	Gastrointestinal symptoms, including upset stomach. Nausea, vomiting. Prolonged or repeated exposure may cause the following adverse effects: May cause cancer.
<b>Skin contact</b>	Redness. Irritating to skin. Prolonged or repeated exposure may cause the following adverse effects: May cause cancer.
<b>Eye contact</b>	May cause temporary eye irritation.
<b><u>Indication of immediate medical attention and special treatment needed</u></b>	
<b>Notes for the doctor</b>	Treat symptomatically.

### 5. Fire-fighting measures

#### Extinguishing media

<b>Suitable extinguishing media</b>	The product is not flammable. Extinguish with alcohol-resistant foam, carbon dioxide, dry powder or water fog. Use fire-extinguishing media suitable for the surrounding fire.
<b>Unsuitable extinguishing media</b>	Do not use water jet as an extinguisher, as this will spread the fire.

#### Special hazards arising from the substance or mixture

<b>Specific hazards</b>	Containers can burst violently or explode when heated, due to excessive pressure build-up.
<b>Hazardous combustion products</b>	Thermal decomposition or combustion products may include the following substances: Harmful gases or vapors.

#### Advice for firefighters

<b>Protective actions during firefighting</b>	Avoid breathing fire gases or vapors. Evacuate area. Keep upwind to avoid inhalation of gases, vapors, fumes and smoke. Ventilate closed spaces before entering them. Cool containers exposed to heat with water spray and remove them from the fire area if it can be done without risk. Cool containers exposed to flames with water until well after the fire is out. If a leak or spill has not ignited, use water spray to disperse vapors and protect men stopping the leak. Avoid discharge to the aquatic environment. Control run-off water by containing and keeping it out of sewers and watercourses. If risk of water pollution occurs, notify appropriate authorities.
<b>Special protective equipment for firefighters</b>	Wear positive-pressure self-contained breathing apparatus (SCBA) and appropriate protective clothing. Standard Firefighter's clothing including helmets, protective boots and gloves will provide a basic level of protection for chemical incidents.

### 6. Accidental release measures

#### Personal precautions, protective equipment and emergency procedures

## Evercoat EC

### Personal precautions

No action shall be taken without appropriate training or involving any personal risk. Keep unnecessary and unprotected personnel away from the spillage. Wear protective clothing as described in Section 8 of this safety data sheet. Follow precautions for safe handling described in this safety data sheet. Wash thoroughly after dealing with a spillage. Ensure procedures and training for emergency decontamination and disposal are in place. Do not touch or walk into spilled material.

### Environmental precautions

#### Environmental precautions

Avoid discharge into drains or watercourses or onto the ground. Avoid discharge to the aquatic environment. Large Spillages: Inform the relevant authorities if environmental pollution occurs (sewers, waterways, soil or air).

### Methods and material for containment and cleaning up

#### Methods for cleaning up

Wear protective clothing as described in Section 8 of this safety data sheet. Clear up spills immediately and dispose of waste safely. Approach the spillage from upwind.  
 Small Spillages: If the product is soluble in water, dilute the spillage with water and mop it up. Alternatively, or if it is not water-soluble, absorb the spillage with an inert, dry material and place it in a suitable waste disposal container.  
 Large Spillages: If leakage cannot be stopped, evacuate area. Flush spilled material into an effluent treatment plant, or proceed as follows. Contain and absorb spillage with sand, earth or other non-combustible material. Place waste in labeled, sealed containers. Clean contaminated objects and areas thoroughly, observing environmental regulations. The contaminated absorbent may pose the same hazard as the spilled material. Flush contaminated area with plenty of water.

Wash thoroughly after dealing with a spillage. Dangerous for the environment. Do not empty into drains. Dispose of waste to licensed waste disposal site in accordance with the requirements of the local Waste Disposal Authority.

#### Reference to other sections

For personal protection, see Section 8. See Section 11 for additional information on health hazards. See Section 12 for additional information on ecological hazards. For waste disposal, see Section 13.

## 7. Handling and storage

### Precautions for safe handling

#### Usage precautions

Read and follow manufacturer's recommendations. Wear protective clothing as described in Section 8 of this safety data sheet. Keep away from food, drink and animal feeding stuffs. Handle all packages and containers carefully to minimize spills. Keep container tightly sealed when not in use. Avoid the formation of mists. May cause cancer. Avoid discharge to the aquatic environment. Do not handle until all safety precautions have been read and understood. Do not handle broken packages without protective equipment. Do not reuse empty containers.

#### Advice on general occupational hygiene

Wash promptly if skin becomes contaminated. Take off contaminated clothing and wash before reuse. Wash contaminated clothing before reuse. Do not eat, drink or smoke when using this product. Wash at the end of each work shift and before eating, smoking and using the toilet. Change work clothing daily before leaving workplace.

### Conditions for safe storage, including any incompatibilities

#### Storage precautions

Store away from incompatible materials (see Section 10). Store in accordance with local regulations. Keep only in the original container. Keep container tightly closed, in a cool, well ventilated place. Keep containers upright. Protect containers from damage.

#### Storage class

Miscellaneous hazardous material storage.

## Evercoat EC

<b>Shelf-Life</b>	12 months
<b>Storage Temperature (Min-Max)</b>	1 °C (33.8 °F) - 49 °C (120.2 °F)

### Specific end uses(s)

**Specific end use(s)** The identified uses for this product are detailed in Section 1.

## 8. Exposure Controls/personal protection

### Control parameters

#### Occupational exposure limits

**Comments** The following constituents are the only constituents of the product which have a PEL, TLV or other recommended exposure limit. At this time, the other constituents have no known exposure limits.

#### **Limestone**

Long-term exposure limit (8-hour TWA): OSHA 5 mg/m<sup>3</sup> respirable fraction  
 Long-term exposure limit (8-hour TWA): OSHA 15 mg/m<sup>3</sup> total dust

#### **Titanium Dioxide**

Long-term exposure limit (8-hour TWA): ACGIH 10 mg/m<sup>3</sup>  
 A4  
 Long-term exposure limit (8-hour TWA): OSHA 15 mg/m<sup>3</sup> total dust

#### **Zinc oxide**

Long-term exposure limit (8-hour TWA): OSHA 5 mg/m<sup>3</sup> fume  
 Long-term exposure limit (8-hour TWA): OSHA 15 mg/m<sup>3</sup> total dust  
 Long-term exposure limit (8-hour TWA): ACGIH 2 mg/m<sup>3</sup> respirable fraction  
 Short-term exposure limit (15-minute): ACGIH 10 mg/m<sup>3</sup> respirable fraction  
 Long-term exposure limit (8-hour TWA): OSHA 5 mg/m<sup>3</sup> respirable fraction

#### **Aluminum hydroxide**

Long-term exposure limit (8-hour TWA): ACGIH 1 mg/m<sup>3</sup>  
 A4

#### **Quartz (SiO<sub>2</sub>)**

Long-term exposure limit (8-hour TWA): ACGIH 0.025 mg/m<sup>3</sup> respirable fraction  
 A2

#### **Ammonia**

Long-term exposure limit (8-hour TWA): ACGIH 25 ppm 17 mg/m<sup>3</sup>  
 Short-term exposure limit (15-minute): ACGIH 35 ppm 24 mg/m<sup>3</sup>  
 Long-term exposure limit (8-hour TWA): OSHA 50 ppm 35 mg/m<sup>3</sup>

#### **Biocide - withheld as TRADE SECRET**

Long-term exposure limit (8-hour TWA): ACGIH 10 mg/m<sup>3</sup>  
 A4

#### **Kaolin**

Long-term exposure limit (8-hour TWA): ACGIH 2 mg/m<sup>3</sup> respirable fraction  
 A4  
 Long-term exposure limit (8-hour TWA): OSHA 5 mg/m<sup>3</sup> respirable fraction  
 Long-term exposure limit (8-hour TWA): OSHA 15 mg/m<sup>3</sup> total dust

OSHA = Occupational Safety and Health Administration.  
 ACGIH = American Conference of Governmental Industrial Hygienists.  
 A4 = Not Classifiable as a Human Carcinogen.  
 A2 = Suspected Human Carcinogen.

## Evercoat EC

### Titanium Dioxide (CAS: 13463-67-7)

**Immediate danger to life and health** 5000 mg/m<sup>3</sup>

### Zinc oxide (CAS: 1314-13-2)

**Immediate danger to life and health** 500 mg/m<sup>3</sup>

### Silicon dioxide (CAS: 7631-86-9)

**Immediate danger to life and health** 3000 mg/m<sup>3</sup> 3000 mg/m<sup>3</sup>

### Quartz (SiO<sub>2</sub>) (CAS: 14808-60-7)

**Immediate danger to life and health** 50 mg/m<sup>3</sup> 25 mg/m<sup>3</sup>

### Ammonia (CAS: 1336-21-6)

**Immediate danger to life and health** 300 ppm

#### Exposure controls

##### Protective equipment



##### Appropriate engineering controls

Provide adequate ventilation. Ensure the ventilation system is regularly maintained and tested. Good general ventilation should be adequate to control worker exposure to airborne contaminants. Observe any occupational exposure limits for the product or ingredients.

##### Eye/face protection

Eyewear complying with an approved standard should be worn if a risk assessment indicates eye contact is possible. Personal protective equipment for eye and face protection should comply with OSHA 1910.133. Unless the assessment indicates a higher degree of protection is required, the following protection should be worn: Tight-fitting safety glasses. If inhalation hazards exist, a full-face respirator may be required instead.

##### Hand protection

Chemical-resistant, impervious gloves complying with an approved standard should be worn if a risk assessment indicates skin contact is possible. The most suitable glove should be chosen in consultation with the glove supplier/manufacturer, who can provide information about the breakthrough time of the glove material. To protect hands from chemicals, gloves should comply with OSHA 1910.138 and be demonstrated to be impervious to the chemical and resist degradation. Considering the data specified by the glove manufacturer, check during use that the gloves are retaining their protective properties and change them as soon as any deterioration is detected. Frequent changes are recommended.

##### Other skin and body protection

Appropriate footwear and additional protective clothing complying with an approved standard should be worn if a risk assessment indicates skin contamination is possible.

##### Hygiene measures

Wash after use and before eating, smoking and using the toilet. Do not eat, drink or smoke when using this product.

## Evercoat EC

<b>Respiratory protection</b>	Respiratory protection complying with an approved standard should be worn if a risk assessment indicates inhalation of contaminants is possible. Ensure all respiratory protective equipment is suitable for its intended use and is NIOSH approved. Check that the respirator fits tightly and the filter is changed regularly. Gas and combination filter cartridges should comply with OSHA 1910.134. Full face mask respirators with replaceable filter cartridges should comply with OSHA 1910.134. Half mask and quarter mask respirators with replaceable filter cartridges should comply with OSHA 1910.134.
<b>Environmental exposure controls</b>	Keep container tightly sealed when not in use. Emissions from ventilation or work process equipment should be checked to ensure they comply with the requirements of environmental protection legislation. In some cases, fume scrubbers, filters or engineering modifications to the process equipment will be necessary to reduce emissions to acceptable levels.

### 9. Physical and Chemical Properties

#### Information on basic physical and chemical properties

<b>Appearance</b>	Liquid.
<b>Color</b>	Various colors.
<b>Odor</b>	Mild. Amine.
<b>Odor threshold</b>	Not available.
<b>pH</b>	Not available.
<b>Melting point</b>	0°C (as water)
<b>Initial boiling point and range</b>	100°C (boiling point of water)
<b>Evaporation rate</b>	Not available.
<b>Upper/lower flammability or explosive limits</b>	Not available.
<b>Vapor pressure</b>	17 mm Hg @ 20°C/68°F
<b>Vapor density</b>	Not available.
<b>Relative density</b>	Not available.
<b>Specific Gravity</b>	1.2 - 1.5
<b>Partition coefficient</b>	Not available.
<b>Auto-ignition temperature</b>	Not available.
<b>Decomposition Temperature</b>	Not available.
<b>Viscosity</b>	Not available.
<b>Explosive properties</b>	Not available.
<b>Oxidizing properties</b>	Not available.
<b>Volatile organic compound</b>	< 50 g/liter

### 10. Stability and reactivity

<b>Reactivity</b>	See the other subsections of this section for further details.
<b>Stability</b>	Stable at normal ambient temperatures and when used as recommended. Stable under the prescribed storage conditions.

## Evercoat EC

<b>Possibility of hazardous reactions</b>	No potentially hazardous reactions known.
<b>Conditions to avoid</b>	There are no known conditions that are likely to result in a hazardous situation.
<b>Materials to avoid</b>	No specific material or group of materials is likely to react with the product to produce a hazardous situation.
<b>Hazardous decomposition products</b>	Does not decompose when used and stored as recommended. Thermal decomposition or combustion products may include the following substances: Harmful gases or vapors.

### 11. Toxicological information

#### Information on toxicological effects

##### Acute toxicity - oral

**Notes (oral LD<sub>50</sub>)** Based on available data the classification criteria are not met.

##### Acute toxicity - dermal

**Notes (dermal LD<sub>50</sub>)** Based on available data the classification criteria are not met.

##### Acute toxicity - inhalation

**Notes (inhalation LC<sub>50</sub>)** Based on available data the classification criteria are not met.

##### Skin corrosion/irritation

**Skin corrosion/irritation** Based on available data the classification criteria are not met.

##### Serious eye damage/irritation

**Serious eye damage/irritation** Based on available data the classification criteria are not met.

##### Respiratory sensitization

**Respiratory sensitization** Based on available data the classification criteria are not met.

##### Skin sensitization

**Skin sensitization** Based on available data the classification criteria are not met.  
The product contains a small amount of sensitizing substance. May cause skin sensitization or allergic reactions in sensitive individuals.

##### Germ cell mutagenicity

**Genotoxicity - in vitro** Based on available data the classification criteria are not met.

**Genotoxicity - in vivo** Based on available data the classification criteria are not met.

##### Carcinogenicity

**Carcinogenicity** May cause cancer.

##### IARC carcinogenicity

Contains a substance/a group of substances which may cause cancer. IARC Group 1 Carcinogenic to humans.

##### NTP carcinogenicity

Contains: Silica, Crystalline (Respirable Size) Known human carcinogen.

##### Reproductive toxicity

**Reproductive toxicity - fertility** Based on available data the classification criteria are not met.

**Reproductive toxicity - development** Based on available data the classification criteria are not met.

##### Specific target organ toxicity - single exposure

**STOT - single exposure** Not classified as a specific target organ toxicant after a single exposure.

## Evercoat EC

### Specific target organ toxicity - repeated exposure

**STOT - repeated exposure** Not classified as a specific target organ toxicant after repeated exposure.

### Aspiration hazard

**Aspiration hazard** Based on available data the classification criteria are not met.

### **General information**

May cause cancer after repeated exposure. Risk of cancer depends on duration and level of exposure. The severity of the symptoms described will vary dependent on the concentration and the length of exposure.

### **Inhalation**

Prolonged inhalation of high concentrations may damage respiratory system.

### **Ingestion**

Gastrointestinal symptoms, including upset stomach. Fumes from the stomach contents may be inhaled, resulting in the same symptoms as inhalation.

### **Skin Contact**

Prolonged contact may cause dryness of the skin. Discoloration of the skin.

### **Eye contact**

May cause temporary eye irritation.

### **Route of entry**

Ingestion Inhalation Skin and/or eye contact

### **Target Organs**

No specific target organs known.

## 12. Ecological Information

### **Toxicity**

The product contains a substance which is very toxic to aquatic organisms and which may cause long-term adverse effects in the aquatic environment.

### Persistence and degradability

**Persistence and degradability** The degradability of the product is not known.

### Bioaccumulative potential

**Bio-Accumulative Potential** No data available on bioaccumulation.

### **Partition coefficient**

Not available.

### Mobility in soil

### **Mobility**

No data available.

### Other adverse effects

**Other adverse effects** None known.

## 13. Disposal considerations

### Waste treatment methods

### **General information**

The generation of waste should be minimized or avoided wherever possible. Reuse or recycle products wherever possible. This material and its container must be disposed of in a safe way. Disposal of this product, process solutions, residues and by-products should at all times comply with the requirements of environmental protection and waste disposal legislation and any local authority requirements. When handling waste, the safety precautions applying to handling of the product should be considered. Care should be taken when handling emptied containers that have not been thoroughly cleaned or rinsed out. Empty containers or liners may retain some product residues and hence be potentially hazardous.



## Evercoat EC

**Disposal methods** Do not empty into drains. Dispose of surplus products and those that cannot be recycled via a licensed waste disposal contractor. Waste, residues, empty containers, discarded work clothes and contaminated cleaning materials should be collected in designated containers, labeled with their contents. Incineration or landfill should only be considered when recycling is not feasible.

### 14. Transport information

**General** The product is not covered by international regulations on the transport of dangerous goods (IMDG, IATA, DOT).

**UN Number**

Not applicable.

**UN proper shipping name**

Not applicable.

**Transport hazard class(es)**

**DOT transport labels**

No transport warning sign required.

**Transport labels**

No transport warning sign required.

**Packing group**

Not applicable.

**Environmental hazards**

**Environmentally Hazardous Substance**

No.

**Special precautions for user**

Not applicable.

**DOT TIH Zone**

Not applicable.

**Transport in bulk according to Annex II of MARPOL 73/78 and the IBC Code** Not applicable.

### 15. Regulatory information

**Regulatory References**

OSHA Hazard Communication Standard 29 CFR §1910.1200

**US Federal Regulations**

**SARA Section 302 Extremely Hazardous Substances Tier II Threshold Planning Quantities**

None of the ingredients are listed or exempt.

**CERCLA/Superfund, Hazardous Substances/Reportable Quantities (EPA)**

The following ingredients are listed or exempt:

*Ammonia*

Final CERCLA RQ: 1000(454) pounds (Kilograms)

*methyl benzimidazol-2-yl carbamate*

Final CERCLA RQ: 10(4.54) pounds (Kilograms)

## Evercoat EC

*Biocide - withheld as TRADE SECRET*

Final CERCLA RQ: 100(45.4) pounds (Kilograms)

### **SARA Extremely Hazardous Substances EPCRA Reportable Quantities**

None of the ingredients are listed or exempt.

### **SARA 313 Emission Reporting**

The following ingredients are listed or exempt:

*Ammonia*

1.0 %

*Zinc oxide*

1.0 %

*Biocide - withheld as TRADE SECRET*

1.0 %

*Biocide - withheld as TRADE SECRET*

1.0 %

### **CAA Accidental Release Prevention**

None of the ingredients are listed or exempt.

### **FDA - Essential Chemical**

None of the ingredients are listed or exempt.

### **FDA - Precursor Chemical**

None of the ingredients are listed or exempt.

### **SARA (311/312) Hazard Categories**

None of the ingredients are listed or exempt.

### **OSHA Highly Hazardous Chemicals**

None of the ingredients are listed or exempt.

### **US State Regulations**

#### **California Proposition 65 Carcinogens and Reproductive Toxins**

The following ingredients are listed or exempt:

*Benzophenone*

Known to the State of California to cause cancer.

*Silicon dioxide*

Known to the State of California to cause cancer.

*Titanium Dioxide*

Known to the State of California to cause cancer.

*Biocide - withheld as TRADE SECRET*

Known to the State of California to cause cancer.

#### **California Air Toxics "Hot Spots" (A-I)**

The following ingredients are listed or exempt:

*Silicon dioxide*

*Zinc oxide*

#### **California Air Toxics "Hot Spots" (A-II)**

None of the ingredients are listed or exempt.

## Evercoat EC

### California Directors List of Hazardous Substances

The following ingredients are listed or exempt:

*Ammonia*

*Silicon dioxide*

*Zinc oxide*

*Biocide - withheld as TRADE SECRET*

### Massachusetts "Right To Know" List

The following ingredients are listed or exempt:

*Ammonia*

*Limestone*

*Quartz (SiO<sub>2</sub>)*

*Silicon dioxide*

*Titanium Dioxide*

*Zinc oxide*

*Biocide - withheld as TRADE SECRET*

*Kaolin*

### Rhode Island "Right To Know" List

The following ingredients are listed or exempt:

*Limestone*

*Quartz (SiO<sub>2</sub>)*

*Titanium Dioxide*

*Zinc oxide*

*Propane-1,2-diol*

*Biocide - withheld as TRADE SECRET*

*Kaolin*

### Minnesota "Right To Know" List

The following ingredients are listed or exempt:

*Benzophenone*

*Limestone*

*Quartz (SiO<sub>2</sub>)*

*Silicon dioxide*

*Titanium Dioxide*

*Zinc oxide*

*Propane-1,2-diol*

*Biocide - withheld as TRADE SECRET*

*Kaolin*

### New Jersey "Right To Know" List

The following ingredients are listed or exempt:

*Ammonia*

*Limestone*

*Quartz (SiO<sub>2</sub>)*

## Evercoat EC

*Titanium Dioxide*

*Zinc oxide*

*Propane-1,2-diol*

*Biocide - withheld as TRADE SECRET*

*methyl benzimidazol-2-yl carbamate*

*Biocide - withheld as TRADE SECRET*

*Kaolin*

### Pennsylvania "Right To Know" List

The following ingredients are listed or exempt:

*Ammonia*

*Limestone*

*Quartz (SiO<sub>2</sub>)*

*Silicon dioxide*

*Titanium Dioxide*

*Zinc oxide*

*Propane-1,2-diol*

*Biocide - withheld as TRADE SECRET*

*Kaolin*

### Inventories

#### US - TSCA

All the ingredients are listed or exempt.

#### US - TSCA 12(b) Export Notification

The following ingredients are listed or exempt:

*Benzophenone*

**Note:** Based on information provided by our suppliers, this product is considered "DRC Conflict Free" as defined by the SEC Conflict Minerals Final Rule (Release No. 34-67716; File No. S7-40-10; Date: 2012-08-22).

### 16. Other information

**Classification abbreviations and acronyms**      Carc. = Carcinogenicity

**Training advice**      Read and follow manufacturer's recommendations. Only trained personnel should use this material.

**Revision date**      4/3/2017

**Revision**      2

**Supersedes date**      6/30/2016

**SDS No.**      5533

**Hazard statements in full**      H350 May cause cancer.

This information relates only to the specific material designated and may not be valid for such material used in combination with any other materials or in any process. Such information is, to the best of the company's knowledge and belief, accurate and reliable as of the date indicated. However, no warranty, guarantee or representation is made to its accuracy, reliability or completeness. It is the user's responsibility to satisfy himself as to the suitability of such information for his own particular use.



## RECEIVING, INSPECTING AND UNLOADING YOUR TANK

- ✓ Do not drop or roll a tank off a truck onto the ground. Please see information below for proper unloading instructions.
- ✓ Upon arrival at the destination, the purchaser and/or his agent shall be responsible for inspection for damage in transit. If tanks are shrink wrapped for shipment they must be unwrapped and inspected for damage prior to signed the bill of lading. If damage has occurred or parts are missing, the purchaser should document this on the bill of lading, file a claim with the carrier, and notify the manufacturer prior to putting the tank into service.
- ✓ Verify that the tank part number on the packing slip matches the tank bar code being delivered.
- ✓ Please match tank components to bill of lading. Some tank components may be shipped inside the tank. Remove any components shipped inside the tank before putting the tank into a vertical position. Loose items that are installed inside the tank can be fitted up before the tank is put into a vertical position.

## TANK UNLOADING

### HORIZONTAL TANKS


- ✓ Tanks shall be shrink-wrapped if ordered. Snyder Industries strongly recommends protective wrap packaging to reduce the chance of damage to the tank during transportation. Snyder is not responsible for damage caused during freight that is a result of failure to order protective shrink wrap packaging.
- ✓ Tanks should be hand carried, moved with a handling cart, or moved with a forklift with protected or rounded fork extensions (to prevent sharp forks from damaging tanks and to provide adequate support for the tank as it is being moved).
- ✓ Tanks should be loaded and unloaded from a horizontal position in the truck with a minimal amount of sliding. The tank shall be hand carried, moved with a handling cart, or moved with a forklift with protected or rounded fork extensions to minimize sliding.
- ✓ Tanks should be loaded or unloaded from a dock of proper height or with a forklift with protected or rounded fork extensions. **NEVER drop or roll a tank off of a truck onto the ground since this may damage the tank and void the warranty.**

### SMALL VERTICAL and CONE BOTTOM TANKS (< 2000 GALLON CAPACITY)

- ✓ Tanks shall be shrink-wrapped if ordered. Snyder Industries strongly recommends protective wrap packaging to reduce the chance of damage to the tank during transportation. Snyder is not responsible for damage caused during freight that is a result of failure to order protective shrink wrap packaging.
- ✓ Tanks should be hand carried, moved with a handling cart, or moved with a forklift with protected or rounded fork extensions (to prevent sharp forks from damaging tanks and to provide adequate support for the tank as it is being moved).
- ✓ Tanks should be loaded and unloaded from a horizontal or vertical position in the truck with a minimal amount of sliding. The tank shall be hand carried, moved with a handling cart, or moved with a forklift with protected or rounded fork extensions to minimize sliding.
- ✓ Tanks should be loaded or unloaded from a dock of proper height or with a forklift with protected or rounded fork extensions. **NEVER drop or roll a tank off of a truck onto the ground since this may damage the tank and void the warranty.**


## LARGE VERTICAL & CONE BOTTOM TANKS (≥ 2000 GALLON CAPACITY)

- ✓ Tanks shall be shrink-wrapped if ordered. Snyder Industries strongly recommends protective wrap packaging to reduce the chance of damage to the tank during transportation. Snyder is not responsible for damage caused during freight that is a result of failure to order protective shrink wrap packaging.
- ✓ Tanks should be moved, loaded, and unloaded in a horizontal position with a forklift with protected or rounded fork extensions, or with a crane with a spreader bar and 2 slings of appropriate size positioned on each tank as shown below. **NEVER drop or roll a tank off of a truck onto the ground since this may damage the tank and void the tank warranty.**

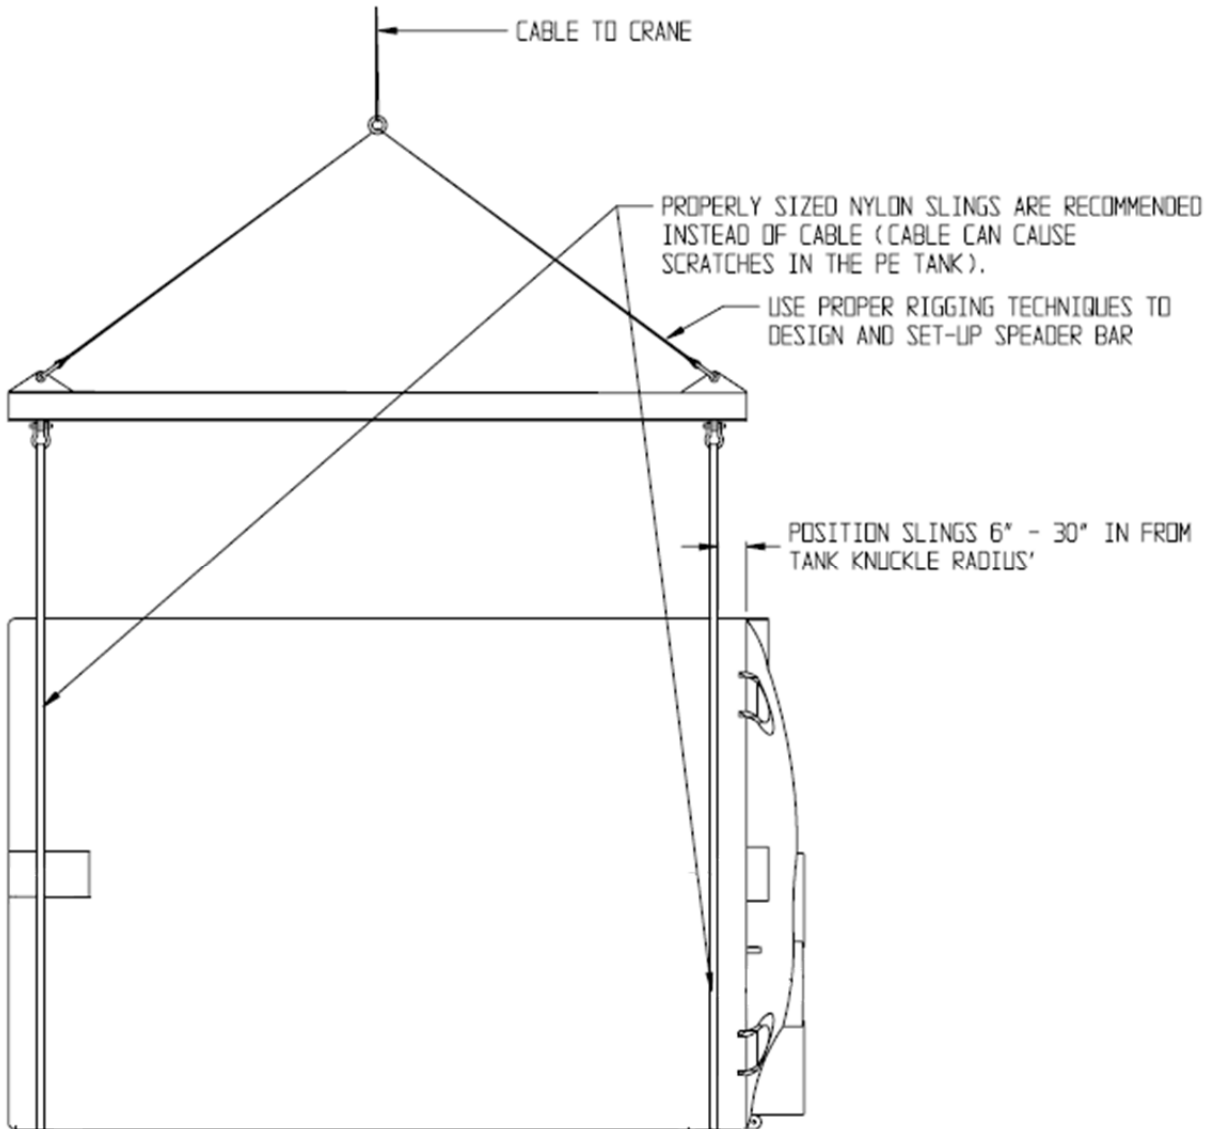

- ✓ Tank lifting lugs are intended for moving the tank from a horizontal position to a vertical position from a firm surface. **Lifting lugs should not be used to load or unload tanks from trailers. This is a dangerous situation since the tank could roll off of the shifting trailer surface as the load is being moved.**

- ✓ After the tank has been placed on a firm, level surface in a horizontal position, the lifting lugs may be used to erect the tank in a vertical position on an appropriate support pad. The tank should be lifted using a symmetrical arrangement of lugs to disperse the load evenly throughout the tank. To properly attach to the lifting lugs a straight clevis should be used with a minimum open throat distance of 1-1/2" and 1" diameter pins. A minimum of 4 lugs should be attached with equal length cables on all large vertical tank sizes except 142" diameter tanks. 142" diameter tanks require 3 lugs to be attached. All tanks should be positioned with 2 lugs closest to the ground prior to lifting the tank to the vertical position. Refer to the figure below for additional information. If the tank does not have lifting lugs, it may be necessary to rig the tank with slings or use a pipe and chain through the tank manway to upright the tank. Please contact the factory for additional information as necessary.

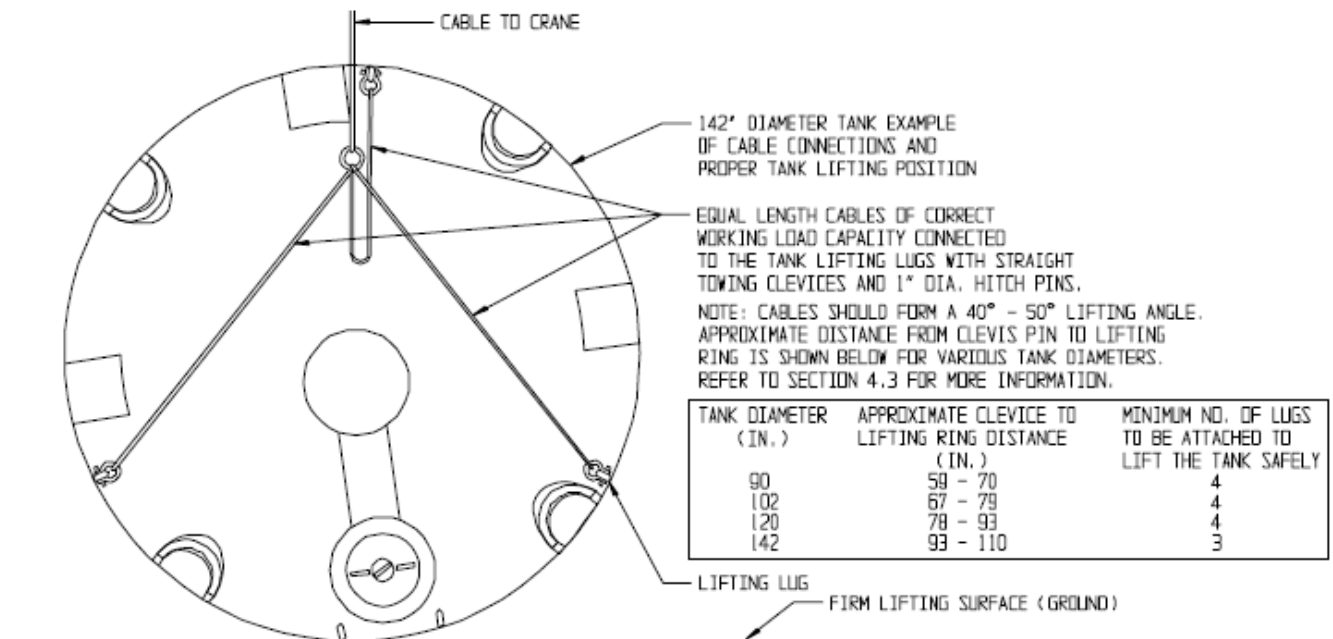


#### INSULATED TANKS (ADDITIONAL INSTRUCTIONS)

- ✓ Insulated tanks must be moved with devices that have large padded contact surfaces to prevent damage to the foam insulation. **NEVER allow the tank to drop or roll on rough surfaces as this may damage the foam insulation.** When transporting or moving foam insulated tanks, use minimum 4" wide nylon straps and slings to secure the tank. This will assist in decreasing the stress damage on the foam caused by the narrow straps.

#### CAPTOR CONTAINMENT TANKS (ADDITIONAL INSTRUCTIONS)

- ✓ Captor containment tanks are shipped assembled (primary tank inside of containment tank) with a shipping cable assembly holding the two tanks together. Lift and position the tank as per previous instructions. Once the tank is in position, remove the shipping cables from the tank. Do not leave the shipping cables under the tank. Should a Captor containment tank need to be moved again, the tank would need to be completely drained and the shipping cables would need to be re-attached prior to movement.


SIGHT GLASS ASSEMBLY

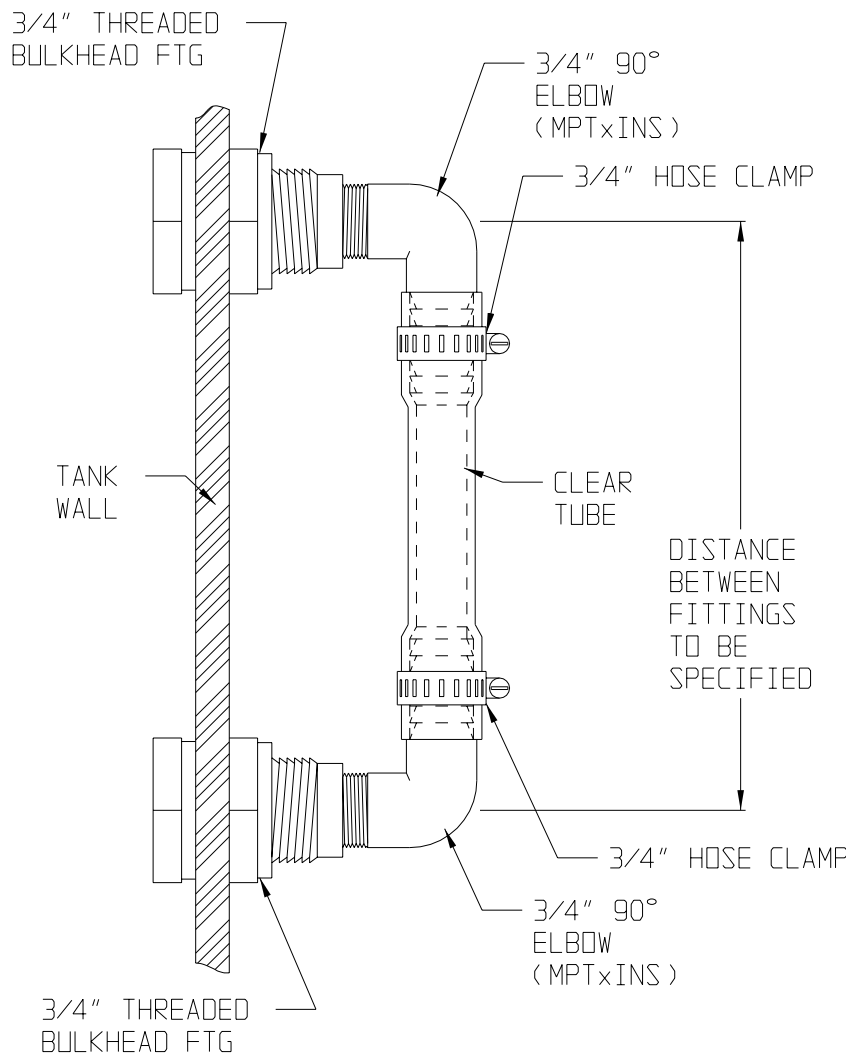

ASSEMBLY PART NUMBERS:


FTG MAT'L	GASKET MATERIAL		ACCESSORIES	
	EPDM	VITON	VALVE	DRAIN VALVE
PVC	347198	347362	347365	347366
CPVC	N/A	347973	347975	347976

VALVE ASSEMBLY

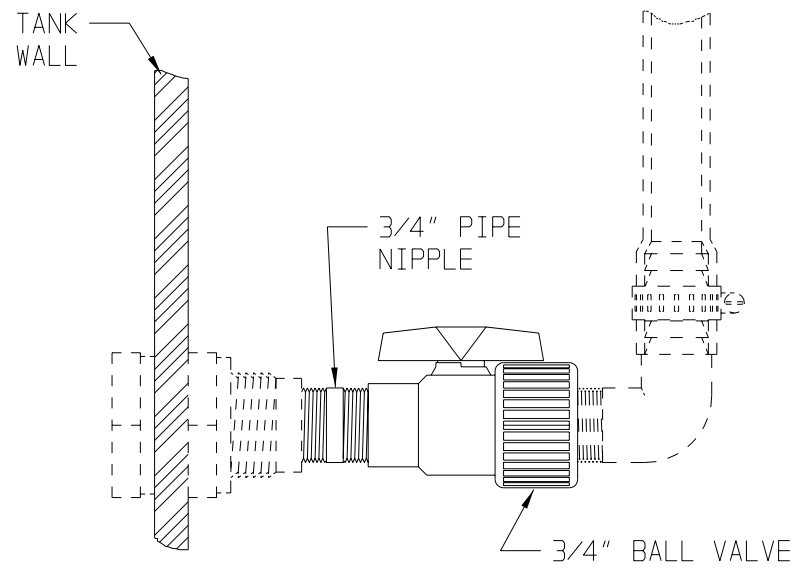

NOTE:  
PART# DOES NOT INCLUDE FTG,  
ELBOW, CLAMP OR TUBING.

DRAIN VALVE ASSEMBLY W/TEE

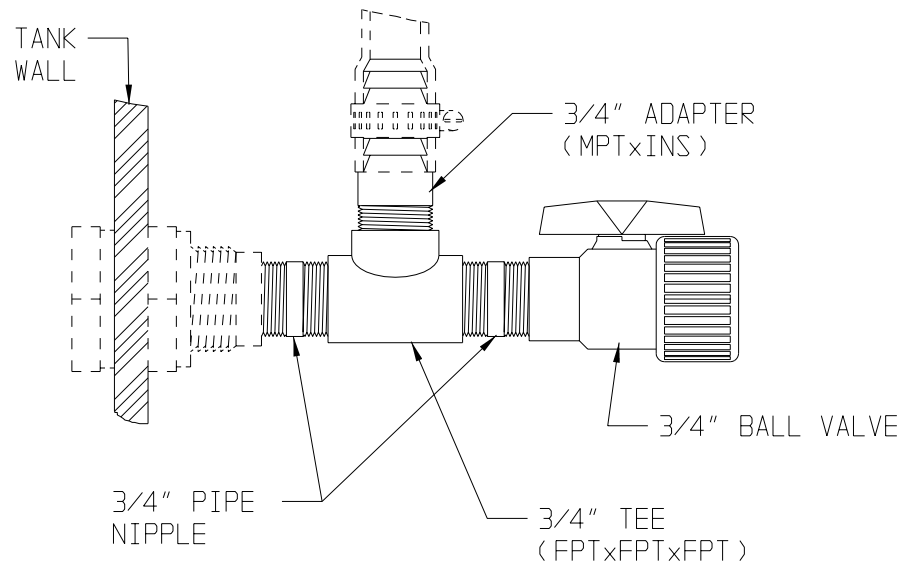

NOTE:  
PART# DOES NOT INCLUDE FTG,  
ELBOW, CLAMP OR TUBING.





# Product Data Sheet

## Sii-PE945N High Density Polyethylene Rotational Molding Resin

### Description:

Sii-PE945N is a high density linear polyethylene resin with UV stabilization designed to offer superior toughness and stiffness. This resin is ideally suited for applications that require the optimum balance of toughness, creep resistance and stiffness. It is excellent for use in industrial applications for hazardous chemical and water treatment chemical storage containers.

Sii-PE945N is available in natural and black colors.

### MECHANICAL PROPERTIES:

<u>Property</u>	<u>Test Method</u>	<u>Unit</u>	<u>Value</u>
Density (resin)	ASTM D1505	g/cc	0.940-0.950
Tensile Strength at Yield 2.0"/min	ASTM D638	psi	3000-3500
Elongation at Break 2.0"/min	ASTM D638	%	>400
Flexural Modulus	ASTM D790	psi	145,000

### FEATURES:

- Excellent long-term property retention in the presence of strong oxidizers
- NSF/ANSI 61 Certified
- Food, Drug and Cosmetic Act Compliant

Data presented is based upon tests performed on representative samples. Users must make independent assessment of product performance under their given field requirements and conditions.





6940 "O" Street, Suite 100 • Lincoln, Nebraska 68510 • (402) 467-5221 • FAX (402) 465-1220

---

## TANK INSPECTIONS

To maintain safe storage of chemicals and proactively detect cracks and other storage tank stress points that could develop into potential leaks or spills, a comprehensive annual chemical storage tank inspection is strongly recommended. Even if the polyethylene tank is relatively new, a routine and careful visual inspection is suggested.

Below is an annual tank inspection checklist. Follow these steps and conduct a storage tank inspection at least annually to ensure the safety of personnel and the preservation of the chemical stored. Whenever indications or signs of stress cracking, crazing, or embrittlement are discovered, the chemical storage tank should be replaced.


### Please note:

- **Safety First!** – Always use proper PPE (Personal Protective Equipment) when working with or around chemicals to minimize exposure to hazards that may cause injuries or illness. PPE may include items such as gloves, safety glasses and shoes, earplugs, hard hats, respirators, coveralls, vests or full body suits.
- Chemical fumes may be present in the area of the manway opening or vents.
- A tank is a confined space. Do not enter a tank without a confined space entry and retrieval plan.
- Always use lift equipment and/or fall protection to prevent a fall into or away from the tank.
- Do not stand or work on top of the tank. Domed surfaces are flexible and slippery and the top of the tank may also be embrittled.
- See [Snyder's Guidelines for Use and Installation](#) for proper tank installation instructions.



## Tank Inspection Check List

- A first step is to empty the storage tank. Any chemicals remaining must be neutralized. The outside and inside of the tank must be completely and thoroughly cleaned. It's impossible to properly inspect a dirty tank.
- Environmental stress cracking, crazing and brittle appearance are the first indications of tank leaks. Examine the tank to pinpoint these signs. See [Snyder's Tank and IBC Inspection Guide](#) for more information on how to check for stress cracking caused by chemicals, handling above and environmental degradation.
- The areas around fittings and where sidewall and bottom meet are the areas of storage tanks that typically show first signs of weakness. Pay close attention to these areas of the tank in your inspection.
- Inspecting the interior of the storage tank is crucial because cracks typically start on the inside of the tank. Inspecting the inside of the tank is always challenging since it's usually not possible to physically enter the inside of the storage tank. Use a high powered, bright light to thoroughly examine the inside of the tank from the manway opening.
- The dome of a chemical storage tank can become brittle from chemical fume exposure. Because the tank vent emits chemical fumes, oxidation can occur. Carefully inspect the dome and all areas of the tank that do not come in direct contact with chemicals but are exposed to fumes and potential oxidation breakdown.



- Fittings, hoses, gaskets, and all connections. All storage tank fittings, flexible connection hoses, and gaskets must be carefully inspected to detect any signs of general corrosion or deterioration and leaks. Any defective fitting, hose, or gasket must be replaced immediately. Tanks should not be rigidly piped. See [Snyder's Guidelines for Use and Installation](#) for more information on flexible connection requirements for tank connections to allow for tank expansion/contraction that results in axial compression and angular and lateral deflection.

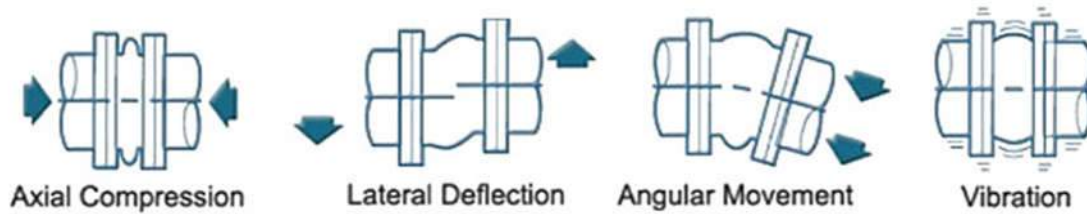

- Adequate venting for pressure and vacuum is essential in all chemical storage tanks. Check the vents and scrubber piping and make sure they are functioning and sized properly. Polyethylene tanks are designed for atmospheric pressure only.
- Confirm that filling of the tank from tanker trucks is not causing over pressurization and not ending with a surge of air that can pressurize and expand the tank. Polyethylene tanks are designed for atmospheric pressure only.
- Is the secondary containment of the chemical storage tank appropriate for chemical stored, adequate in size, and in good condition? In the event of a leak or spill, will the secondary containment function to minimize the risk of contamination?
- Is the tank sitting on a suitable level concrete pad and is the pad in good shape and providing 100% support of the bottom of the tank. If it is a Snyder tank with a molded in SUMO Full drain outlet is the pad notched just beyond the SUMO location. See [Snyder's Guidelines for Use and Installation](#) for more information on tank foundation requirements.

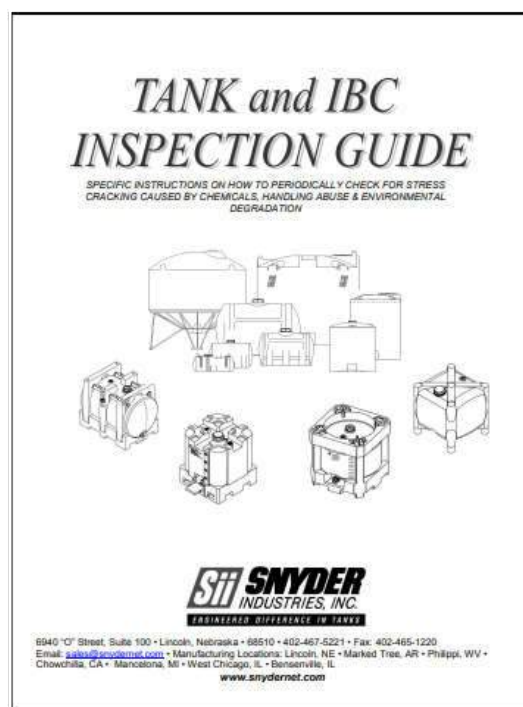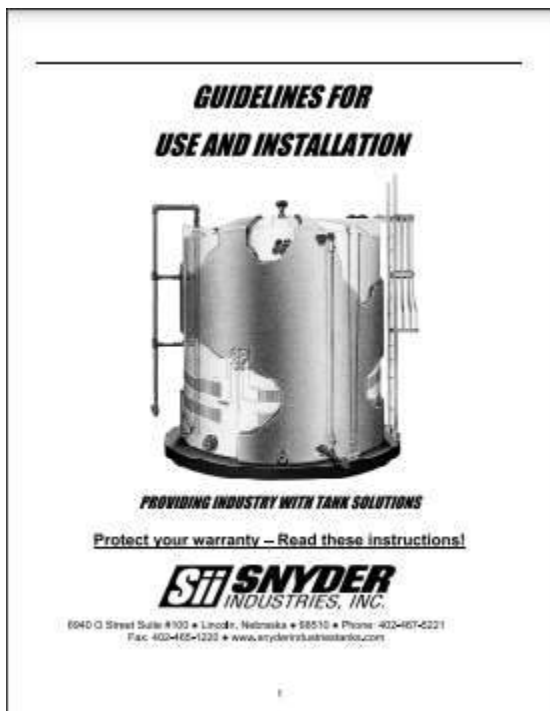

(all dimensions in inches)

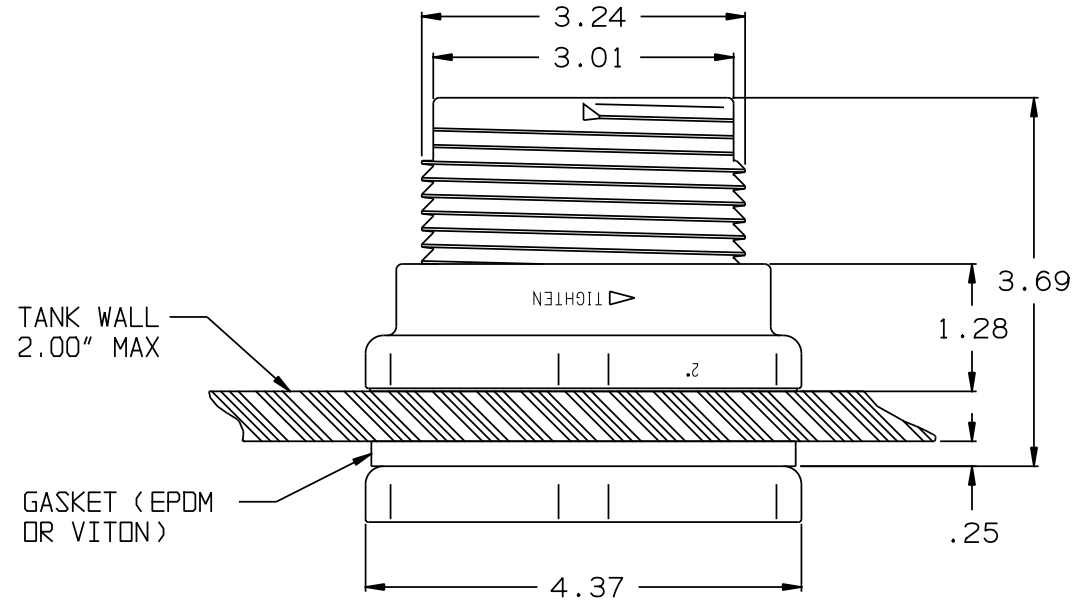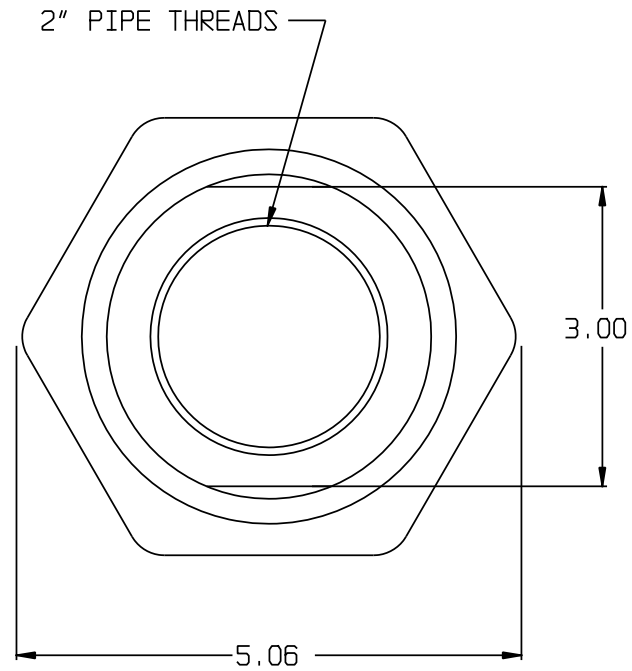


MATERIAL	EPDM	VITON	STYLE
PVC	34200015	34700238	SOCxTHD
CPVC	34400119	34700753	SOCxTHD
PP	34100051	34700171	THDxTHD



## 2" THREADED BULKHEAD STYLE FITTINGS

SNYDER INDUSTRIES INC.

SOCKET x SOCKET ELBOW      SOCKET x SPIGOT STREET ELBOW

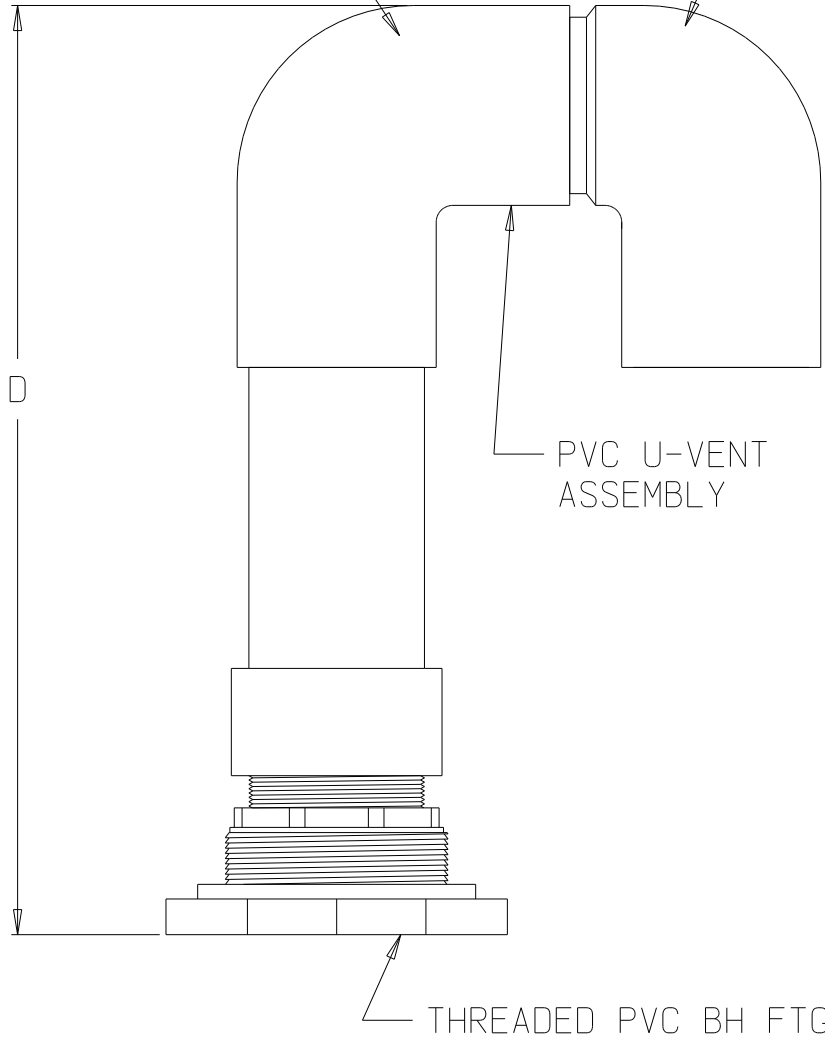

SIZE	GASKET MATERIAL	PART #	HEIGHT (D)
1"	EPDM	34700257	11 1/2"
1"	VITON	34700261	11 1/2"
2"	EPDM	34700258	13"
2"	VITON	34700262	13"
3"	EPDM	34700259	15 3/4"
3"	VITON	34700263	15 3/4"
4"	EPDM	34700260	17 3/4"
4"	VITON	34700264	17 3/4"
6"	EPDM	34701395	25"
6"	VITON	34701396	25"

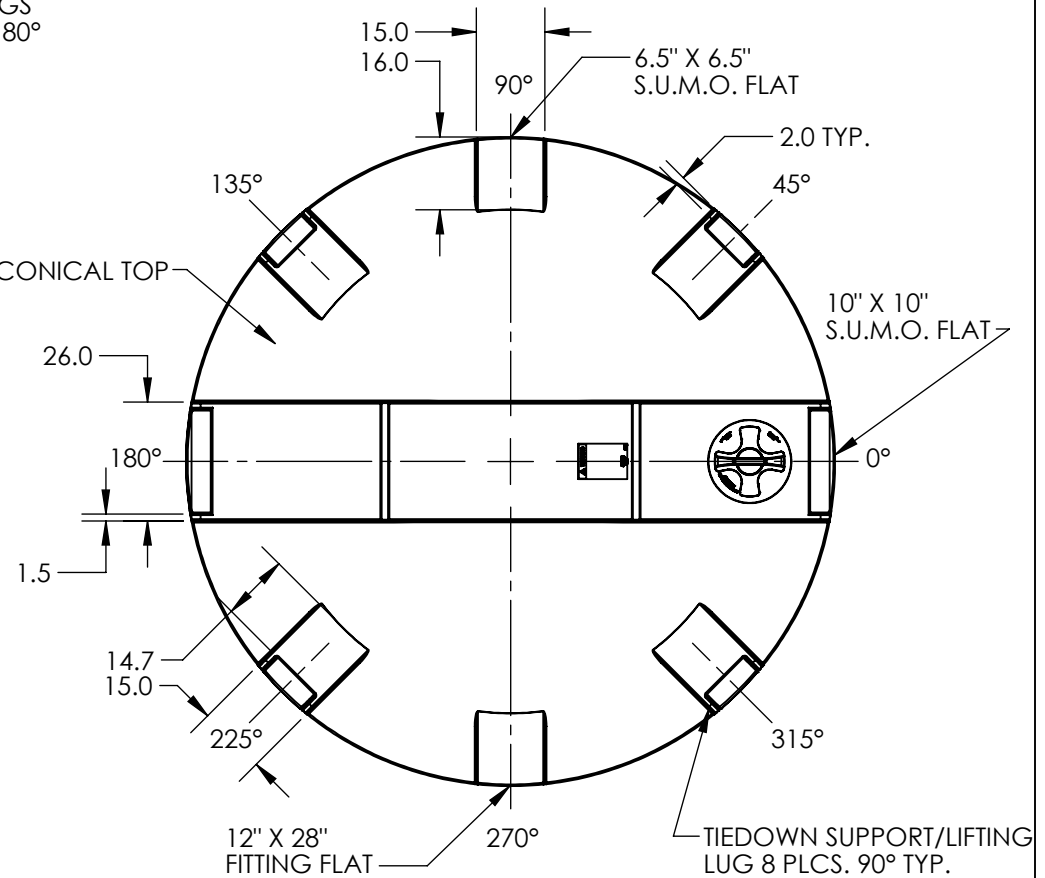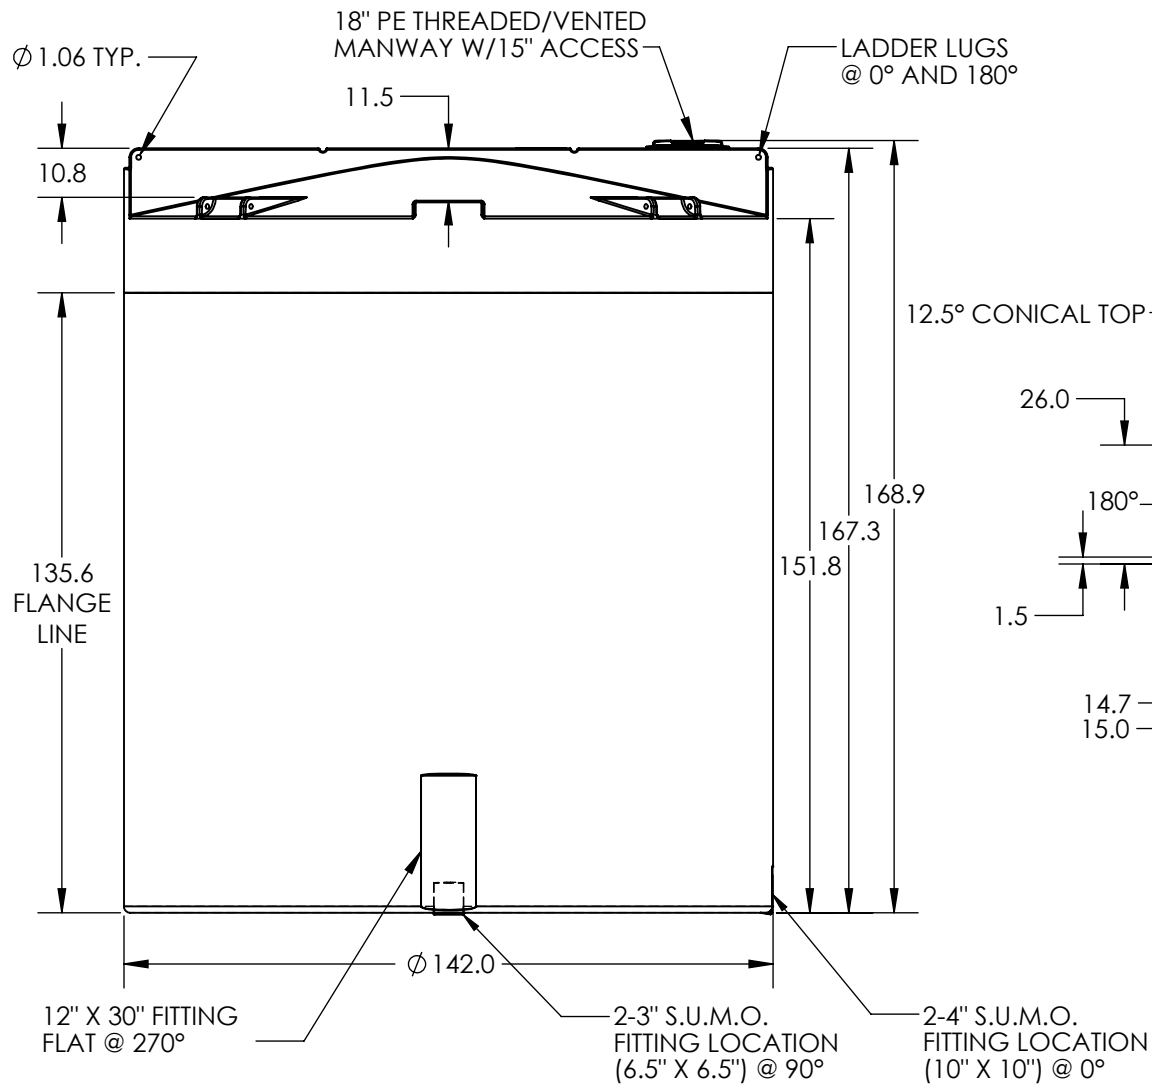

**\*ALL EXTERNAL PIPING MUST BE INDEPENDENTLY SUPPORTED.**  
**\*ONLY BASE FITTINGS TO BE LEFT INSTALLED AT TIME OF SHIPMENT PER SII PROCEDURE.**  
**\*Consult Snyder's Guidelines for Use and Installation prior to delivery.**  
 Available on-line at <http://www.snyderindustriestanks.com/Technical>  
**ALL DIMENSIONS ARE IN INCHES, NOMINAL, & SUBJECT TO CHANGE WITHOUT NOTICE.**  
**ALL DIMENSIONS ON ROTATIONAL MOLDED PARTS ARE SUBJECT TO A ± 3% TOLERANCE.**

DO NOT SCALE		DRAWN BY	TITLE:		REVISION
STATUS: <b>Released</b>		ET3	<b>ASM TK 10500VDT X 142</b>		<b>B</b>
© SNYDER INDUSTRIES, INC., 2019			INDUSTRIES, INC.		SHEET
ALL DIMENSIONS, DESIGNS, AND INFORMATION ON THIS PRINT MUST BE CONSIDERED PROPRIETARY TO SNYDER INDUSTRIES, INC. AND MAY NOT BE USED, COPIED, OR DISTRIBUTED WITHOUT WRITTEN PERMISSION OF AN OFFICER (OR HIS AGENT) OF THE FIRM.			(402) 467-5221 www.snyderinet.com		1 OF 1
PART NO.		ENG. ID.			
<b>5330000N</b>		<b>D001069</b>			

# Reduce your risk of tank failure!

Introducing Snyder's latest innovation.....

## **Flexmaster**



***Flexible and Strong Enough to  
Handle the Job***

In recent years, a variety of expansion joint products have been utilized to help alleviate the stress generated at the tank and piping interface points. While some of these products can be an expensive alternative in steel tank installations, none provide the degree of expansion required in a plastic tank, which is why Snyder engineering has been compelled to develop a solution to this age-old problem.



### **Flexmaster** - A Uniquely Designed Flexible Tank Connection

Snyder's latest product innovation, Flexmaster, is a uniquely designed flexible tank connection that allows a tank's sidewall to move freely, which substantially reduces stress at fitting locations, resulting in longer, trouble free tank installations.

***Bottom Line, Flexmaster will increase the useful life  
of your company's tanks while reducing the risk of  
premature tank failures, which will ultimately result in  
more profits.***

***STI*** **SNYDER**  
INDUSTRIES, INC.  
[www.snydernet.com](http://www.snydernet.com)

# Flexmaster


Flexmaster is constructed of the same polyethylene resin as the tank, which guarantees superior chemical resistance at a lower cost than traditional expansion joints.

*Substantially reduces stress at fitting locations caused by rigid piping*

**Patent No. 7,195,284**



It's a well known fact within the tank manufacturing industry that the majority of all tank failures occur at a fitting location. Reason being, the rigidity of a tank's plumbing connection apparatus typically do not allow the tank sidewall to expand and contract adequately, which creates a stress point that ultimately becomes the cause of failure at some stage within a tanks useful life.

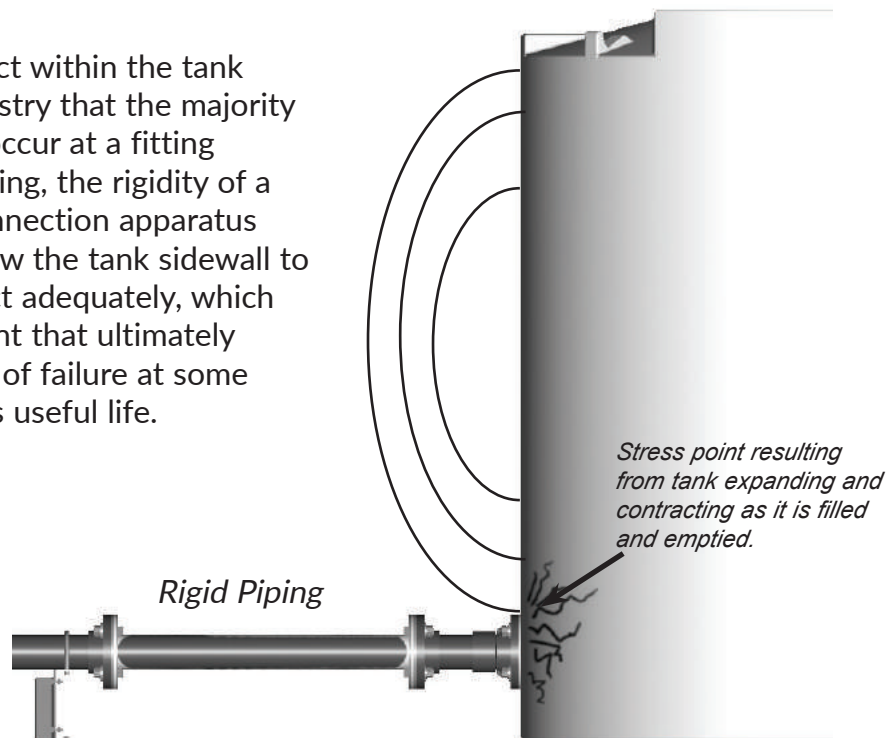


Corporate Offices: Lincoln, Nebraska 402-467-5221 • Fax: 402-465-1220  
Other Manufacturing Locations: Marked Tree, Arkansas • Philippi, West Virginia •  
Chowchilla, California • Mancelona, MI

[www.snydernet.com](http://www.snydernet.com)  
[sales@snydernet.com](mailto:sales@snydernet.com)



---

# ***GUIDELINES FOR USE AND INSTALLATION***

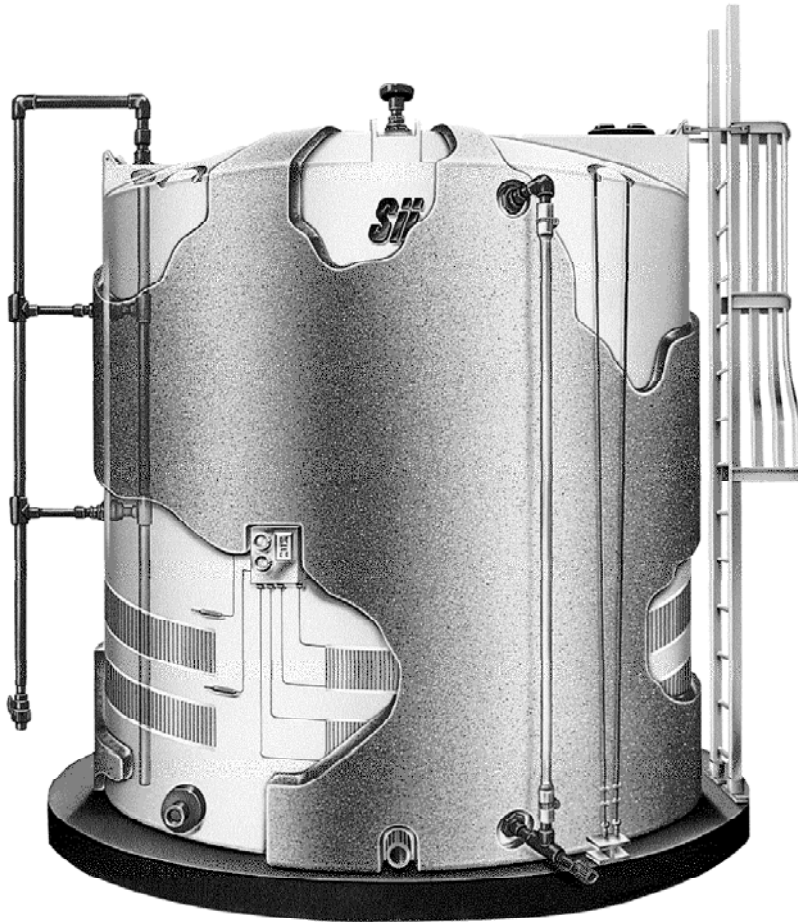

***PROVIDING INDUSTRY WITH TANK SOLUTIONS***

**Protect your warranty – Read these instructions!**

***SI SNYDER  
INDUSTRIES, INC.***

6940 O Street Suite #100 • Lincoln, Nebraska • 68510 • Phone: 402-467-5221  
Fax: 402-465-1220 • [www.snyderindustriestanks.com](http://www.snyderindustriestanks.com)

---

# TABLE OF CONTENTS

1. SAFETY CHECKLIST
2. WARRANTY INFORMATION
3. RECEIVING AND INSPECTING YOUR TANK
4. TANK LOADING, UNLOADING, AND POSITIONING
  - 4.1 HORIZONTAL TANKS
  - 4.2 SMALL VERTICAL TANKS (LESS THAN 2000 GALLON CAPACITY)
  - 4.3 LARGE VERTICAL TANKS (GREATER THAN OR EQUAL TO 2000 GALLONS)
  - 4.4 INSULATED TANKS
  - 4.5 CAPTOR CONTAINMENT TANKS (ADDITIONAL INSTRUCTIONS)
5. PRE-INSTALLATION NOTES
  - 5.1 TANK OPERATING CRITERIA
  - 5.2 FOUNDATIONS AND SUPPORTS
  - 5.3 TANK FITTINGS AND CONNECTIONS
  - 5.4 TESTING AND FINAL INSPECTION
  - 5.5 ACCESSORY PARTS
6. FITTINGS
  - 6.1 THREADED BULKHEAD FITTING
  - 6.2 SELF-ALIGNING THREADED BULKHEAD FITTING
  - 6.3 BOLTED FLANGE FITTING
  - 6.4 BOLTED STAINLESS STEEL FITTING
  - 6.5 SNYDER UNITIZED MOLDED OUTLET - (SUMO™)
  - 6.6 SIPHON TUBE FITTINGS
  - 6.7 UNIFIED FITTING OUTLET - (UFO™)
  - 6.8 DUAL CONTAINMENT TANK (DCT)
7. TANK ATTACHMENTS
  - 7.1 U-VENTS
  - 7.2 MANWAYS / VENTS – AIR SURGE
  - 7.3 DOWN PIPES (TANK FITTING SUPPORTED) – (EXTERNAL AND/OR INTERNAL)
  - 7.4 DOWN PIPES (WELDED BOSS SUPPORTED) – (INTERNAL ONLY)
  - 7.5 DOWN PIPES (WELDED PE SUPPORTED) – (INTERNAL ONLY)
  - 7.6 DOWN PIPES (INDEPENDENTLY SUPPORTED) – (EXTERNAL ONLY)
  - 7.7 FLEXIBLE SIGHT LEVEL GAUGES
  - 7.8 REVERSE LEVEL SIGHT GAUGE (SIDEWALL SUPPORTED – WITH SADDLE CLAMPS)
  - 7.9 REVERSE LEVEL SIGHT GAUGE (GROUND SUPPORTED – WITH FRP STRUT SYSTEM)
  - 7.10 ULTRASONIC LEVEL INDICATOR
  - 7.11 LEAK DETECTOR UNIT (FOR USE WITH CAPTOR CONTAINMENT TANKS ONLY)
  - 7.12 FLANGE ADAPTERS
  - 7.13 FLEXMASTER EXPANSION JOINTS
8. TANK ACCESSORIES
  - 8.1 LATERAL RESTRAINT SYSTEM (FLAT BOTTOM TANKS)
  - 8.2 WIND/SEISMIC TANK RESTRAINT SYSTEM (FLAT BOTTOM TANKS)
  - 8.3 WIND/SEISMIC TANK RESTRAINT SYSTEM (CONE BOTTOM TANKS)
  - 8.4 WIND/SEISMIC TANK RESTRAINT SYSTEM (DUAL CONTAINMENT TANK)
  - 8.5 STEEL LADDERS
  - 8.6 STEEL LADDER CAGES
  - 8.7 FRP LADDERS (UP TO 300" HEIGHT)
  - 8.8 FRP LADDER CAGES
  - 8.9 HORIZONTAL LEG TANK INSTALLATION
  - 8.10 CONE BOTTOM TANK STAND EXTENSIONS
  - 8.11 HEATED TANKS
9. TANK MAINTENANCE
  - 9.1 TANK INSPECTION
10. SII PRODUCT POLICY STATEMENTS
  - 10.1 SII STANDARD LIMITED WARRANTY
  - 10.2 SII WARRANTY EXCEPTIONS
  - 10.3 RETURN MERCHANDISE/WARRANTY CLAIM PROCEDURE

---

## 1. SAFETY CHECKLIST

- 1.1 Confirm that the product to be stored is compatible with the tank and fittings.
- 1.2 Do not rigidly pipe tanks. Refer to section 5.3.2 for additional information.
- 1.3 Polyethylene tanks are designed and rated for ATMOSPHERIC PRESSURE ONLY. Proper venting alleviates pressure or vacuum from developing as the tank is filled or emptied. Venting should be sized to limit the tank to a maximum of 1/2 inch water column (0.018 PSI). Additional precautions may be required if the tank will be filled pneumatically (using air pressure). Review the chemical to see if it can be vented to the atmosphere or if it needs treatment prior to venting. Your application may need a sealed tank with a vent line to a scrubber system for proper chemical safety. **FAILURE TO PROVIDE PROPER VENTING WILL VOID YOUR WARRANTY.**
- 1.4 **WARNING:** It is the installer's responsibility to follow all appropriate NFPA, OSHA, and governmental safety precautions. The following information has been provided as guidelines for tank use and installation. It does not address safety issues which may be present at specific tank installation sites. Use appropriate safety practices when handling any tank and/or using heavy equipment.
- 1.5 Prevent excessive heat near or inside the tank. Standard polyethylene tanks are designed for a maximum continuous temperature of 100°F / 37.7°C. Consult factory for applications above 100°F / 37.7°C.
- 1.6 Consider tank entry as a confined space entry. Follow proper entry procedures.
- 1.7 Do not stand or work on top of a tank. The surface is flexible and slippery and a dangerous fall could occur. There is no weight or load rating for the tank dome. Remember – Safety First!
- 1.8 Read all warning labels on the tank prior to use and installation.
- 1.9 Record all warranty information as per section 2 while all information is available at time of tank receipt. Please refer to section 10 for warranty and policy statements.

## 2. WARRANTY INFORMATION

- 2.1 Record all required warranty information detailed below. Fax or mail this information to Snyder Industries at the number or address shown above. Retain a copy of this information for use in the advent of a warranty question.
- 2.1.1 Tank Part Number: \_\_\_\_\_
- 2.1.2 Tank Serial Number: \_\_\_\_\_
- 2.1.3 Tank Description/Size: \_\_\_\_\_
- 2.1.4 Date of Original Factory Invoice: \_\_\_\_\_
- 2.1.5 Snyder Customer Order Number: \_\_\_\_\_
- 2.1.6 Distributor Supplying Tank (name, address, and phone number): \_\_\_\_\_
- 2.1.7 Date of Water Pre-Test: \_\_\_\_\_

---

2.1.8 Water Pre-Test Observations: \_\_\_\_\_

2.1.9 Type of Chemical Stored: \_\_\_\_\_

2.1.10 Concentration of Chemical: \_\_\_\_\_

2.1.11 Tank Use Temperature: \_\_\_\_\_

### 3. RECEIVING AND INSPECTING YOUR TANK

3.1 Upon arrival at the destination, the purchaser and/or his agent shall be responsible for inspection for damage in transit. If damage has occurred or parts are missing, the purchaser should document this on the bill of lading, file a claim with the carrier, and notify the manufacturer prior to putting the tank into service.

3.2 Verify that the tank part number on the packing slip matches the tank bar code being delivered.

3.3 Do not drop a tank off a truck onto the ground. Please see section 4 for proper unloading instructions.

3.4 Please match tank components to bill of lading. Some tank components may be shipped inside the tank. Remove any components shipped inside the tank before putting the tank into a vertical position. Loose items that are installed inside the tank can be fitted up before the tank is put into a vertical position.

### 4. TANK LOADING, UNLOADING, AND POSITIONING

#### 4.1 HORIZONTAL TANKS

4.1.1 Tanks shall be wrapped if ordered by the customer.

4.1.2 Tanks should be hand carried, moved with a handling cart, or moved with a forklift with protected or rounded fork extensions (to prevent sharp forks from damaging tanks and to provide adequate support for the tank as it is being moved).

4.1.3 Tanks should be loaded and unloaded from a horizontal position in the truck with a minimal amount of sliding. The tank shall be hand carried, moved with a handling cart, or moved with a forklift with protected or rounded fork extensions to minimize sliding.

4.1.4 Tanks should be loaded or unloaded from a dock of proper height or with a forklift with protected or rounded fork extensions. **NEVER drop a tank off of a truck onto the ground since this may damage the tank and void the warranty.**

#### 4.2 SMALL VERTICAL and CONE BOTTOM TANKS (LESS THAN 2000 GALLON CAPACITY)

4.2.1 Tanks shall be wrapped if ordered by the customer.

4.2.2 Tanks should be hand carried, moved with a handling cart, or moved with a forklift with protected or rounded fork extensions (to prevent sharp forks from damaging tanks and to provide adequate support for the tank as it is being moved).

4.2.3 Tanks should be loaded and unloaded from a horizontal or vertical position in the truck with a minimal amount of sliding. The tank shall be hand carried, moved with a handling cart, or moved with a forklift with protected or rounded fork extensions to minimize sliding.

4.2.4 Tanks should be loaded or unloaded from a dock of proper height or with a forklift with protected or rounded fork extensions. **NEVER drop a tank off of a truck onto the ground since this may damage the tank and void the warranty.**

4.2.5 If a tank is to be stored for over one month before being put into service, it should be stored in an upright vertical position. Cone bottom tanks should be stored upright in their appropriate cone stand. Tanks stored outdoors must be secured to prevent movement or being overturned in high wind situations.

### 4.3 LARGE VERTICAL and CONE BOTTOM TANKS (GREATER THAN OR EQUAL TO 2000 GALLONS)

4.3.1 Tanks shall be wrapped if ordered by the customer.

4.3.2 Tanks should be moved, loaded, and unloaded in a horizontal position with a forklift with protected or rounded fork extensions, or with a crane with a spreader bar and 2 slings of appropriate size positioned on each tank as shown in Figure 4.3.2 NEVER drop a tank off of a truck onto the ground since this may damage the tank and void the tank warranty.

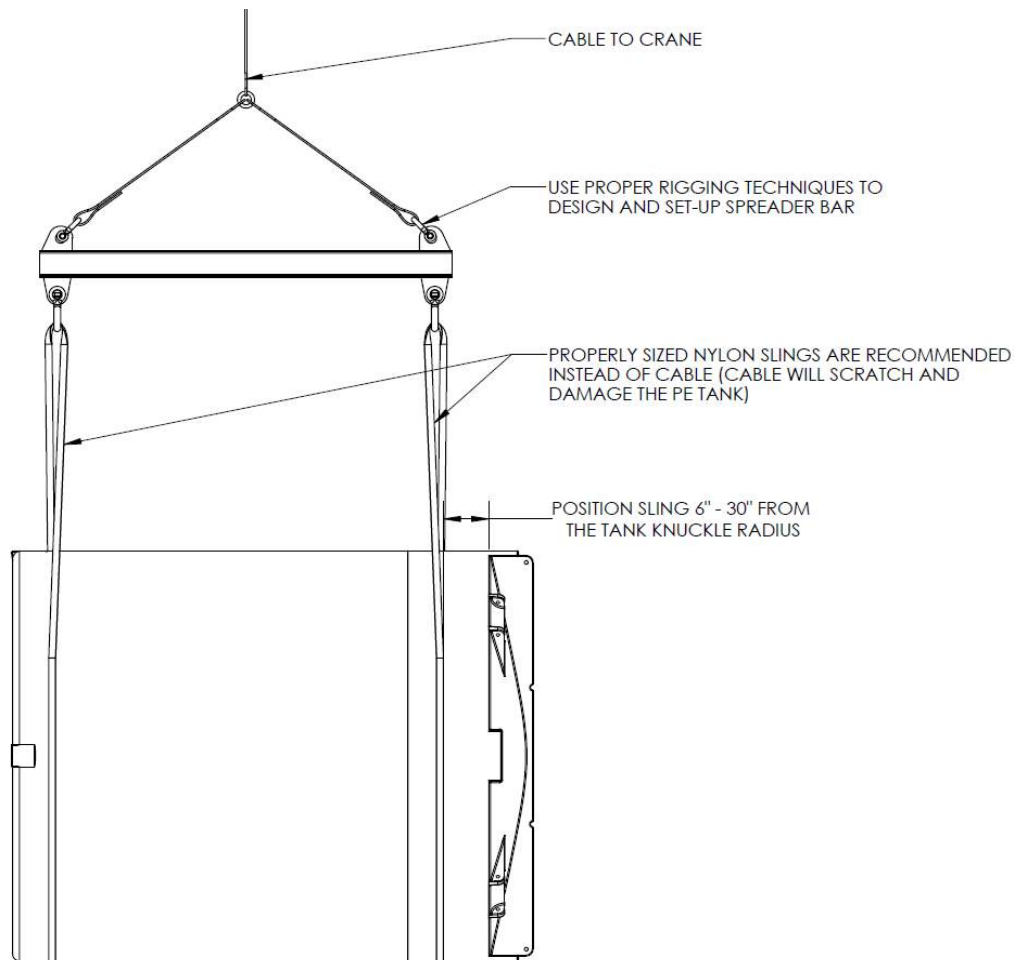


Figure 4.3.2

4.3.3 Tank lifting lugs are intended for moving the tank from a horizontal position to a vertical position from a firm surface. **Lifting lugs must not be used to load or unload tanks from trailers. This is a dangerous situation since the tank could roll off of the shifting trailer surface as the load is being moved.**

4.3.4 After the tank has been placed on a firm, level surface in a horizontal position, the lifting lugs may be used to erect the tank in a vertical position on an appropriate support pad. The tank should be lifted using a symmetrical arrangement of lugs to disperse the load evenly throughout the tank. To properly attach to the lifting lugs a straight clevis should be used with a minimum open throat distance of 1-1/2" and 1" diameter pins. A minimum of 4 lugs should be attached with equal length cables on all large vertical tank sizes except 142" diameter tanks. 142" diameter tanks require 3 lugs to be attached. All tanks should be positioned with 2 lugs closest to the ground prior to lifting the tank to the vertical position. Refer to Figure 4.3.4 for additional information. If the tank does not have lifting lugs, it may be necessary to rig

the tank with slings or use a pipe and chain through the tank manway to upright the tank. Please contact the factory for additional information as necessary.

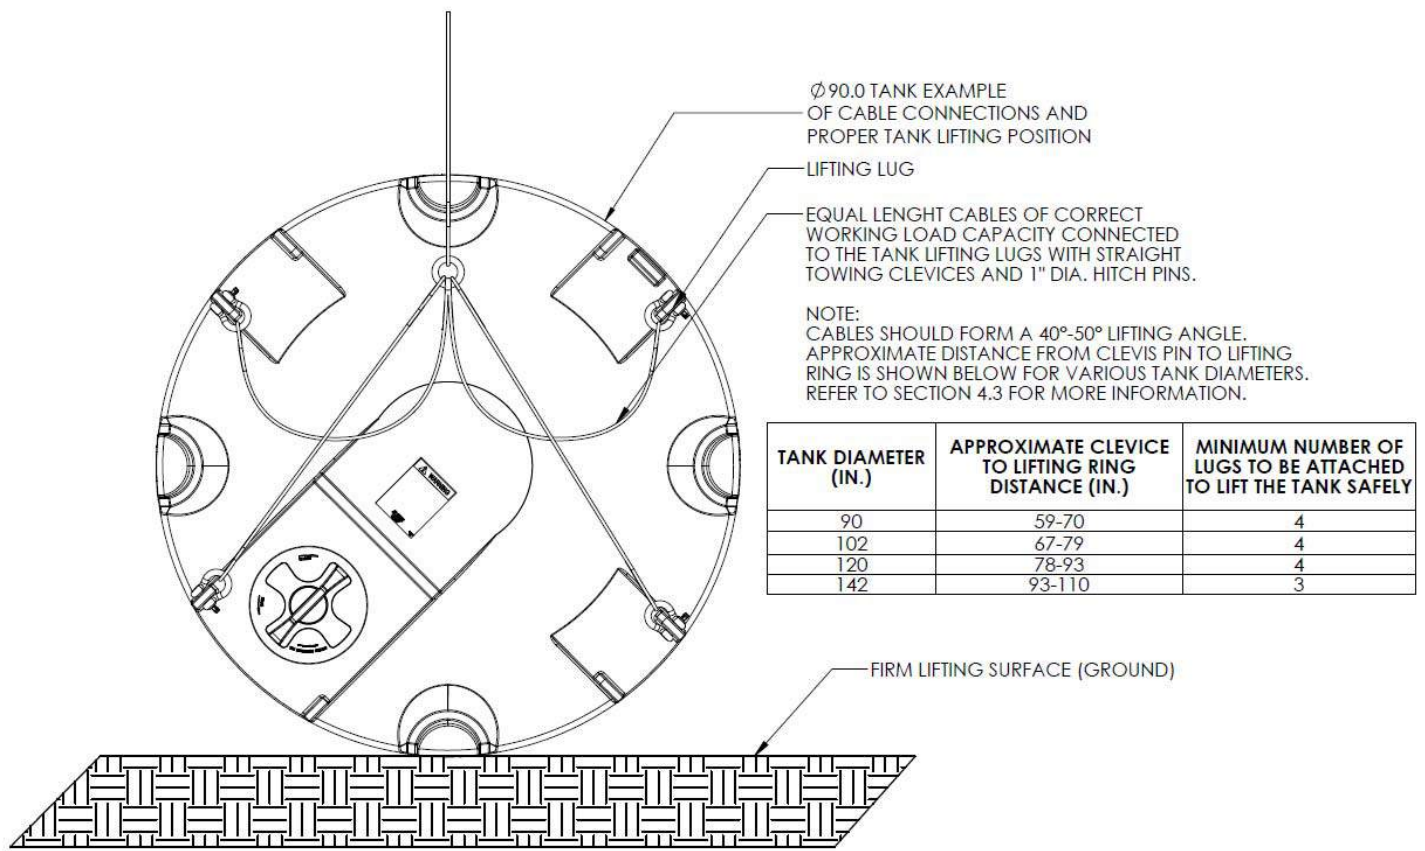


Figure 4.3.4

4.3.5 If a tank is to be stored for over one month before being put into service, it should be stored in an upright vertical position. Cone bottom tanks should be stored upright in their appropriate cone stand. Tanks stored outdoors must be secured to prevent movement or being overturned in high wind situations.

#### 4.4 INSULATED TANKS (ADDITIONAL INSTRUCTIONS)

4.4.1 Insulated tanks must be moved with devices that have large padded contact surfaces to prevent damage to the foam insulation. **NEVER allow the tank to drop or roll on rough surfaces as this may damage the foam insulation.** When transporting foam insulated tanks, use 4" wide nylon straps and slings to move and secure the tanks. This will assist in decreasing the stress on the foam that can be caused by narrower straps.

#### 4.5 CAPTOR CONTAINMENT TANKS (ADDITIONAL INSTRUCTIONS)

4.5.1 Captor containment tanks are shipped assembled (primary tank inside of containment tank) with a shipping cable assembly holding the two tanks together. Make sure the UFO bellows assembly didn't come off center due to the primary tank rotating or shifting during transit or offloading. Lift and position the tank as per previous instructions. Once the tank is in position, remove the shipping cables from the tank. Do not leave the shipping cables under the tank. Follow standard vertical tank restraining methods shown in section 8.2 to restrain the tank assembly for wind or seismic conditions.

---

## 5. PRE-INSTALLATION NOTES

### 5.1 TANK OPERATING CRITERIA

5.1.1 TEMPERATURE - All standard SII tanks are designed for a maximum continuous service temperature of 100° F. Service temperatures greater than 100° F reduce the strength of the tank. Applications with temperatures greater than 100° F require greater wall thickness to accommodate this reduction in strength. Please consult factory for applications with service temperatures greater than 100° F.

5.1.2 PRESSURE - All standard SII tanks are designed for use at atmospheric pressure. **Pressure or vacuum situations can cause excessive deformation or damage to the tanks and void warranty.** Please consult factory for applications which may develop pressure or vacuum situations.

5.1.3 CHEMICAL COMPATIBILITY - Suitability of the tank assembly (tank, fittings, gaskets, etc.) for storing a particular chemical must be confirmed by chemical data (this should have been done by the tank distributor or the end user prior to placing the tank order). However, changes to the tank (i.e. tank accessories, or the service of the tank) can occur. Please consult the factory with any questions.

5.1.4 LOCATION REQUIREMENTS - There may be location requirements which should be considered prior to placing the tank into service. Some items to consider are: secondary containment; locating the tank in a flood plain; locating the tank so it is easy to install and access for service; locating a tank in an area where seismic or wind forces may be experienced; heat from surrounding equipment; and the ability to remove and replace tank in the future. **It is the responsibility of the end user to ensure that all location requirements have been taken into consideration.** Check for all federal, state, and local regulations that may apply to the tank installation. A thorough evaluation of the proposed tank location prior to tank installation is recommended.

5.1.5 TANK ENTRY PRECAUTIONS - If entry into the tank is necessary, be sure to take all necessary precautions and follow all applicable regulations. Entry into a tank should be considered a "CONFINED SPACE ENTRY" with appropriate OSHA safety precautions required. There are many safety practices which should be considered depending on the specific conditions at the site. Please follow all local, state, and Federal rules and regulations.

5.1.6 GALLONAGE MARKINGS - Level markings on the tank or on gallon decals should be considered nominal measurements and are not intended for precise measuring or metering.

5.1.8 BASIC CLEANING - Basic cleaning of the tank requires the use of a pressure washer with a mild detergent and water temperature up to 130°F / 54°C

5.1.7 GOUGE REMOVAL – Should your tank get gouged during shipping or off-loading it may be repaired using the gouge removal procedure – refer to figure 5.1.

5.1.8 HYDRO TEST – The tank should be hydro tested (water test) for 24 hours before the introduction of chemical. If necessary, remove all test water to prevent any possible reaction with the chemical to be stored.

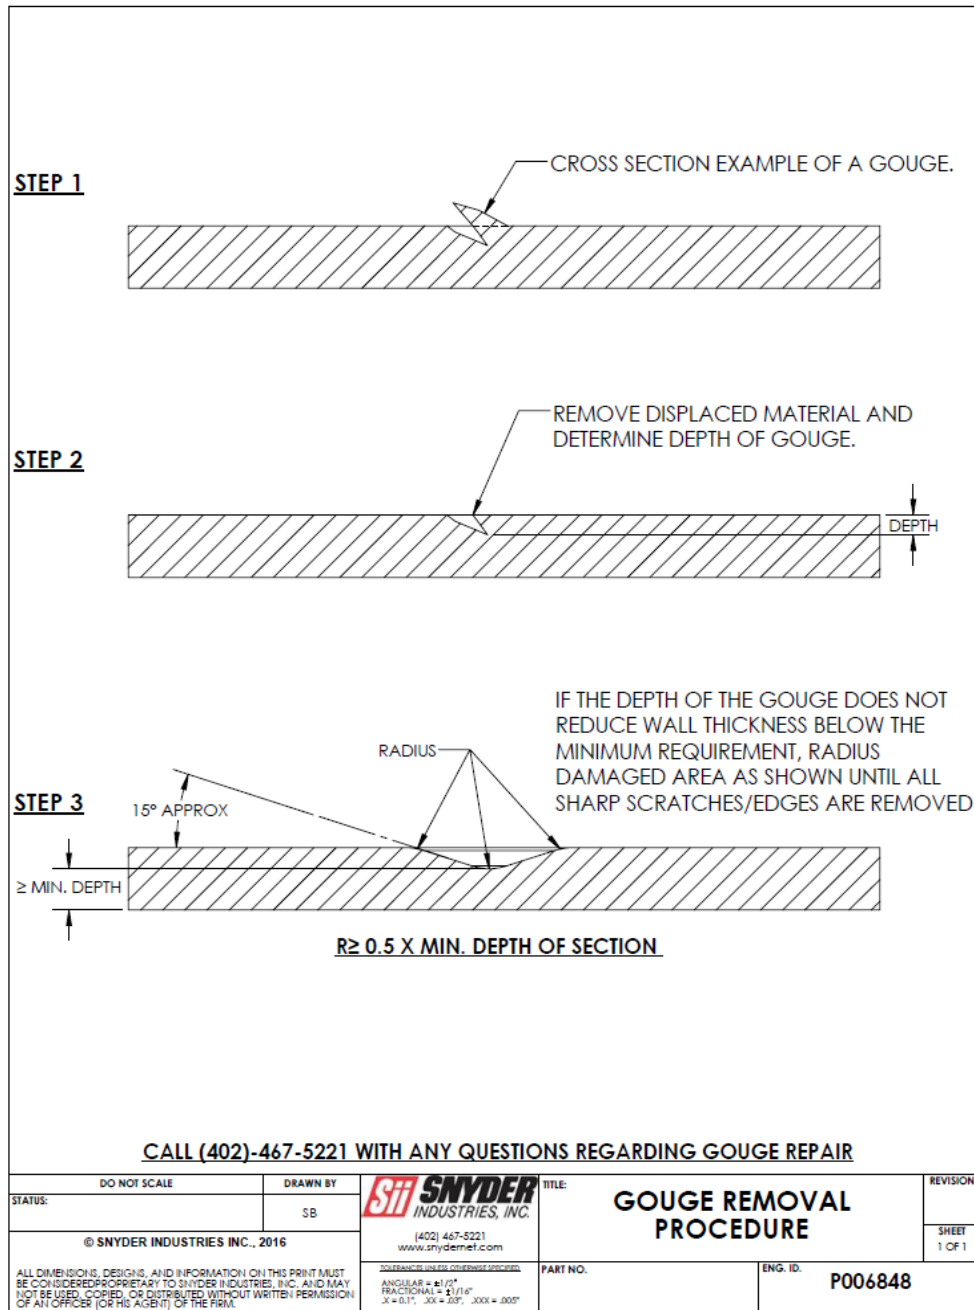


Figure 5.1

## 5.2 FOUNDATIONS AND SUPPORTS

5.2.1 Vertical flat bottom tanks should be positioned on a concrete pad providing adequate support and a method to attach a tank restraint system (see Section 8 for restraint system pad placement criteria). The pad should be clean, smooth, and level so it fully supports the entire tank bottom with no deflection. The construction site engineer must design an appropriate concrete pad based on the specific application. **FAILURE TO PROVIDE PROPER FOUNDATION AND SUPPORTS WILL VOID WARRANTY.** A sand mound support can be placed under the tank bottom to promote tank drainage and extend tank life in certain applications. This is recommended for all single wall vertical tanks 10,000 gallons and larger (not recommended for double wall Captor tanks). The sand should be a construction grade utility sand or finer. The tank and pad placement must be done to prevent any erosion of the sand from under the tank. Please refer to Figure 5.2. The sand mound must be very uniform without lumps or foreign objects. Per the chart in Figure 5.2, draw a circle on



the tank pad and rake the sand uniformly with zero elevation at the circle perimeter and an elevation in the center per the chart in Figure 5.2. The chart recommendations are nominal dimensions. The best support is a sand mound that follows the normally convex shape of the tank bottom. If the tank bottom is not as convex as the dimensions shown for the sand mound in Figure 5.2, then follow the tank bottom. Adjust the sand mound shape/size so the tank has minimal contact with the sand when properly centered on the mound.

5.2.2 Vertical flat bottom tanks with SUMO fittings may require a notch in the concrete support pad just in front of the SUMO fitting for piping and piping accessories. The SUMO fitting has a  $\pm 5^\circ$  tolerance for fitting projection off horizontal. Since the SUMO fitting comes out from the tank very near ground level, concrete support pads which project past the SUMO fitting may interfere with the SUMO and/or its piping accessories. SII recommends that the support pad be notched to provide adequate clearance for piping and tank expansion/contraction movement. Please refer to Figure 5.3.

5.2.3 Cone bottom or horizontal tanks require specifically designed support structures. Inadequate or improperly designed support structures may cause premature tank failure. **Therefore, any support structure that is not of SII manufacture must be approved by SII in writing or ALL WARRANTIES WILL BE VOIDED**



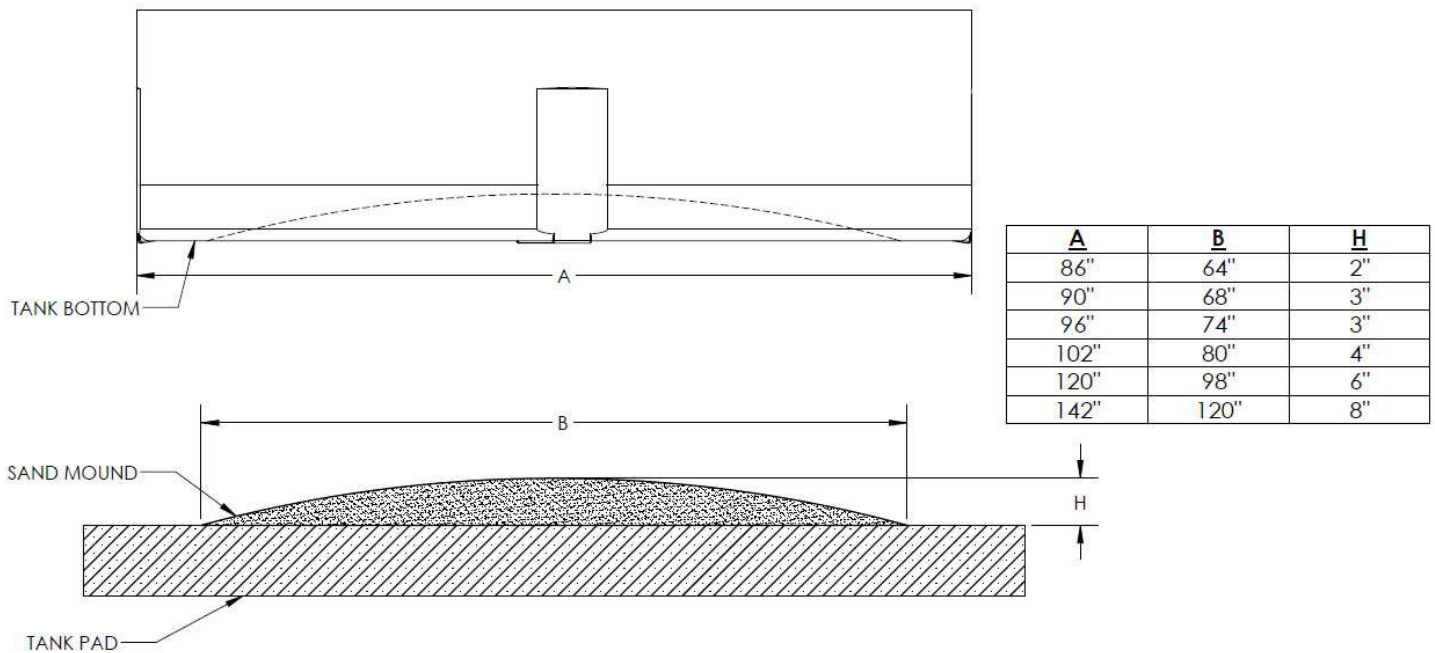


Figure 5.2

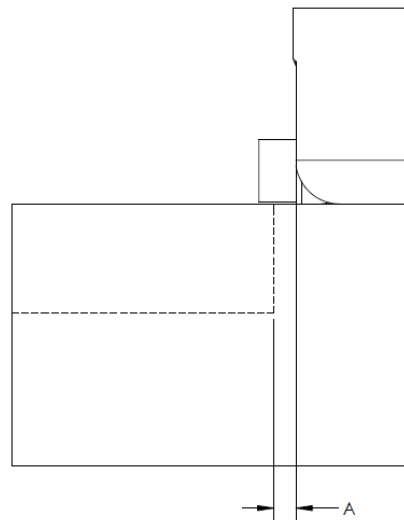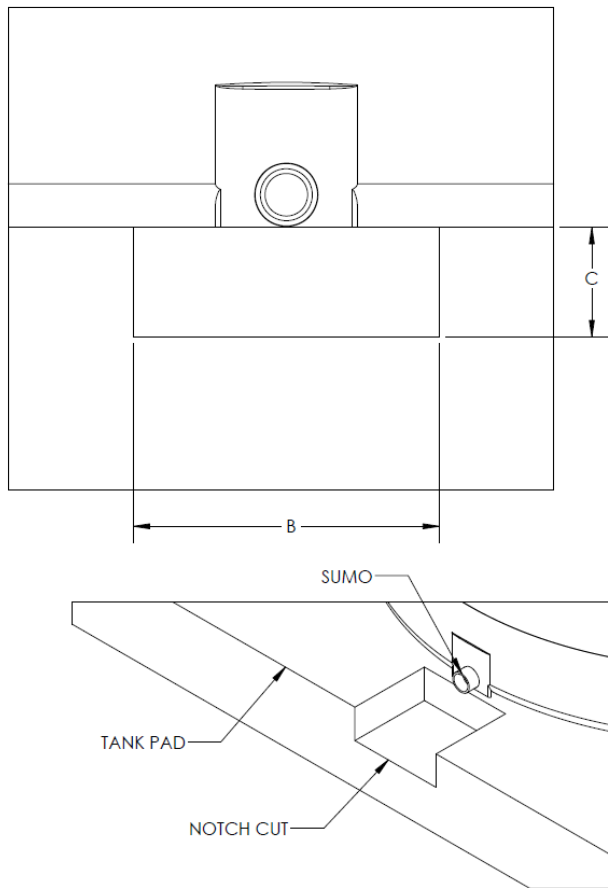

- NOTES:
1. TANK MUST BE FULL SUPPORTED BY A SOLID PAD. (CONSULT A LOCAL CIVIL OR STRUCTURAL ENGINEER).
  2. ALL TANK OUTLETS MUST BE CONNECTED TO PIPING WITH FLEXIBLE CONNECTIONS OR EXPANSION JOINTS CAPABLE OF 4% DIMENSIONAL MOVEMENT AS CLOSE TO THE TANK AS POSSIBLE (10" OR LESS). FLEXIBLE CONNECTION SHOULD BE DESIGNED FOR A  $\pm 5^\circ$  ANGULAR MOVEMENT DUE TO TANK EXPANSION/CONTRACTION.
  3. OTHER CONNECTION METHODS ARE AVAILABLE FOR SUMO OUTLETS.
  4. DIMENSION "B" AND "C" ARE RECOMMENDED MINIMUM DIMENSIONS ONLY (NOT REQUIRED).


SIZE	DIM A	DIM B	DIM C
2"	1.13"	10"	5"
3"	1.13"	12"	5"
4"	1.40"	14"	5"
6"	1.35"	15"	5"

Figure 5.3

### 5.3 TANK FITTINGS AND CONNECTIONS

5.3.1 Most tank fittings are typically left installed in the tank. Some fittings are not installed due to damage potential or customer request. Customer job site fitting installation insures proper gasket compression and minimizes fitting damage potential. This is because even the fittings installed at the factory may become damaged or loose during shipping and they need to be readjusted or retightened per section 6. Some distributors sell or install their own tank fittings or accessories. **These fittings or accessories are not warranted by SII.**

5.3.2 Tank connections must have adequate provisions for tank expansion/contraction due to temperature and load changes. See Figure 5.4. The overall height of the tank will shorten during filling. Therefore on the top dome of the tank, the piping to top fitting connections must be allowed to move with the tank or flexible connections may be used. Rigid piping must not be directly plumbed to tank sidewall connections. Provisions must be made that allow 4% dimensional movement on sidewall connections. SII requires using flexible hose, expansion joints or other provisions for all tank sidewall connections. Please see the hose connection examples in Figure 5.5. SII has developed the Flexmaster expansion joint for 2" and 3" bolted tank connections. Please see section 7.11 for more details. **The use of rigid piping or the failure to provide for the expansion of the tank will void all warranties.**

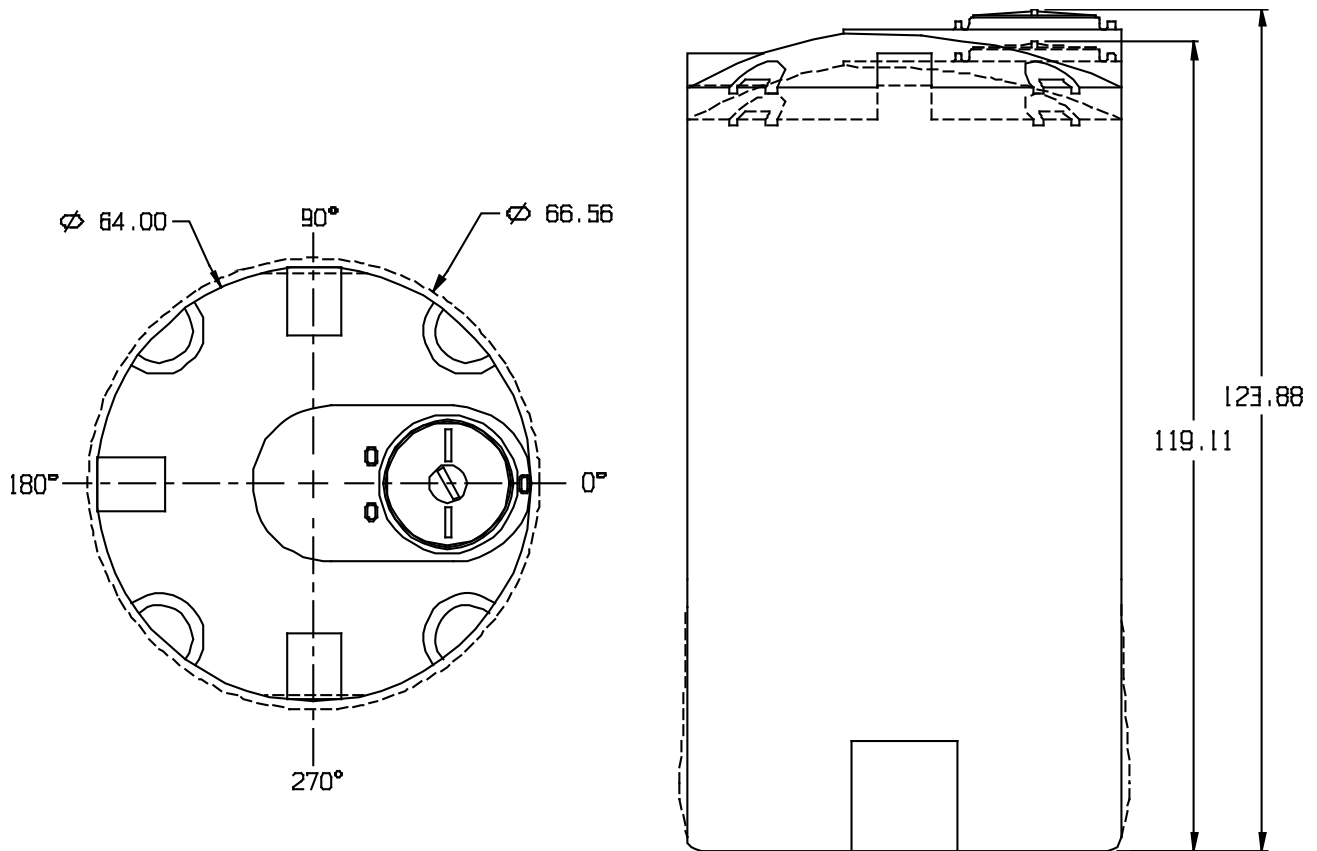

THIS EXAMPLE SHOWS 4% DIMENSIONAL CHANGE AFTER LONG TERM COLD FLOW HAS OCCURRED. THE HIDDEN LINES SHOW THE LONG TERM DEFLECTED CASE FOR THIS TANK AT 4% DEFLECTION. TANK DEFLECTION IN THE SHORT TERM WILL EXHIBIT A DIFFERENT SHAPE THAN WHAT IS SHOWN. SHORT TERM DEFLECTION IS GOING TO OCCUR MORE AT THE MID POINT OF THE TANK AND THEN SETTLE OVER A LONG TIME PERIOD TO WHAT IS SHOWN. THIS IS THE AMOUNT OF DEFLECTION THAT SHOULD BE DESIGNED INTO ANY PIPING CONNECTIONS TO THIS TANK. THE FLEXIBLE CONNECTION SYSTEM WOULD NEED TO ACCOMMODATE THIS TYPE OF MOVEMENT. TYPICAL MOVEMENT UNDER NORMAL LOADING AND TEMPERATURE CONDITIONS IS USUALLY LESS THAN WHAT IS SHOWN.

Figure 5.4

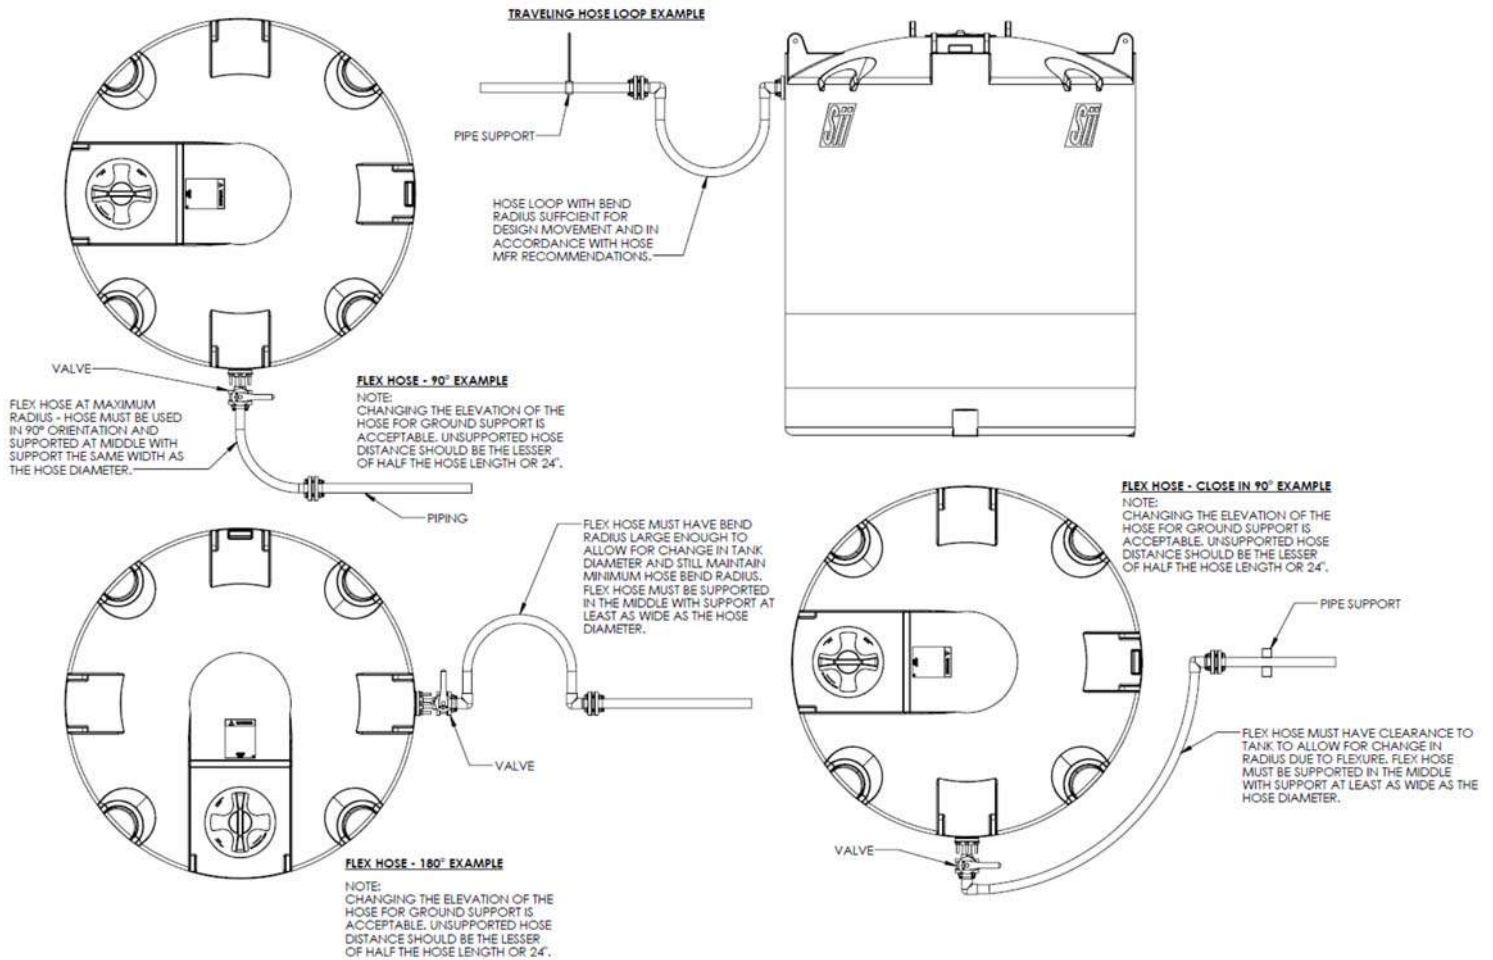


Figure 5.5

5.3.3 FITTING INSTALLATION GENERAL GUIDELINES - If fittings are to be customer drilled and installed, there are some general installation guidelines which may be helpful.

5.3.3.1 LOCATION - It is very important that fitting location be carefully considered prior to cutting any holes. **SII recommends (fitting size dependent) a 6" minimum centerline height for fittings on tanks less than 3000 gallons with the fitting gasket at least 1-1/2" above or below the end of any tank knuckle radius. SII recommends (fitting size dependent) a 9" minimum centerline height for fittings on tanks 3000 gallons or larger with the fitting gasket at least 3" above or below the end of any tank knuckle radius. SII recommends locating all fittings so gasket seal areas do not go through any tank flange lines or any molded-in tank feature (i.e. gallonage markers, logos, ribs, edges of tank flats, etc.). SII does not recommend field cutting and installation of fittings on insulated tanks. Fittings must be located to avoid interference with tie-down devices and to allow for tightening of fittings nut(s). Mark all of the proposed fitting locations with a marker. Re-inspect all of the locations prior to cutting any holes.**

5.3.3.2 TOOLS - It is very important to obtain the correct tools before attempting to install any tank fitting. Tools you will need for installing tank fittings properly include:

- \*Marker for laying out holes
- \*Tape measure, straight edge, plum-bob (to align fittings meant to be aligned), etc.
- \*1/2" drill motor
- \*Hole saw sized to the O.D. of the fitting body if bulkhead style (see section 6.1, and 6.2).
- \*Hole saw sized to the I.D. of the fitting flange hole or the same size as the fitting's size if flange style (see section 6.3, and 6.5).
- \*Drills for any bolt holes (size +1/16" larger than the size of the bolts)
- \*Deburring tool (a drum sander and 150 - 220 grit sandpaper may also be used)
- \*Wrenches (adjustable, sockets, strap wrench, etc.)

### 5.3.3.3 PROCEDURE

1. Disassemble the fitting and use it as a final location check as noted in 5.3.3.1.
2. With the center hole marked, cut the tank hole using the correct size hole saw (see 5.3.3.2).
3. If the fitting is a flange style (see section 6.3 and 6.5) then mark one of the bolt holes using the outer flange.

The bolt holes should be oriented so the bolt holes straddle the principal centerline of the tank. With the hole correctly located and marked, drill the bolt hole.

4. Temporarily install one bolt and position the flange over the main fitting hole.
5. Mark the bolt hole opposite the bolt hole already drilled and drill that bolt hole.
6. Temporarily install another bolt and drill the remaining bolt holes using the flange as a guide.
7. With all of the fitting's holes drilled, gently deburr the hole(s) with the deburring tool. Do not put any nicks or scratches into the tank. Sand any nicks or scratches out with sandpaper greater than 120 grit.
8. Clean away any debris from the sealing surface of the tank.
9. For tanks greater than 1/2" thick, measure the tank wall thickness. If the wall thickness is not consistent within  $\pm 1/32$ " around all of the fitting hole(s), some sanding on the inside of the tank wall will be necessary. This must be done carefully and as little as necessary. The purpose of the sanding is to make the wall thickness even, not to create a flat on the tank wall. The final finish sanding should be done with greater than 120 grit sand paper (preferably 220 grit).
10. With all of the fitting's hole(s) prepared, install the fitting using the instructions from the appropriate section (6.1, 6.2, 6.3, or 6.5). The inside tank wall surface must be clean and smooth at time of fitting installation.

## 5.4 TESTING AND FINAL INSPECTION

5.4.1 After all fittings are installed and all connections to the tank have been made, fill the tank with water and hold for at least 5 hours to identify any leaks. **A record of the water pre-test must be submitted to SII to validate the tank warranty.**

## 5.5 ACCESSORY PARTS

5.5.1 Various parts must be packaged separately to prevent damage during transportation. These parts are usually bagged or boxed to prevent loss or damage. Some parts may be shipped inside of the tank.

## 6. FITTINGS

NOTE: The following installation instructions assume the tank has been predrilled and prepared for fitting installation by the factory. Most fittings are factory installed, but check fittings for damage and gasket compression. See section 5.3 for general tank fitting information if a fitting is to be installed without a factory prepared location. Prior to installing fittings, check the sealing surface for debris and/or scratches which could cause leakage.

### 6.1 THREADED BULKHEAD FITTING

6.1.1 Remove the nut (C) from the fitting body (A) and gasket (B). See Figure 6.1 for part identification.

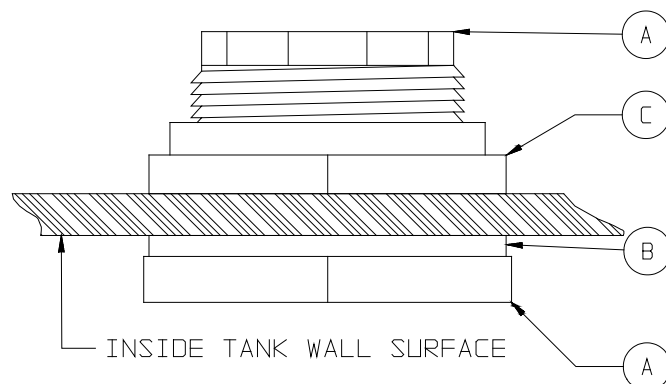


Figure 6.1

6.1.2 Working from inside the tank, slide the fitting body (A) through the hole in the tank. The gasket (B) should be between the fitting body flange and the inside tank wall. Install the nut (C) on the fitting threads protruding on the outside of the tank.

6.1.3 To obtain proper gasket compression for bulkhead fitting installation, tighten the fitting nut hand tight (check to see if it engages the tank wall). Tighten the nut an additional 3/4 turn for fittings less than 1 in., or 1/3 turn for fittings 1 in. or larger. Anti-seize is recommended to prevent thread seizing on bulkhead fittings. Inspect the gasket to make sure it is fully contacting the inner surface of the fitting body flange and the inside tank wall. Gasket compression should be between 25 - 50%. **Recheck fitting tightness periodically.**

## 6.2 SELF-ALIGNING THREADED BULKHEAD FITTING

6.2.1 Follow the same procedures as detailed under threaded bulkhead fitting installation steps 6.1.1 - 6.1.3.

6.2.2 Piping should be installed into the fitting ball with an appropriate thread sealant (i.e. Teflon pipe sealant). Adjust the piping to the required angle (within the limits of the fitting). When the piping has been located as required, tighten the PVC ball retainer ring located on top of the PVC ball.

## 6.3 BOLTED FLANGE FITTING

6.3.1 The bolted flange fitting shall be constructed with 2 ea. 150 lb. flanges (C1 and C2), 2 ea. 150 lb. flange gaskets (D1 and D2), the correct number of full threaded bolts (A), bolt gaskets (B), flat washers (E), lock washers (F), and hex nuts (G) for the flange specified. NOTE: If the tank wall thickness is greater than or equal to 0.75", fittings with stainless steel bolts will require longer bolts for installation. Consult with the factory for the correct part number when ordering long-bolted flange fittings. Refer to Figure 6.2 for part identification.

6.3.2 Disassemble the fitting as shipped by removing the bolt's hex nuts, lock washers, flat washers, outer flange, and outer flange gasket. Locate the fitting hole on the inside of the tank and insert the bolts (still installed on the inner flange and gasket) through the drilled holes in the tank. Place the outer flange gasket over the bolts on the outside surface to the tank. Place the outer flange over the outer gasket and bolts. Install the flat washers, lock washers, and hex nuts on the bolts. Check to make sure the fitting assembly appears as shown in Figure 6.2.

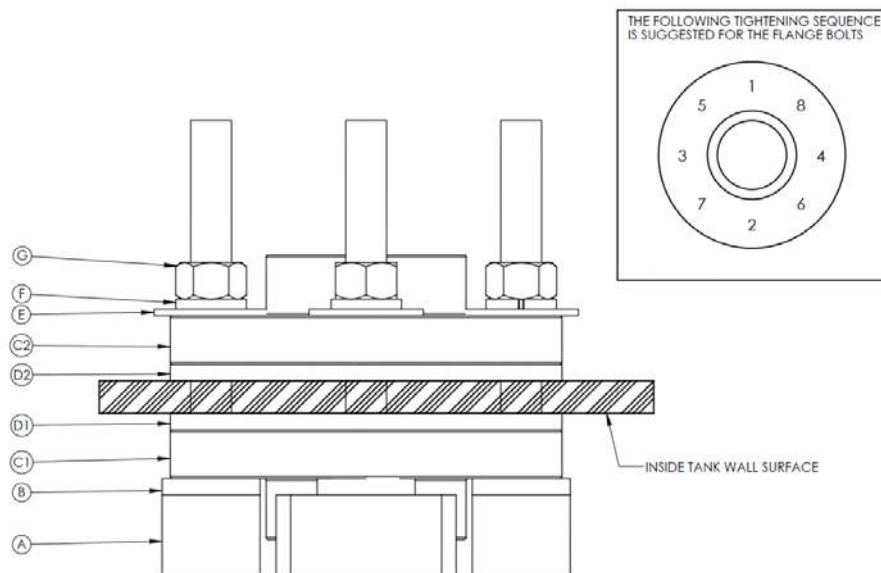


Figure 6.2

6.3.3 To obtain proper gasket compression, tighten all the fitting nuts hand tight with a deep socket using the bolt tightening sequence shown until the gaskets engage the tank wall and the lock washers are compressed. Tighten each nut an additional 3 turns (2 turns if the inner flange and gasket are not utilized) using the same sequence (do not tighten more than 1 turn at a time). A light application of lubricating oil is necessary to prevent thread seizing on S.S. bolts. Gasket compression should be between 25 - 50%. While gasket compression needs to be the controlling factor to obtain a proper seal, do not apply more torque than recommended by the flange manufacturer. See torque value listed on flange. **Re-check fitting tightness periodically.**

#### 6.4 BOLTED STAINLESS STEEL FITTING

6.4.1 The bolted stainless steel fitting shall be constructed with 1 ea. inside flange with studs (A), 1 ea. fitting gaskets (B), 1 ea. outside flange (C), and the correct number of lock washers (D), and hex nuts (E) for the fitting specified. Refer to Figure 6.4 for part identification.

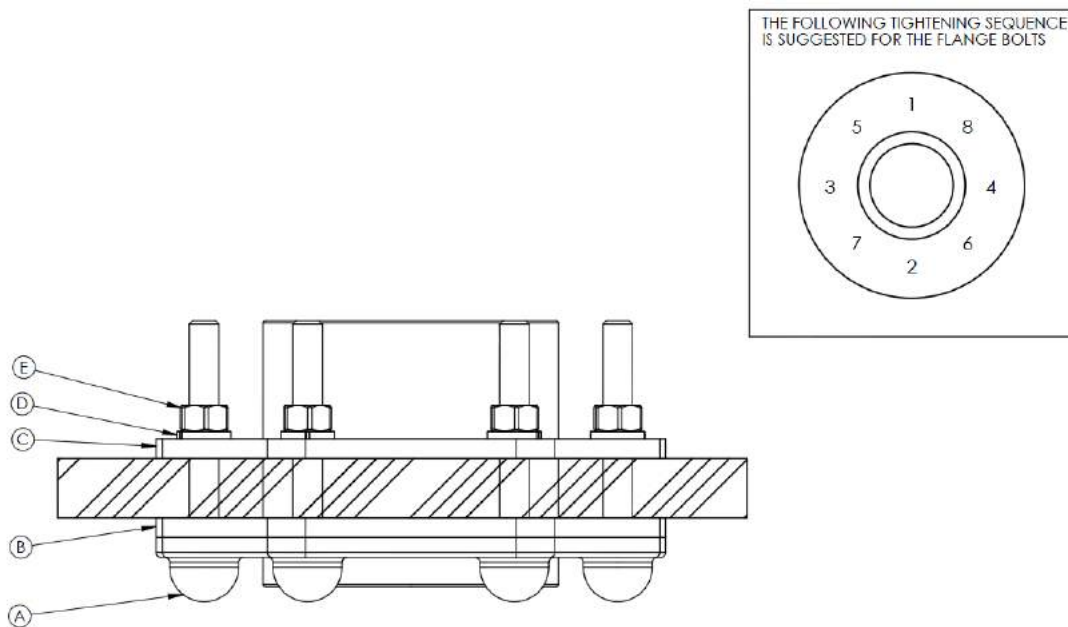


Figure 6.4

6.4.2 Disassemble the fitting as shipped by removing the hex nuts, lock washers, and outside flange. Locate the fitting hole on the inside of the tank and insert the fitting's studs through the drilled holes in the tank. The flange gasket (B) should be between the inside fitting flange and the inside tank wall. Place the outside flange over the studs on the outside surface of the tank. Install the lock washers and hex nuts on the studs. Check to make sure the fitting assembly appears as shown in Figure 6.4.

6.4.3 To obtain proper gasket compression, tighten all the fitting nuts hand tight with a deep socket using the bolt tightening sequence shown until the gasket engages the tank wall and the lock washers are compressed. Tighten each nut an additional 1 - 2 turns using the same sequence (do not tighten more than 1 turn at a time). Do not apply more than 15 ft. - lbs. of torque. A light application of lubricating oil is necessary to prevent thread seizing on S.S. bolts.

## 6.5 SNYDER UNITIZED MOLDED OUTLET - (SUMO™) (PATENT NO. 5,374,026)

6.5.1 The SUMO fitting shall be constructed with 1 ea. smaller o-ring (A), 1 ea. larger o-ring (B), and 1 ea. SUMO adapter (C). Refer to Figure 6.5 for part identification. **NOTE - The tank is shipped with a shipping stabilizer installed in the SUMO outlet. NEVER move the container without the shipping stabilizer installed.**

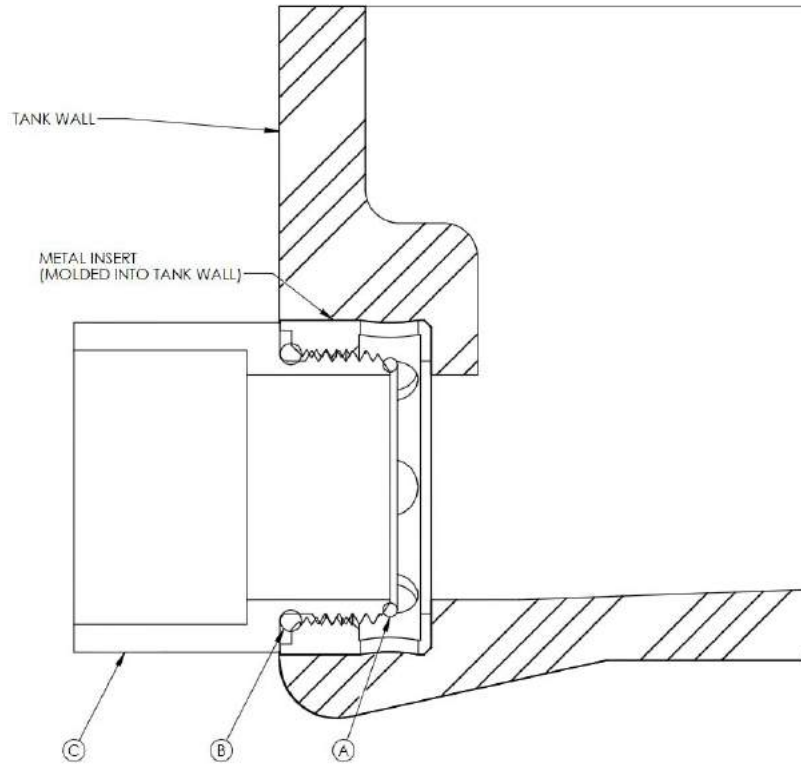


Figure 6.5

6.5.2 Once the tank has been properly placed on its foundation, remove the shipping stabilizer and clean away any dirt or debris from the SUMO outlet threads and o-ring seats. Use only a soft moist cloth. **NEVER USE A TOOL THAT COULD SCRATCH THE O-RING SEATS.**

6.5.3 Install the smaller o-ring inside the SUMO molded-in fitting. Make sure it is placed in the o-ring seat area evenly. Carefully stretch the larger o-ring enough to install it on the SUMO adapter. **Only a SII SUMO adapter may be used. Use of a non-approved adapter may damage your tank outlet and will void the tank warranty.** The o-ring may be lubricated with a suitable lubricant such as water. Do not use silicone or Teflon sealants. Screw the adapter in until the step on the adapter is flush with the tank wall. Do not over-torque the adapter (25 ft. - lbs. of torque maximum). Figure 6.5 shows a sectional view of an assembled SUMO fitting.

6.5.4 Once the SUMO adapter is installed, other components may be attached to the adapter. A union or flange adapter with a flexible expansion joint should be installed as close to the tank as possible to allow for future disassembly. The SUMO fitting must have adequate clearance for any piping accessories and allow for a  $\pm 5^\circ$  outlet angle change. Consult factory for pad and/or accessory clearance questions. A notch in the tank support pad may be necessary (see Figure 5.2).

## 6.6 SIPHON TUBE FITTINGS

6.6.1 Siphon tubes may be added to the fittings specified in sections 6.1, 6.3, 6.4, and 6.5. Siphon tubes shall be customer installed with the tank in a vertical position after fitting installation.

6.6.2 PVC and CPVC siphon tubes need to be solvent welded with the proper solvent cement into the socket of a previously installed fitting. Threaded siphon tubes need to be threaded in place with Teflon pipe sealant applied to the threads prior to the fitting being installed.



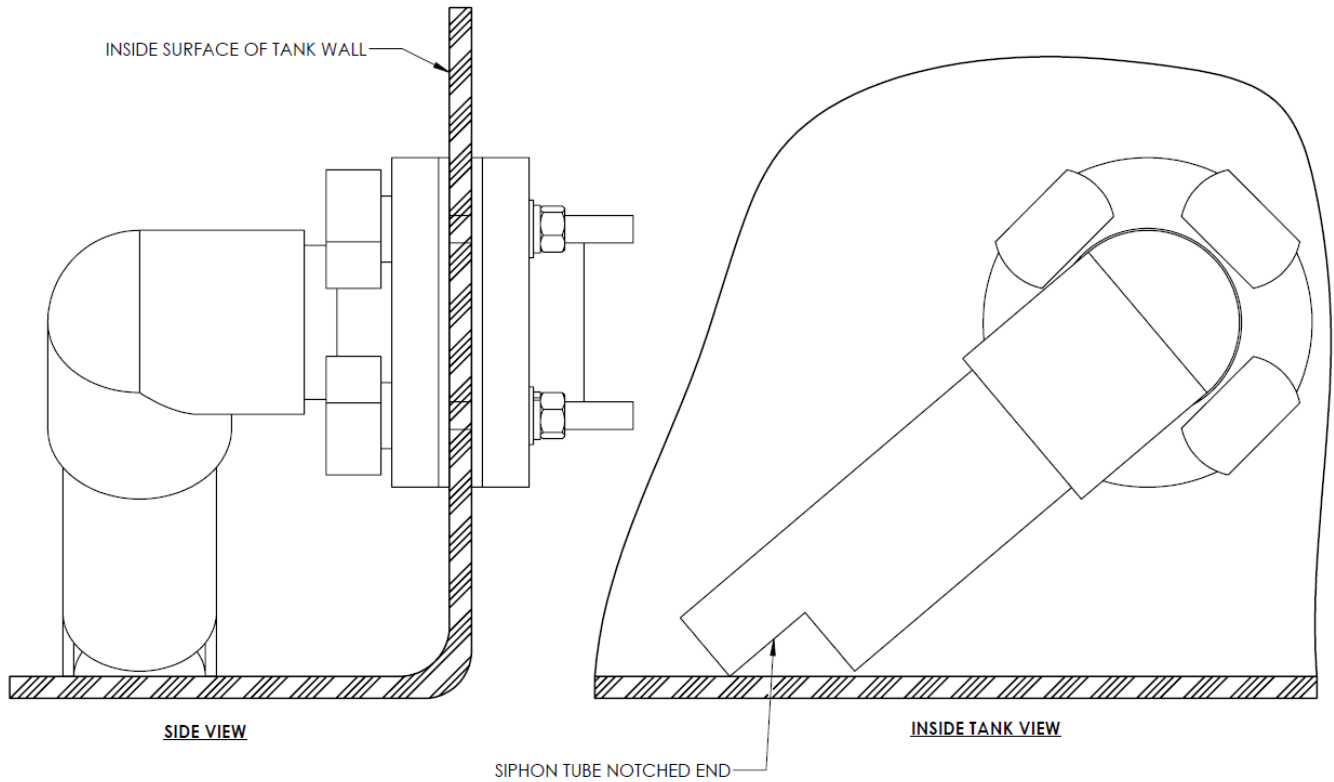


Figure 6.6

6.6.3 Siphon tubes should be located with the cut notch corner in close proximity of the floor of the tank for maximum drainage, and the siphon tube tilted to the side of the fitting. Refer to Figure 6.6 for proper placement of the siphon tube in the tank.

**6.7 UNIFIED FITTING OUTLET (UFO™) - FOR USE WITH CAPTOR CONTAINMENT TANKS ONLY**

6.7.1 The Unified Fitting Outlet (UFO™) is a flexible outlet device that allows primary tanks to be equipped with sidewall fittings while maintaining a seal between the primary and containment tanks that moves with tank expansion/contraction. The UFO will allow 2 to 4 in. bolted fittings to be utilized while maintaining a flexible containment seal. This option is normally a factory installed option for use with a captor containment tank assembly only. This option can be field installed. Consult factory for more details. The bolted fittings used with this option follow the same sealing/tightening criteria as detailed in sections 6.3 and 6.4. An example of this option (patent pending) is shown in Figure 6.7.

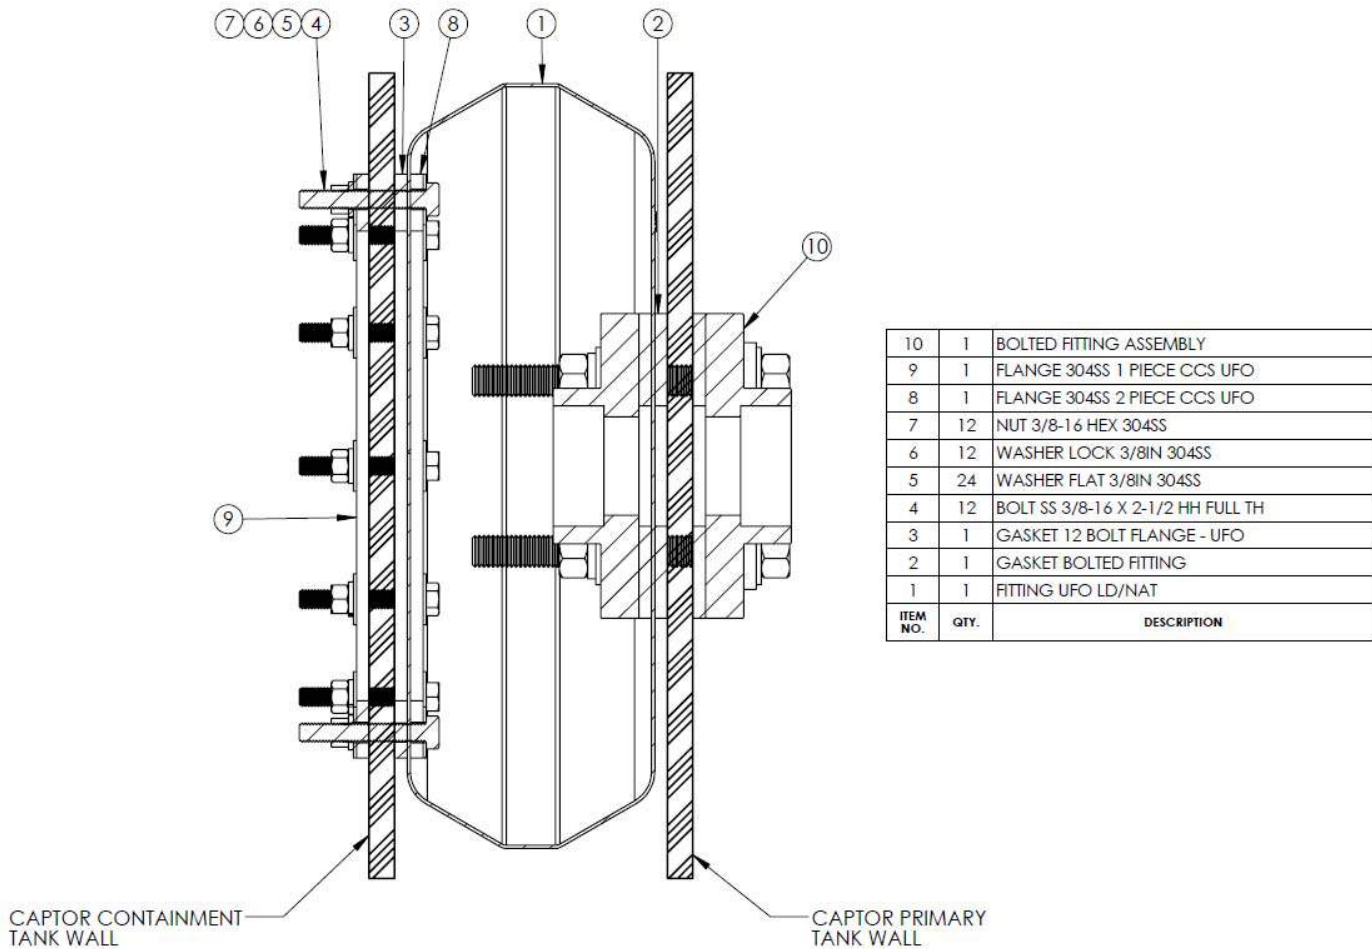


Figure 6.7

## 6.8 DUAL CONTAINMENT TANK (DCT)

6.8.1 Dual containment tanks can have a sidewall fitting located at the 0°, 90°, 180° or 270° locations with a gasket installed in the interstitial space between the primary and containment tank. This option is normally factory installed for use with DCT tank assemblies. This option can be field installed. Consult factory for more details. The bolted fittings used with this option follow the same sealing/tightening criteria as detailed in sections 6.3 and 6.4. An example of this option is shown in Figure 6.8.

6.8.2 The bolted flange fitting shall be constructed with 2 ea. 150 lb. flanges (C1 and C2), 3 ea. 150 lb. flange gaskets (D1, D2, and D3), the correct number of full threaded bolts (A), bolt gaskets (B), flat washers (E), and hex nuts (F) for the flange specified. NOTE: If the sum of the containment and primary tank wall thicknesses and the interstitial gasket (D3) thickness is greater than or equal to 0.75", fittings with stainless steel bolts will require longer bolts for installation. Consult with the factory for the correct part number when ordering long-bolted flange fittings. Refer to Figure 6.8 for part identification.

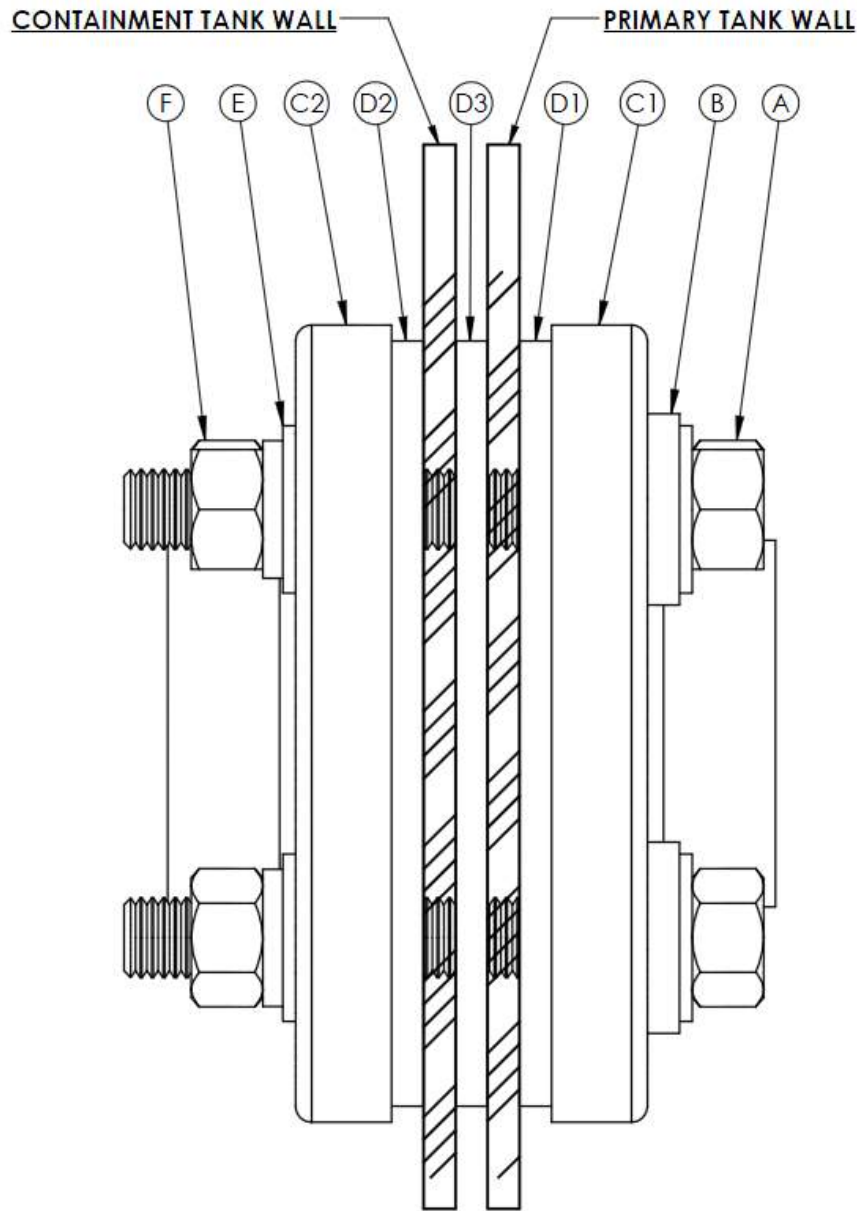


Figure 6.8

## 7. TANK ATTACHMENTS

### 7.1 U-VENTS

7.1.1 Standard u-vents are constructed from PVC or CPVC and are provided with a loose male adapter. This allows the u-vent to be cut to the desired height. A threaded or solvent welded socket fitting can be used. U-vents can be purchased with an optional bug screen insert (CPVC holder and fiberglass 17 x 17 screen) installed.

7.1.2 When installing the u-vent in a solvent weld socket fitting, solvent weld the u-vent with the proper solvent cement in the desired position into a previously installed fitting. If the u-vent is to be used in a threaded fitting, solvent weld the male adapter provided to the u-vent, and install the u-vent assembly into a previously installed threaded fitting. Refer to Figure 7.1 for an exploded illustration of this assembly.

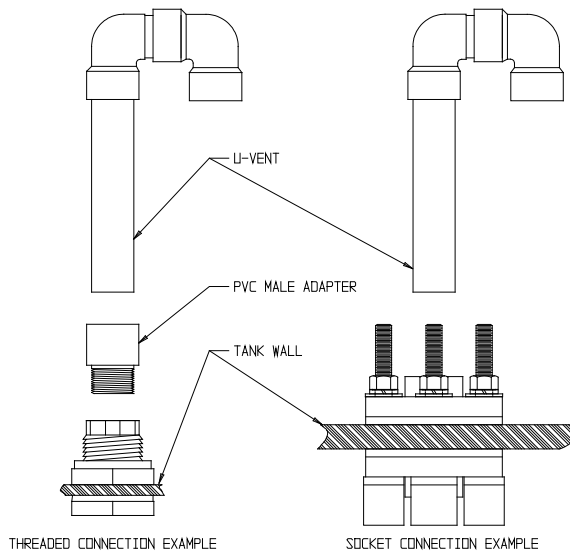


Figure 7.1

## 7.2 MANWAYS / VENTS – AIR SURGE

7.2.1 The air surge manway (fig 7.2.1) is used in pneumatic fill applications, it provides additional venting (it should never be the main vent) that the primary vent source cannot handle. Installed by running a bead of 3/16" silicone sealant on the underside of the ring (where the screw holes are located). Then place the ring into the opening, once oriented in the direction desired use a screw gun and run 8 each #10 S.S. screws through the small holes in the ring and into the tank. Do not over torque the screws as it may damage the tank, ring, or screws.



Figure 7.2.1

7.2.2 The 18" mushroom vent (fig 7.2.2) is a solution to undersized venting problems. Such as: in cases of pneumatic filling. It's a rotationally molded 18" vent that can be attached to any tank that has at least 19" diameter of flat area. The vent is installed by simply cutting the hole and attaching it with the 8 screws provided and sealing with silicone.

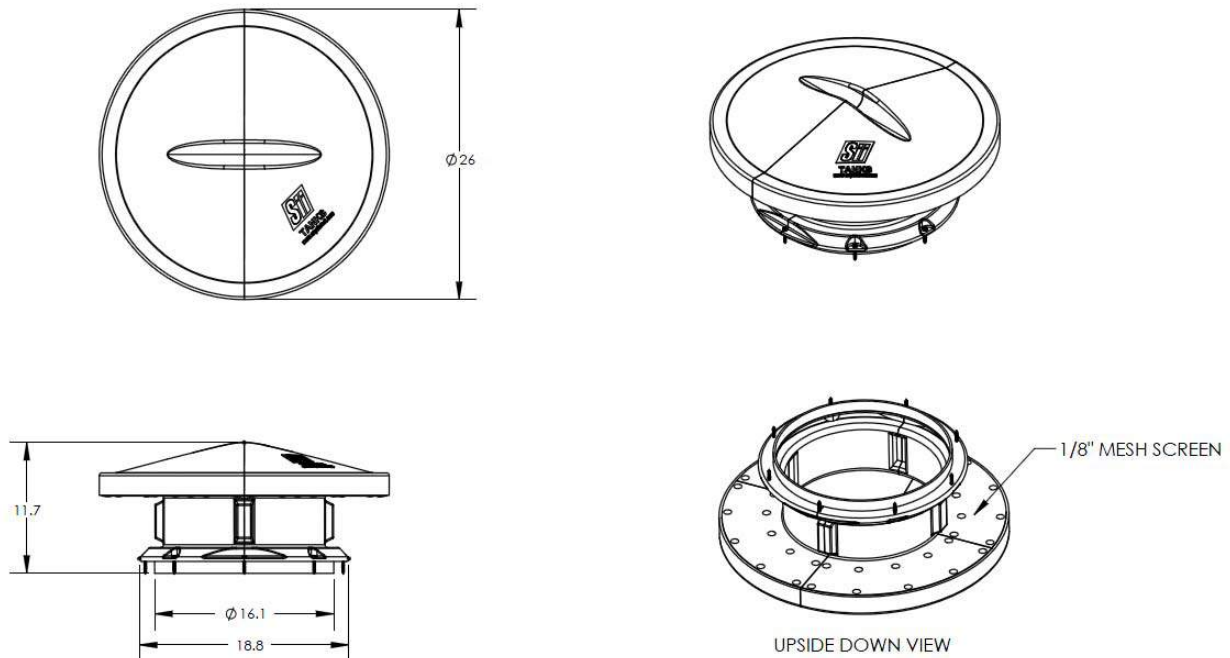


Figure 7.2.2

### 7.3 DOWN PIPES (TANK FITTING SUPPORTED) - EXTERNAL AND/OR INTERNAL

7.3.1 Down pipes are shipped loose and have been cut to size to meet customer specifications. To maintain warranty, all down pipes shall be supported at 5 ft. maximum intervals with the support structures provided. Internal down pipes are required to have 6" minimum clearance from the tank bottom. For tanks with an overall height greater than 150", the tank bottom clearance must be at least 4% of the overall tank height.

7.3.2 Assemble the piping loosely using Figure 7.2, the guidelines detailed below, and the customer approved tank drawing to ensure all parts are present and cut to meet the customer's requirements. As soon as all parts have been checked, assemble the parts with solvent weld cement and/or threaded connections as shown in Figure 7.2.

7.3.3 Assemble and install support structures as shown in Figure 7.2 (without the saddle clamp covercaps and clips). Make sure the support clamp orientation is correct (with the small width of the wedge toward the

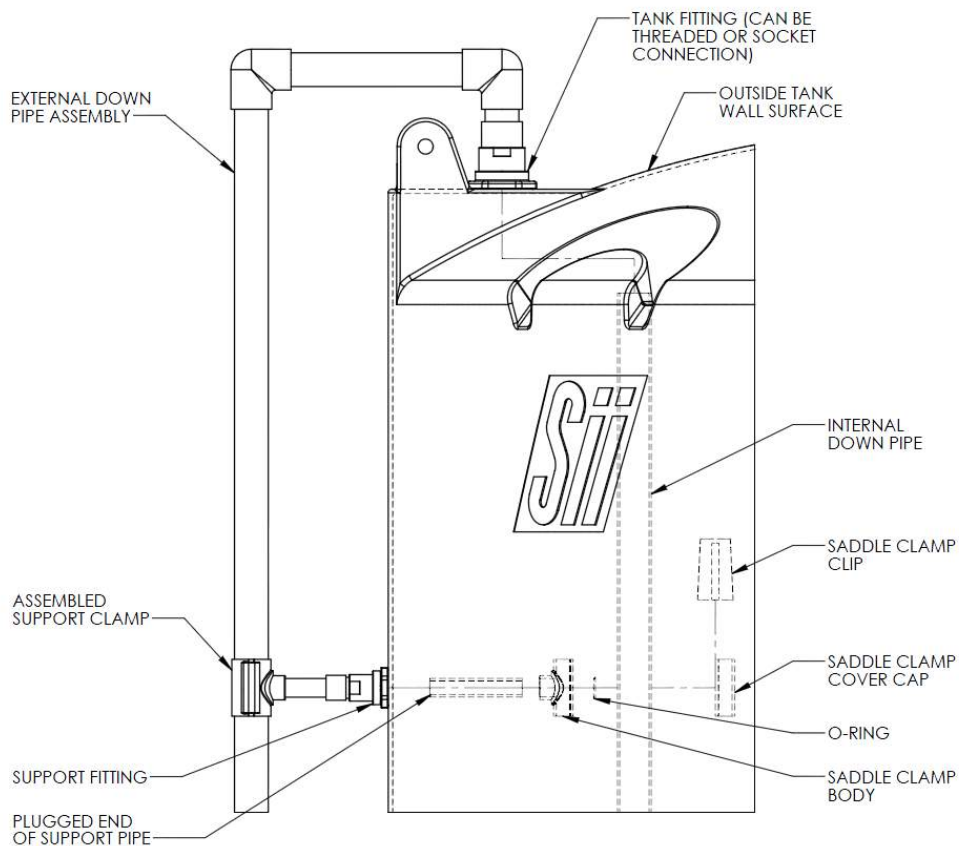


Figure 7.2

top of the tank) and that the plugged support pipes are installed with the plugged end as close to the support fitting as possible. Assemble and install piping as per the customer approved drawing. As piping is being installed on the tank, lock it in place with the saddle clamp cover caps and clips provided (make sure that the sealing o-ring is in the proper position as the pipe is positioned into the saddle support body). Seal all threaded pipe connections with Teflon pipe sealant and connect solvent weld sockets with solvent cement.

#### 7.4 DOWN PIPES (WELDED BOSS SUPPORTED) – INTERNAL ONLY

7.4.1 Down pipes are shipped loose and have been cut to size to meet customer specifications. To maintain warranty, all down pipes shall be supported at 5 ft. maximum intervals with the support structures provided. Internal down pipes are required to have 6" minimum clearance from the tank bottom. For tanks with an overall height greater than 150", the tank bottom clearance must be at least 4% of the overall tank height.

7.4.2 Assemble the piping loosely using Figure 7.3, the guidelines detailed below, and the customer approved tank drawing to ensure all parts are present and cut to meet the customer's requirements. As soon as all parts have been checked, assemble the parts with solvent weld cement and/or threaded connections as shown in Figure 7.3.

7.4.3 Assemble and install support structures as shown in Figure 7.3 (without the saddle clamp cover caps and clips). Since the support fitting does not penetrate the tank wall, the threaded connection to the support fitting does not need pipe sealant. Make sure the support clamp orientation is correct (with the small width of the wedge toward the top of the tank). Assemble and install piping as per the customer approved drawing. As piping is being installed on the tank, lock it in place with the saddle clamp cover caps and clips provided (make sure that the sealing o-ring is in the proper position as the pipe is positioned into the saddle support body). Seal all threaded pipe connections (except the support fittings) with Teflon pipe sealant and connect solvent weld sockets with solvent cement.

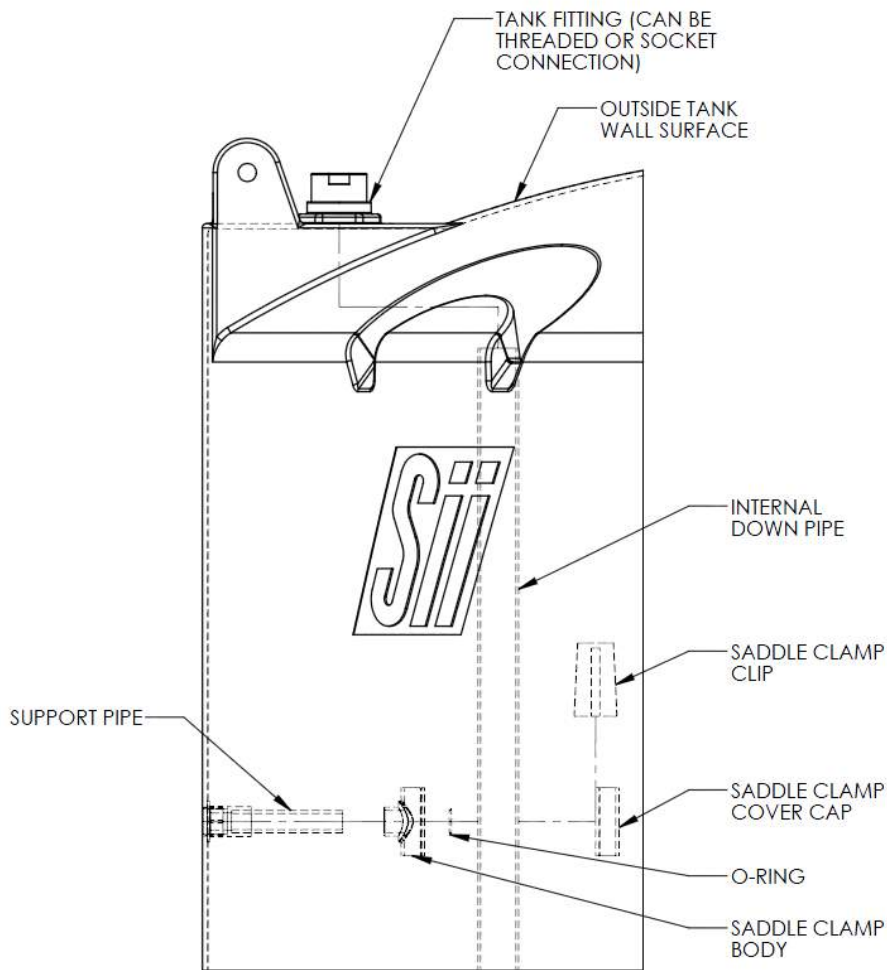


Figure 7.3

## 7.5 DOWN PIPES (WELDED PE SUPPORTED) – INTERNAL ONLY

7.5.1 Down pipes are shipped installed and have been cut to size to meet customer specifications. To maintain warranty, all down pipes shall be supported at 5 ft. maximum intervals with the support structures provided. Internal down pipes are required to have 6" minimum clearance from the tank bottom. For tanks with an overall height greater than 150", the tank bottom clearance must be at least 4% of the overall tank height.

7.5.2 Assemble the piping loosely using Figure 7.4, the guidelines detailed below, and the customer approved tank drawing to ensure all parts are present and cut to meet the customer's requirements. The piping should be inserted into the holes in the welded support structures prior to installing the fitting in the tank. As soon as all parts have been checked, assemble the parts with solvent weld cement and/or threaded connections as shown in Figure 7.4. Seal all threaded pipe connections with Teflon pipe sealant and connect solvent weld sockets with the correct type of solvent cement.

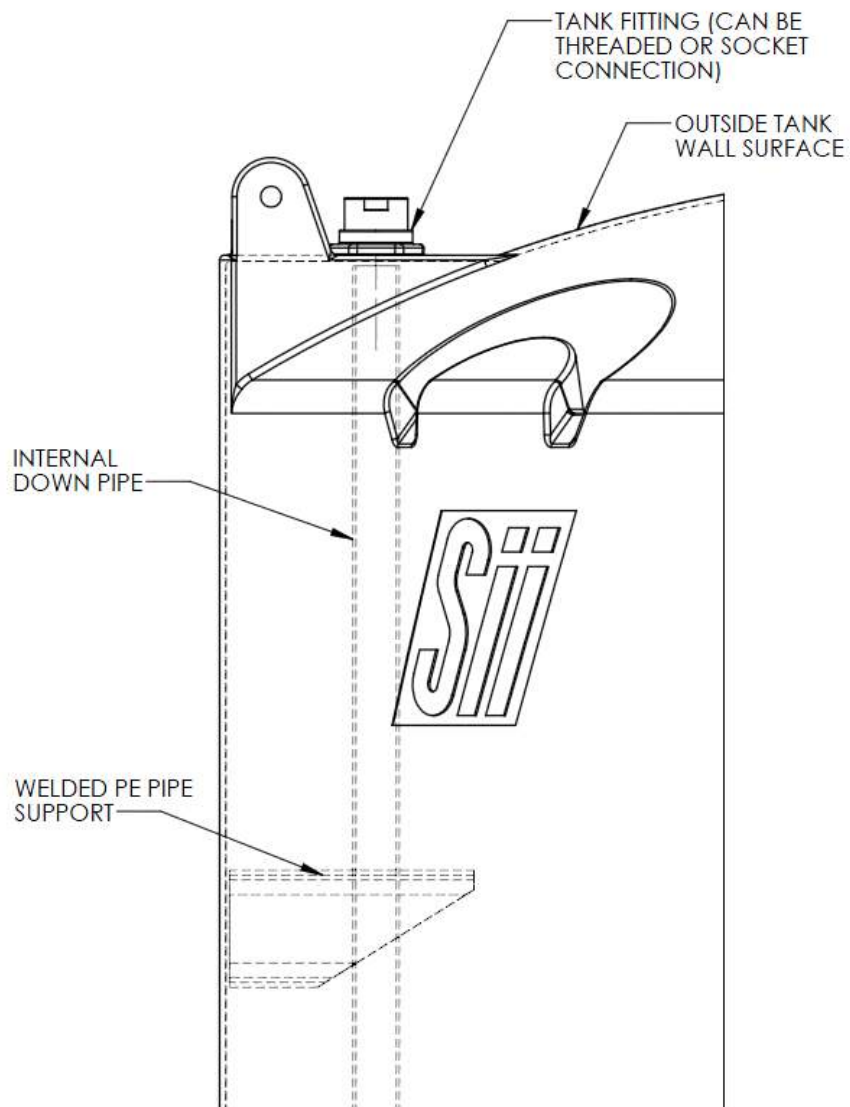


Figure 7.4

## 7.6 DOWN PIPE - INDEPENDENTLY SUPPORTED - (EXTERNAL ONLY)

7.6.1 Down pipes are shipped loose and have been cut to size to meet customer specifications. To maintain warranty, all down pipes shall be supported at 42 in. maximum intervals with the support clamps provided.

7.6.2 Assemble the piping loosely using Figure 7.5, the guidelines detailed below, and the customer approved tank drawing to ensure all parts are present and cut to meet the customer's requirements. Mark the strut post base on the concrete when in proper position. Install 4 ea. 3/8" adhesive anchors (customer supplied) and secure the base into position. As soon as all parts have been checked, assemble the parts with solvent weld cement and/or threaded connections as shown in Figure 7.5.

7.6.3 Assemble and install support structures as shown in Figure 7.5. Make sure the support clamps are spaced evenly. Locate the strut catchers and twist 90° to lock in place. Install the clamps to the strut catchers with the #10 screws provided. Clamps 3 in. and larger require 2 ea. strut catchers, #10 screws and #10 washers. The pipe will click into position in



the clamps. Make sure all clamps have clicked to full engagement and are tight. Assemble and install piping as per the customer approval drawing. Seal all threaded pipe connections with Teflon pipe sealant and connect solvent weld sockets with solvent cement.

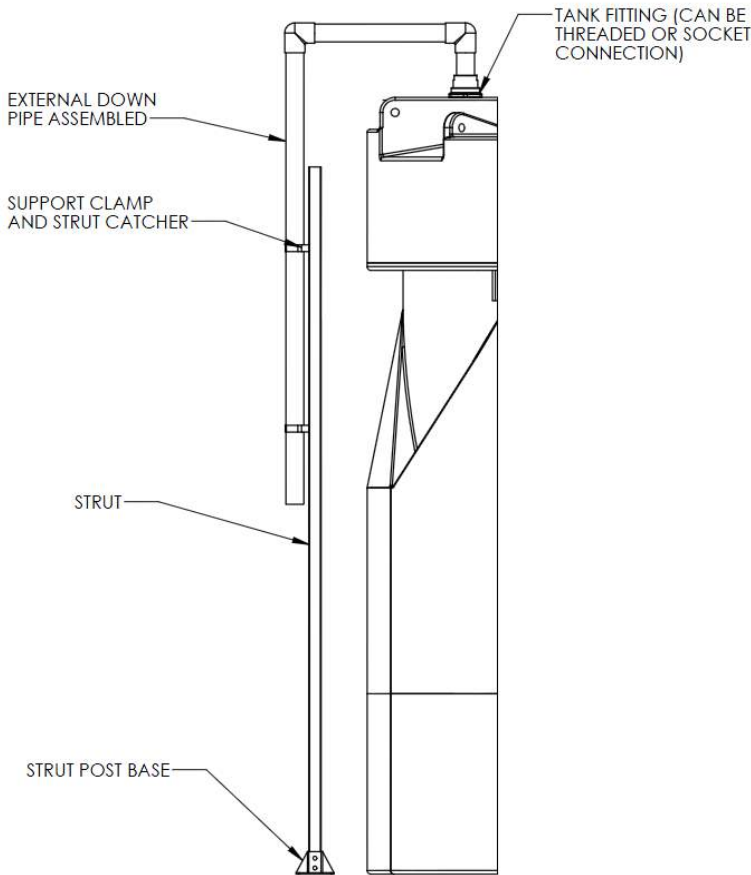


Figure 7.5

**7.7 FLEXIBLE SIGHT LEVEL GAUGES**

7.7.1 Sight level gauge assemblies are shipped loose and have been cut to size to meet customer specifications. Sight gauges may be ordered with either no valve, 1, 2, or 3 valves. Please refer to the customer approved drawing to determine the number of valves required.

7.7.2 Using the assembly drawings shown in Figure 7.6, verify that all parts are present and assemble the unit per the appropriate drawing. Seal all threaded pipe connections with Teflon pipe sealant. Gallonage decals may be purchased as separate items and customer applied to the tank to assist in indication of tank gallonage. NOTE - Gallonage decals are not available for all tank sizes.

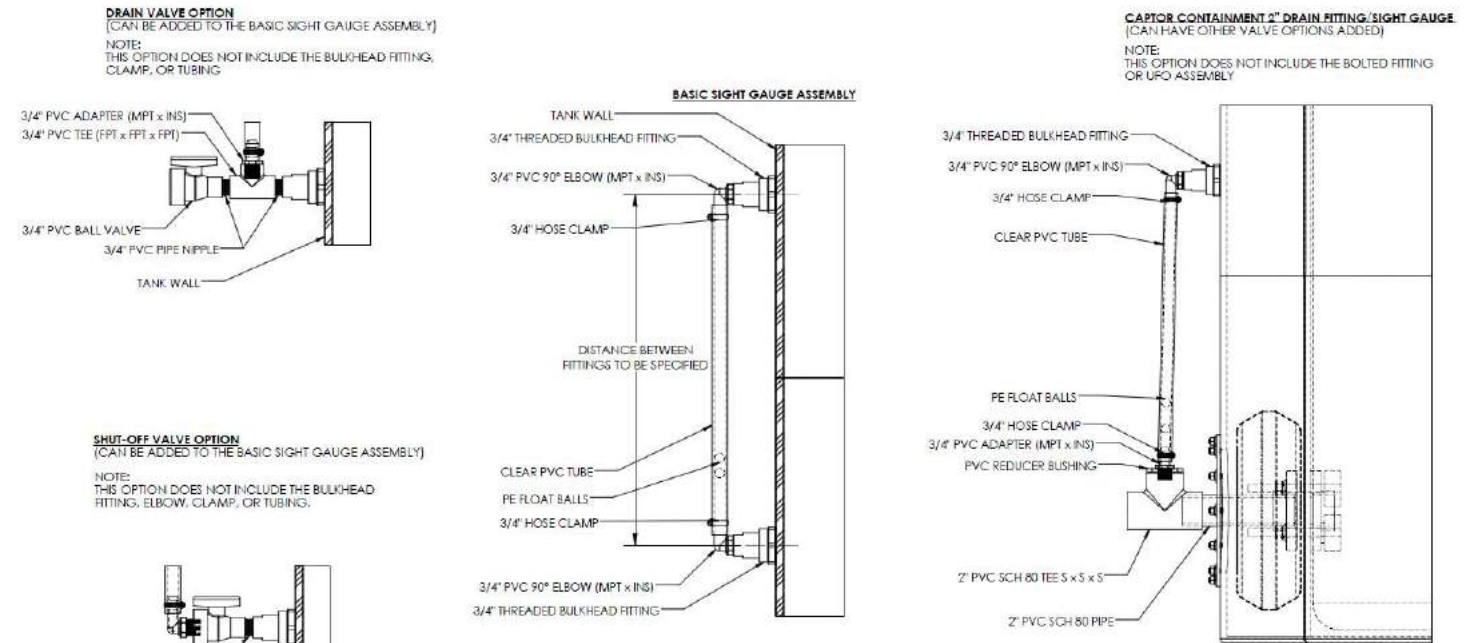


Figure 7.6

## 7.8 REVERSE LEVEL SIGHT GAUGE (SIDEWALL SUPPORTED – WITH SADDLE CLAMPS)

7.8.1 The component parts (except the rope) have been cut to meet SII and customer specifications. The sight gauge shall be supported at 5 ft. maximum intervals to the liquid holding tank with the support structures provided.

7.8.2 Assemble the piping loosely using Figure 7.7, the guidelines detailed below, and the customer approved tank drawing to ensure all parts are present and cut to length. As soon as all parts have been checked, assemble the parts with solvent weld cement and/or threaded connections as shown in Figure 7.7. NOTE - Do not use solvent weld cement on the outside joints indicated in Figure 7.7. SII recommends periodic inspection of the rollers in the tee assemblies and the rope to ensure proper operation of the gauge. If it is a requirement to seal these joints, a silicone based caulking should be sufficient.

7.8.3 Assemble and install the support structures as shown in Figure 7.7 (without the saddle clamp cover caps and clips). Make sure the support clamp orientation is correct (with the small width of the wedge toward the top of the tank) and that the plugged support pipes are installed with the plugged end as close to the support fitting as possible. Make sure that the indicator board has been installed over the outer pipe supports as shown in Figure 7.7. Assemble and install piping as per the customer approved drawing. As piping is being installed on the tank, lock it in place with the saddle clamp cover caps and clips provided (make sure that the sealing o-ring is in the proper position as the pipe is positioned into the saddle support body). Seal all threaded pipe connections with Teflon pipe sealant and connect solvent weld sockets with the correct solvent cement (except the joints as noted in Figure 7.7).

7.8.4 With the inner and outer tank pipes in place, connect the rope provided to the tank float (This is accomplished by threading the rope through the center hole in the float and out one of the side holes, double knotting the rope, cutting off any excess material and pulling the rope back so the knot holds under the center hole) and lower it into the inner pipe as shown. Thread the rope through the tee assemblies and the connecting pipe as shown. At this point the float should be at the bottom of the tank, the tee assemblies and connecting pipe should be assembled and sitting off at an angle from the outer clear 2" PVC pipe. With the rope threaded through the outer tee assembly, attach the rope to the indicator in a position parallel with the zero mark on the indicator board. (This is accomplished by threading the rope through the center hole in the indicator, double knotting the rope, checking the indicator position, adjusting as necessary and cutting any excess material protruding from the bottom of the indicator.) Put the indicator into the outer clear 2" PVC pipe while swinging the

tee assemblies and connecting pipe into position. With all piping and tee assemblies installed, install the 3" PVC pipe plugs. During the tank hydrotest and first operations of the tank, check the gauge for proper level indication and adjust as necessary. NOTE - This is a gallonage indicator and is not intended as an accurate measuring device.

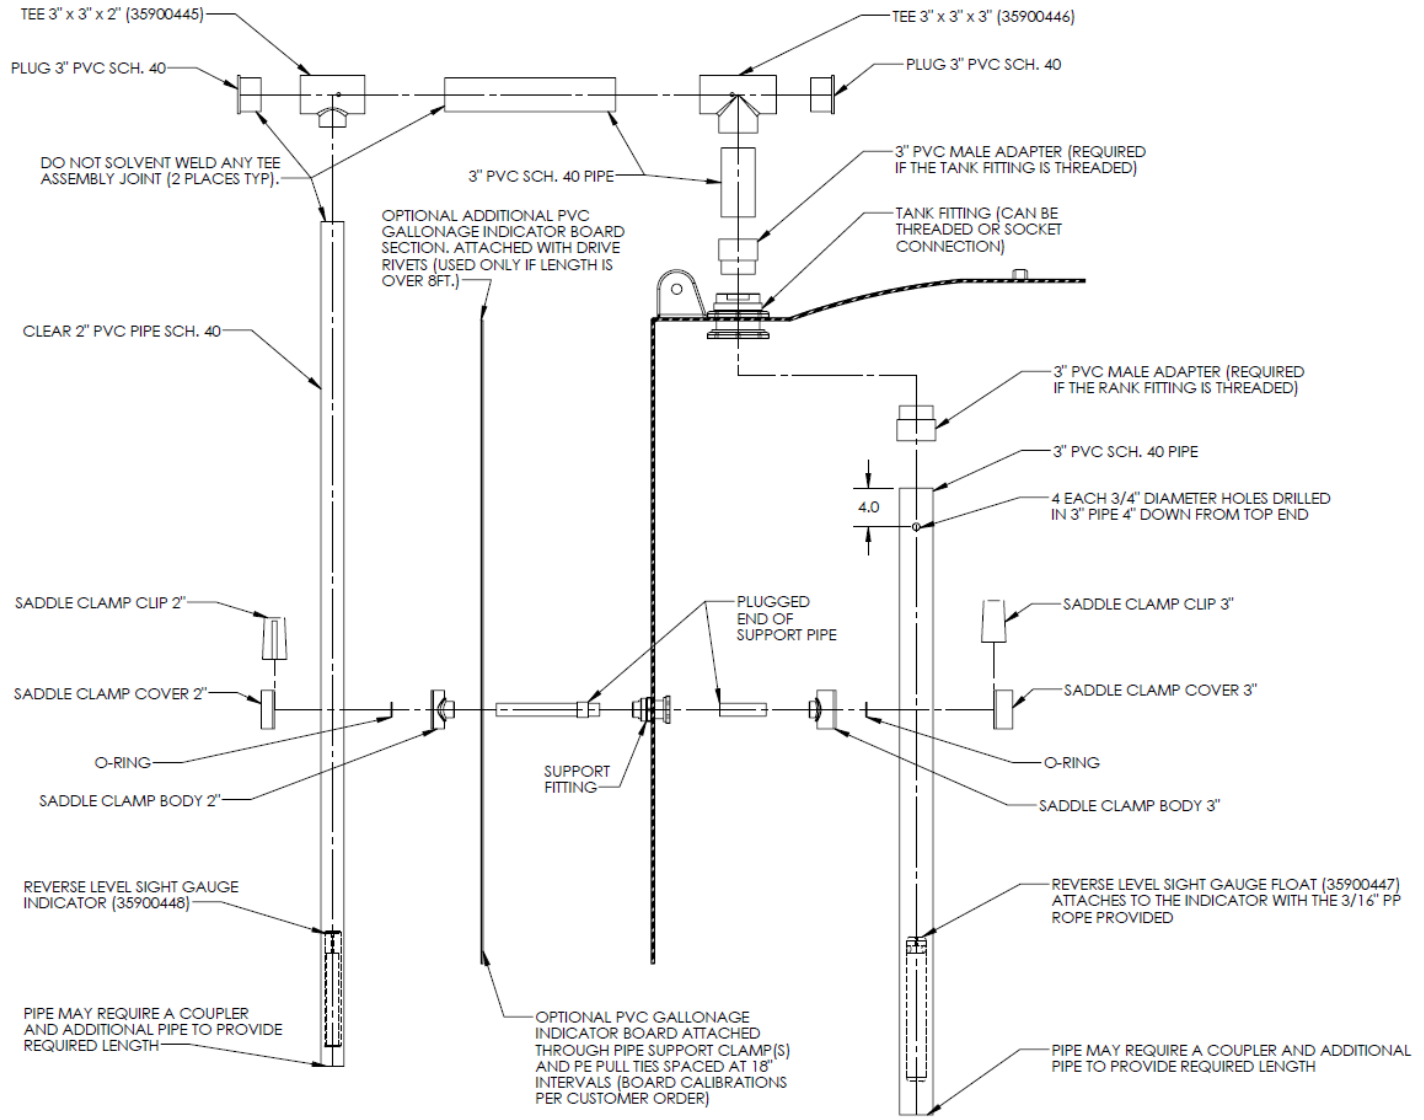


Figure 7.7

**7.9 REVERSE LEVEL SIGHT GAUGE (GROUND SUPPORTED – WITH FRP STRUT SYSTEM)**

7.9.1 The component parts (except the rope) have been cut to meet SII and customer specifications. The external piping of the sight gauge shall be supported at 24 in. to 42 in. intervals to the FRP strut channel with the strut catchers and pipe clamps provided. Internal piping and welded supports will be installed in the factory by SII prior to shipping.

7.9.2 Assemble the piping loosely using Figure 7.8, the guidelines detailed below, and the customer approved tank drawing to ensure all parts are present and cut to length. As soon as all parts have been checked, assemble the parts with solvent weld cement and/or threaded connections as shown in Figure 7.8. NOTE - Do not use solvent weld cement on the PVC plugs as indicated in Figure 7.8 to allow for periodic inspection of the rollers in the tee assemblies and the rope to ensure proper operation of the gauge. If it is a requirement to seal these joints, a silicone based caulking should be sufficient.

7.9.3 Mark the strut post base on the concrete when in proper position. Install 4 ea. 3/8" adhesive anchors and secure the base into position. Make sure that the gallon indicator board (if ordered) has been installed between the strut catcher and pipe clamp as shown in Figure 7.8. Assemble and install piping as per the customer approved drawing. As piping is being installed on the tank, squeeze the pipe clamps together to secure the pipe to the FRP channel.

7.9.4 With the inner and outer tank pipes in place, connect the rope provided to the tank float (This is accomplished by threading the rope through the center hole in the float and out one of the side holes, double knotting the rope, cutting off any excess material and pulling the rope back so the knot holds under the center hole.) and lower it into the inner pipe as shown. Thread the rope through the tee assemblies and the connecting pipe as shown. At this point the float should be at the bottom of the tank, the tee assemblies and connecting pipe should be assembled and sitting off at an angle from the outer clear 2" PVC pipe. With the rope threaded through the outer tee assembly, attach the rope to the indicator in a position parallel with the zero mark on the indicator board. (This is accomplished by threading the rope through the center hole in the indicator, double knotting the rope, checking the indicator position, adjusting as necessary and cutting any excess material protruding from the bottom of the indicator.) Put the indicator into the outer clear 2" PVC pipe while swinging the tee assemblies and connecting pipe into position. With all piping and tee assemblies installed, install the 3" PVC pipe plugs. During the tank hydrotest and first operations of the tank, check the gauge for proper level indication and adjust as necessary. NOTE - This is a gallonage indicator and is not intended as an accurate measuring device.

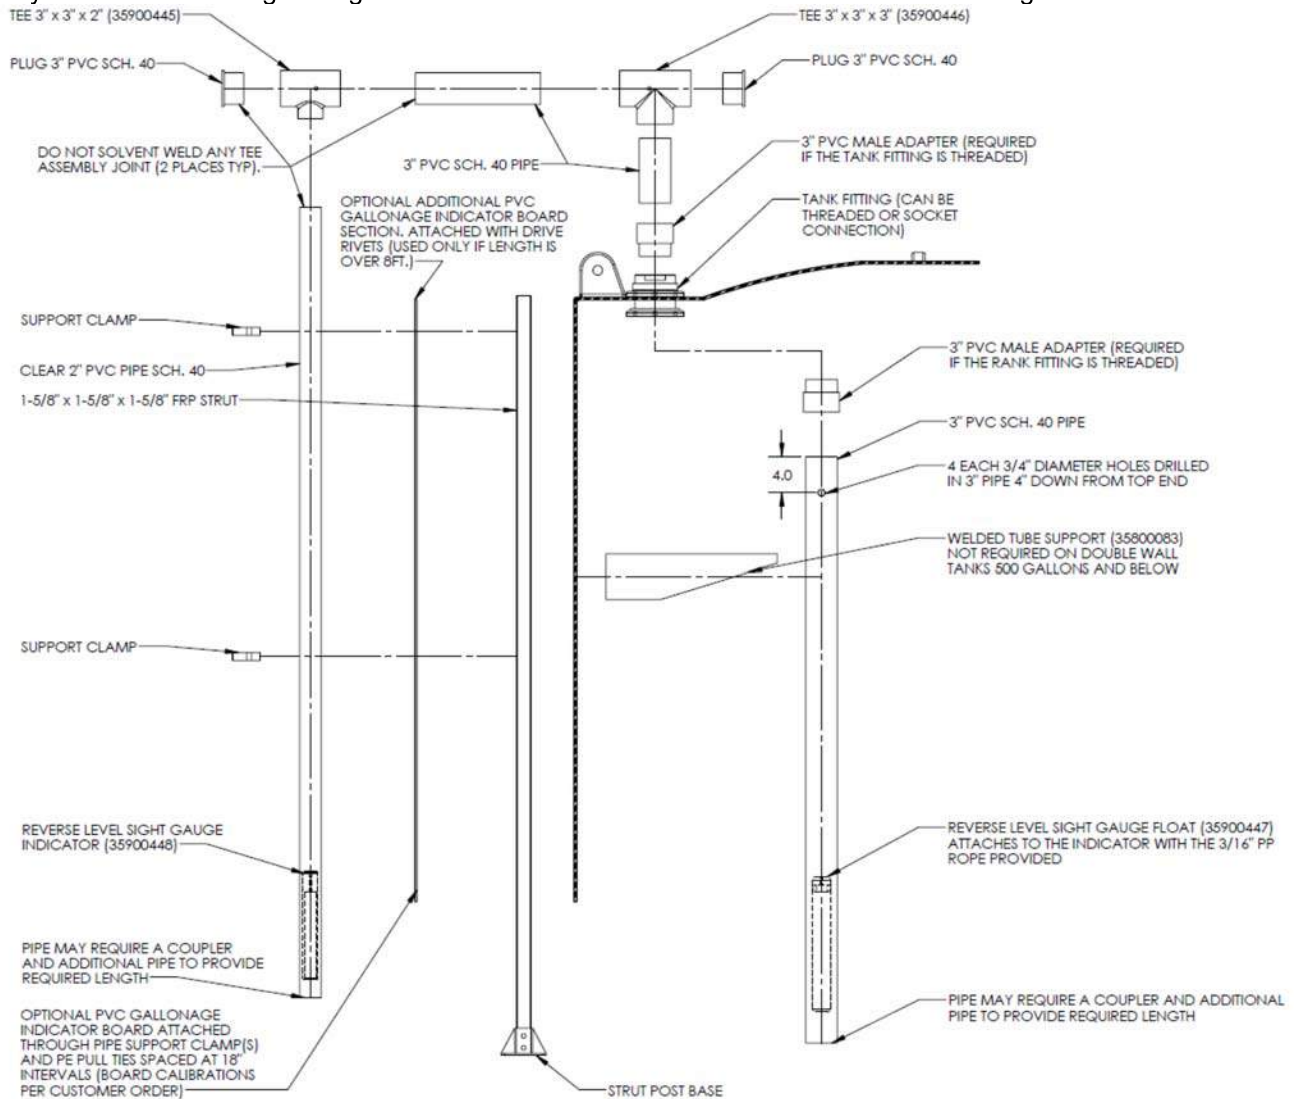


Figure 7.8

## 7.10 ULTRASONIC LEVEL INDICATOR

7.10.1 Install the PE bulkhead fitting per section 6.1 for sensors with male pipe threads. Install the sensor into the fitting with Teflon® pipe sealant. Remove the display unit box cover. Attach the display unit to the PE mounting plates provided on the tank with 4 ea. #10 S.S. Self-tapping screws. Attach the sensor cable to the control box with small strain relief and connect wires per label in the box. Please see Figure 7.9 below for sensor wire attachment information. Attach the unit to 110 VAC and test unit. The display unit is preprogrammed for the tank ordered. Refer to literature shipped with unit to answer any additional questions.

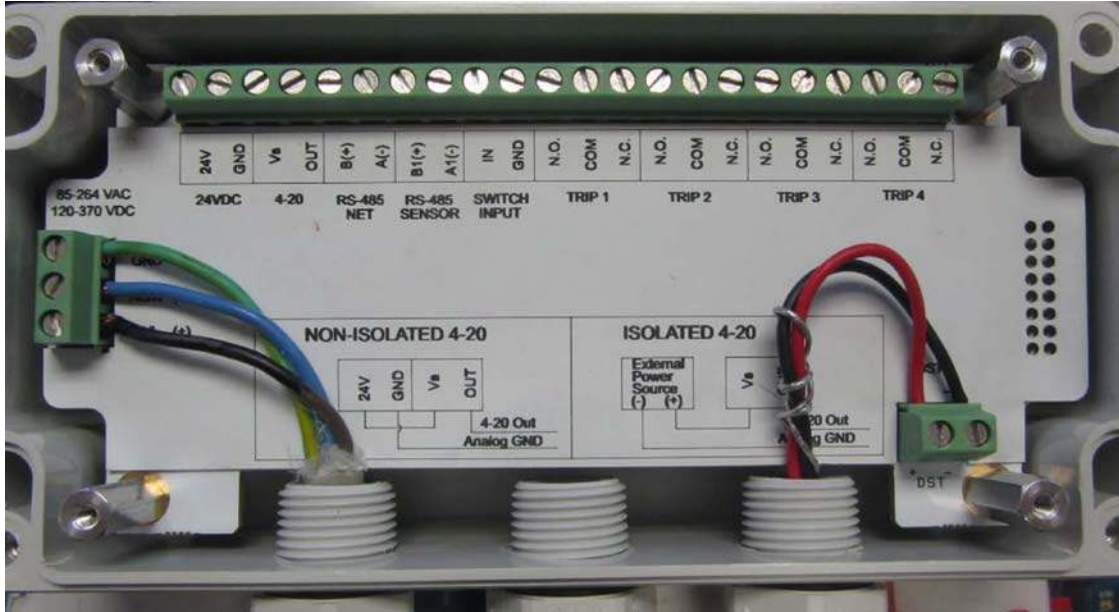


Figure 7.9

## 7.11 LEAK DETECTOR UNIT (FOR USE WITH CAPTOR CONTAINMENT TANKS ONLY)

7.11.1 The leak detector unit consists of a proximity sensor, 2 in. FPT fitting connection, 2 in. bung plug, 3/4 in. strain relief, and an indicator box. Install the 3/4 in. strain relief into the 2 in. bung plug. Loosely install the proximity sensor cord into the strain relief with the sensor face to the inside of the plug assembly. Make sure the proximity sensor is set to NC (normally closed). Place the sensor in the interstitial space between the primary and secondary tanks approximately 1 in. above the tank bottom and securely tighten the strain relief to hold the sensor and sensor cord into position. Remove the indicator box cover. Attach the indicator box to the PE mounting plates provided on the tank with the 2 ea. #10 S.S. self-tapping screws. Attach the sensor cable to the control box with small strain relief and connect wires per label in the box. Please see Figure 7.10. Connect unit to 110 VAC per label in the box using strain relief provided or other acceptable methods and test the unit. The indicator box will show a green light when power is on and the sensor is not detecting a liquid. The light is a push to test light allowing the operator to test for power outage or malfunction. If the green light goes out there are two possibilities. If the green light does not come on when the button is pushed, this would indicate a lack of power to the unit or the light bulb is burned out. If the green light comes on when pushed, then a possible leak condition is indicated.



Figure 7.10

## 7.12 FLANGE ADAPTERS

7.12.1 Standard flange adapters are constructed from PVC or CPVC and may be purchased for solvent weld socket fittings or threaded fittings. Flange adapters for threaded fittings are provided with loose male adapter to allow the customer to adjust adapter length and flange position to match the piping at the installation. Refer to Figure 7.11 for an illustration of a flange adapter.

7.12.2 When installing the flange adapter in a solvent weld socket fitting, cut the flange adapter pipe to desired length (factory supplied 12" length) and solvent weld the flange adapter with the proper solvent cement in the desired position in a previously installed fitting. If the flange adapter is to be used in a threaded fitting, install the male adapter into the fitting with Teflon<sup>®</sup> pipe sealant, cut the flange adapter to the desired length, and solvent weld the flange adapter to the male adapter in the desired position with the proper solvent cement.

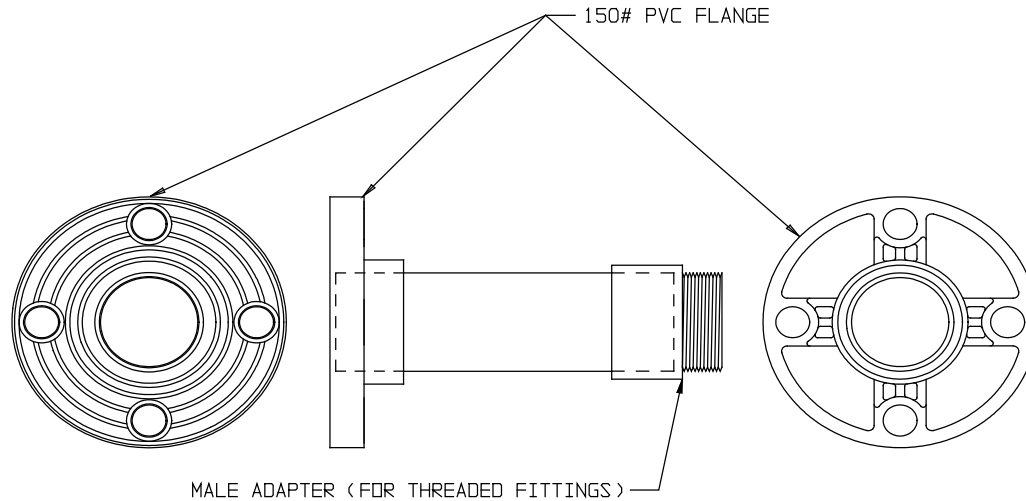


Figure 7.11

### 7.13 Flexmaster Expansion Joints

#### 7.13.1 Service Conditions:

- .2. The expansion joints are intended for use in low pressure (< 20 PSIG) piping applications or for use as the inlet of a flooded suction feed connection. The maximum use temperature of the expansion joints is 130°F for HDLPE materials and 140°F for XLPE materials.
- .3. The application must be properly defined for the expansion joint. Application design movement must not exceed the design movement of the expansion joint. Please refer to the chart attached for design movement capabilities and spring rates. Also refer to the piping examples for proper installation examples. If the application exceeds the design capabilities of the expansion joint, please contact the manufacturer.

#### 7.13.2 Alignment:

- .1. Expansion joints are not designed to make up for piping misalignment error. Pipe misalignment should be no more than ¼" in any direction.

#### 7.13.3 Pipe Support:

- .1. Piping must be supported in all directions so expansion joints do not carry any piping weight. Pipe supports should be placed directly after the Flexmaster. Do not place pipe support in front of the Flexmaster that can restrict pipe movement/deflection.

#### 7.13.4 Installation:

- .2. Unbolt and remove split flanges from the faces of the expansion joint. Check to make sure the flange faces are clean and free of foreign materials. Flange faces should be free of any scratches or nicks. If scratches or nicks occur, sand the surface smooth with 220 grit sand paper using a random orbital sander.
- .3. Locate the expansion joint between two 150# flanges spaced for the prescribed neutral length + ½" (the thickness of two full face 150# flange gaskets). Install bolts as shown in the drawing below. To obtain proper gasket compression, tighten all the fitting nuts hand tight using an opposing bolt tightening sequence until the gaskets engage the flanges and the lock washers are compressed. Tighten each nut an additional 5/8 turn – 1-3/8 turns using the same sequence (do not tighten more than 1/2 turn at a time). A light application of lubricating oil is nec-

essary to prevent thread seizing on S.S. bolts. Gasket compression should be between 25 - 50%. Tighten bolts to achieve gasket compression. Recheck fitting tightness periodically.

FLEXMASTER EXPANSION JOINTS											
NOMINAL SIZE	I.D.	NEUTRAL LENGHT (IN.)	+/- AXIAL MOVEMENT	+/- LATERAL MOVEMENT	ANGULAR DEFLECTION	AXIAL SPRING RATE LBS/IN	LATERAL SPRING RATE LBS/INS	# HOLES	BOLT PATTERN	BOLT SIZE	WEIGHT (LBS)
2		20.71	4	2	5	N/A	N/A	4	150#	5/8"	8.44
3		31.5	4	2	5	27.3	6.6	4	150#	5/8"	13.86


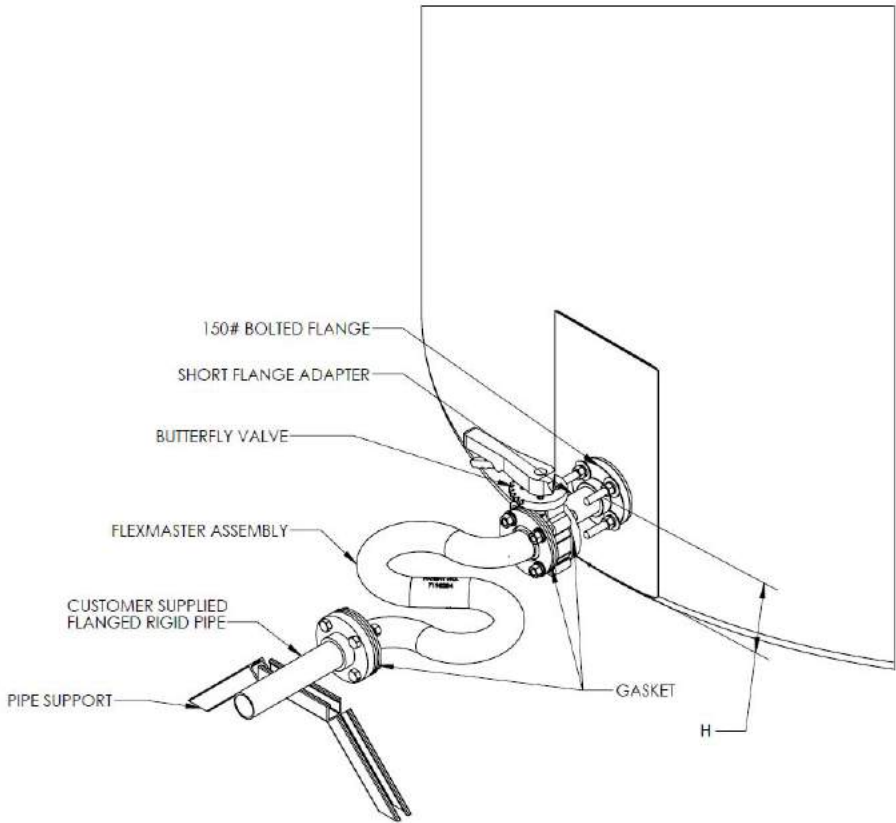


Figure 7.12




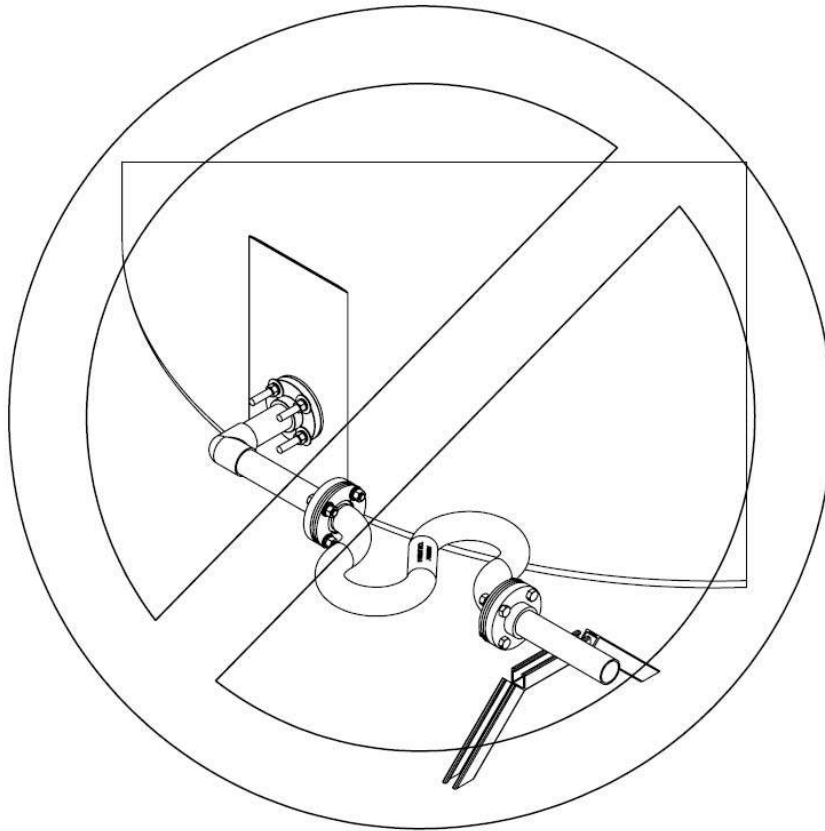

**THIS IS AN UNACCEPTABLE FLEXMASTER EXPANSION JOINT INSTALLATION**

**FIGURE 7.12.1**

With the Flexmaster expansion joint installed horizontally as shown in the example above, dimension “H” can be up to 50” maximum and still meet the SII recommendation of 4% dimensional movement design. If the height of the fitting is above 50”, install the Flexmaster in a vertical configuration as shown in Figure 7.14.

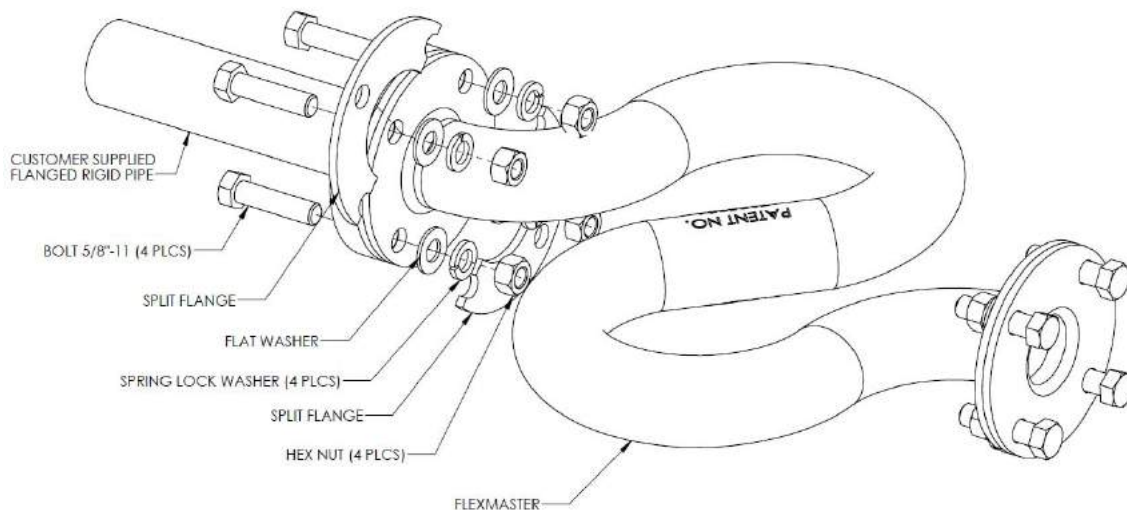

**Figure 7.13 – Exploded Assembly**

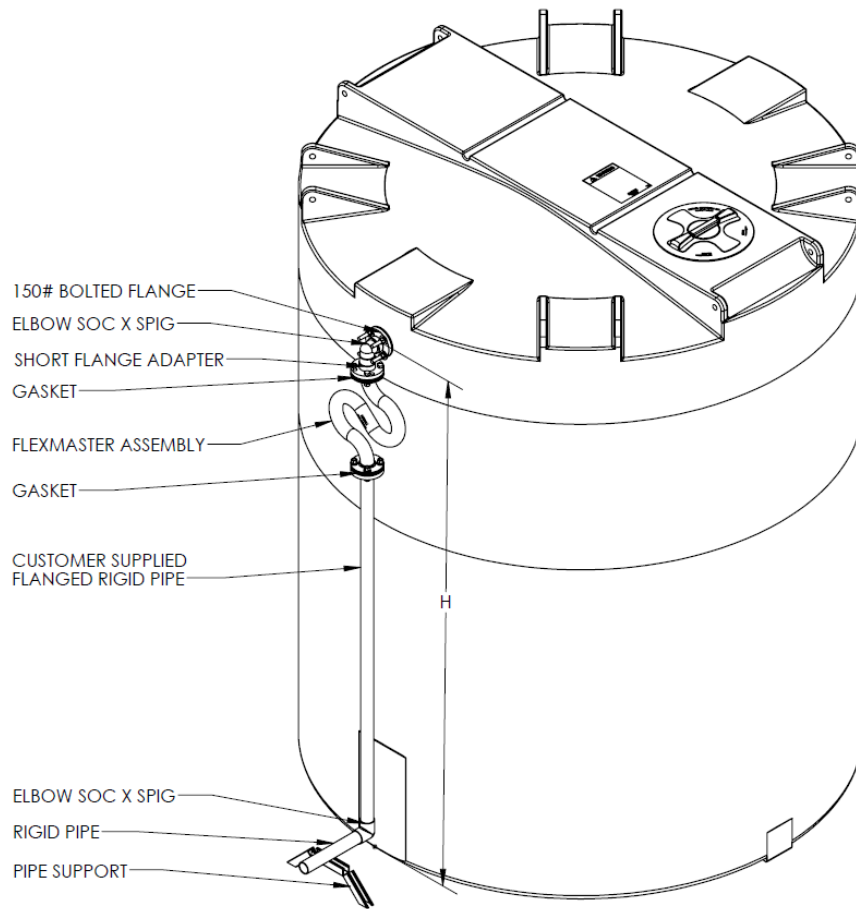


Figure 7.14


With the Flexmaster expansion joint installed vertically as shown in the example above, dimension "H" can be up to 100" maximum and still meet the SII recommendation of 4% dimensional movement design. If the height of the fitting is above 100", an additional Flexmaster can be installed in the vertical configuration to provide additional movement capability.

## 8. TANK ACCESSORIES

### 8.1 LATERAL RESTRAINT SYSTEM (FLAT BOTTOM TANKS)

8.1.1 The lateral restraint system is designed for tank position restraint on a concrete pad inside of an enclosed building. **It is not designed for wind or seismic restraint capabilities.** Using the assembly drawing and table shown in Figure 8.1, verify that all parts are present.

8.1.2 Locate the tank on the concrete pad as desired. The pad required for the restraint system must be 18-3/4" larger in diameter than the tank diameter for proper application of 1/2" adhesive anchor bolts (assumes 6-3/8" edge distance required). Lay out the bands around the tank (alternate long bands and short bands if both lengths are provided) with the studs and angle ends sticking out away from the tank. Fasten the bands together with the 3/8" - 16 x 4" hex head bolts as shown in the drawing. Raise the bands 17" and loosely install the anchor clips using the 1/2" - 13 hex nuts and 1/2" washers provided. Tighten the 3/8" - 16 x 4" hex head bolts to remove band looseness. Mark the slot locations of the anchor clips, remove the clips, and install the required number of 1/2" anchor bolts. Anchor bolts are not provided by the manufacturer and must be purchased by the customer.

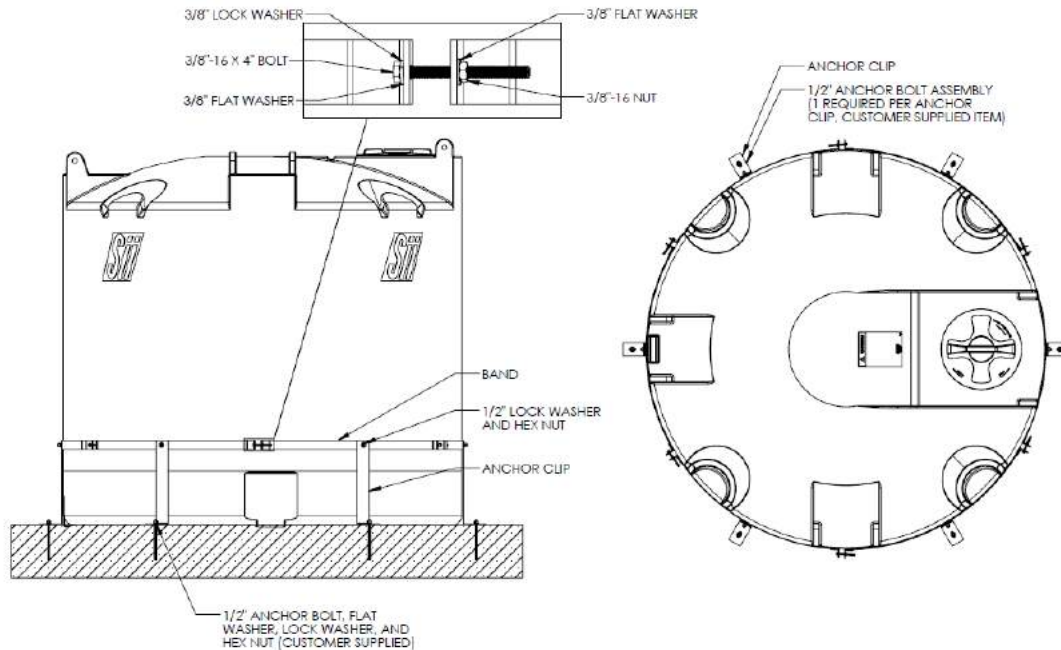

TANK DIA. (IN.)	QUANTITY REQUIRED					
	BAND 44 IN.	BAND 48 IN.	ANCHOR CLIPS	3/8-16 X 4\"/>		
48	0	3	3	3	6	3
64	0	4	4	4	8	4
86	5	0	5	5	10	5
90	3	3	6	6	12	6
102	7	0	7	7	14	7
120	4	4	8	8	16	8
137	4	5	9	9	18	9
142	0	9	9	9	18	9

Figure 8.1

8.1.3 Replace the anchor clips and secure the clips to both bands and the concrete pad. Do not over tighten the bands to the tank. The band tension should only remove looseness and not cause any tank deflection.

## 8.2 WIND/SEISMIC TANK RESTRAINT SYSTEM (FLAT BOTTOM TANKS)

8.2.1 The wind/seismic tank restraint system is designed for tank restraint on an appropriate concrete pad under 150 MPH wind or IBC/CBC seismic requirements. Site specific calculations are available from Snyder Industries as a purchased option. Using the assembly drawing and table sent with the assembly, verify that all parts are present. Please see Figure 8.2 for a restraint system installation and assembly information.

8.2.2 Locate the tank on the concrete pad as desired. Lay out all anchors required (4 or 8) equally spaced, (4 anchors must be directly below the tank tie down locations). Make sure all anchors are located next to the tank with the front face of the anchor weldment located next to the tank. Mark all the anchor bolt locations, remove the anchors and install the required Hilti adhesive model HVA anchor bolts as specified in the assembly drawing and table sent with the assembly. These anchor bolts are not provided by the manufacturer and must be purchased by the customer. Customer must follow all Hilti anchor bolt installation instructions.

8.2.3 Replace the anchors and secure the anchors to the concrete. Fasten the tank to the concrete pad with the required cable (make sure the cable sheath is on the cable and located around the lug locations) as shown by the assembly drawing utilizing the cable thimbles and clamps provided. Tension the cable before filling the tank to remove cable looseness. Do not over-tension the cables as this may cause tank damage. The cable tension will change with tank loading and temperature changes - DO NOT re-tension the cables.

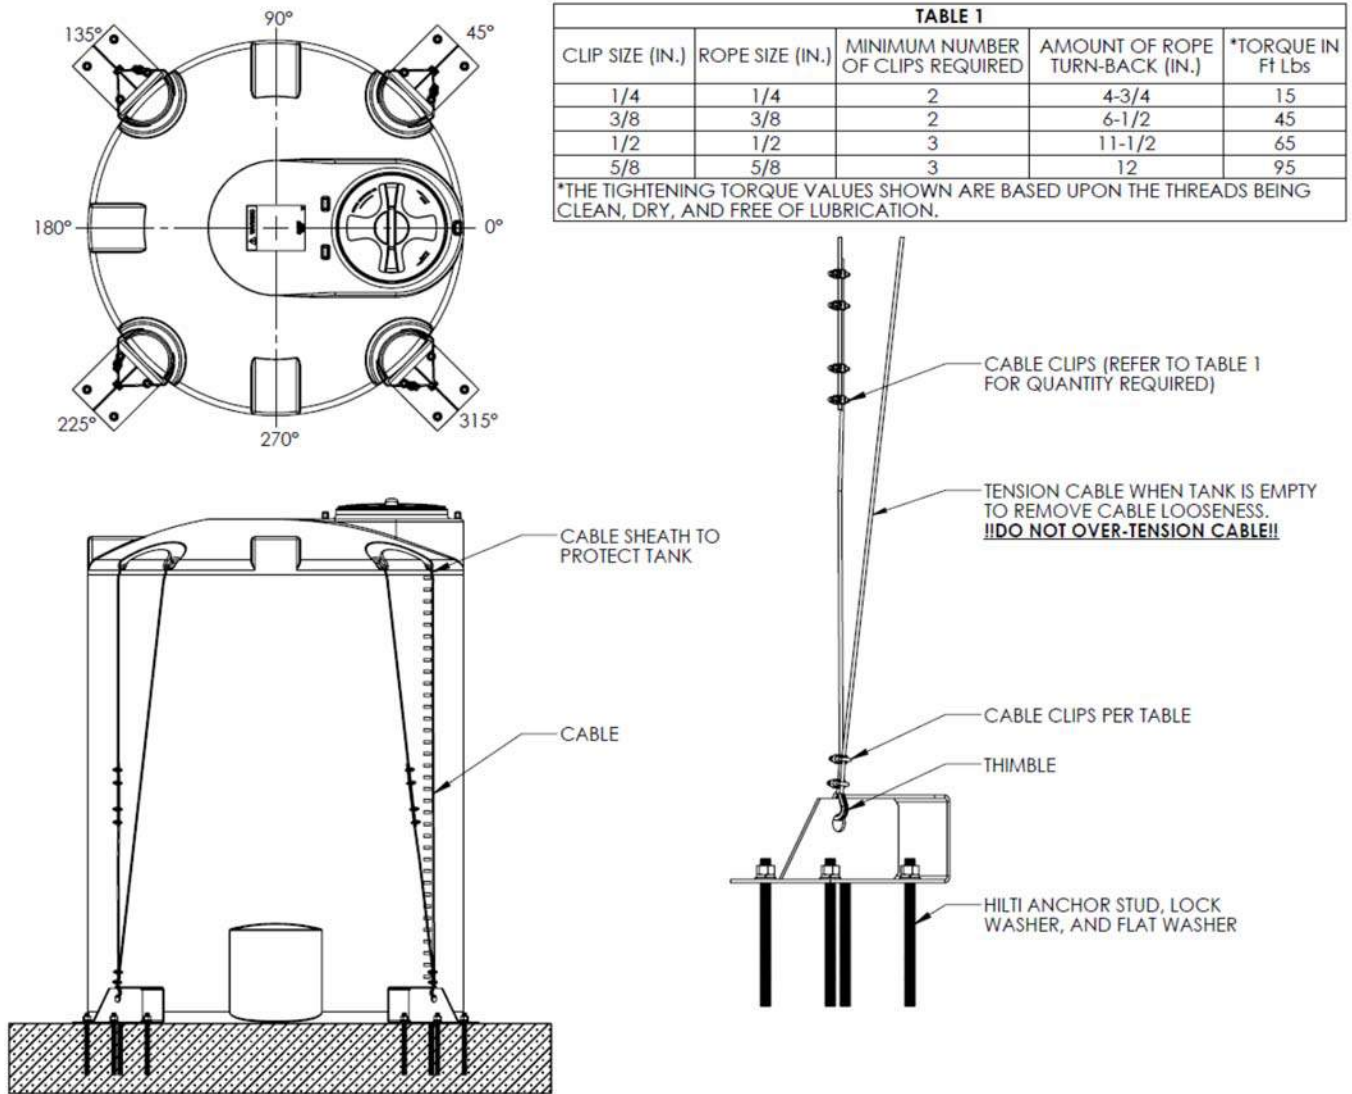


Figure 8.2

### 8.3 WIND/SEISMIC TANK RESTRAINT SYSTEM (CONE BOTTOM TANKS)

8.3.1 The wind/seismic tank restraint system is designed for cone bottom tank restraint on an appropriate concrete pad under 150 MPH wind or IBC/CBC seismic conditions using a SII cone stand for proper tank support. Using the assembly drawing and table shown in Figure 8.3, verify that all parts are present.

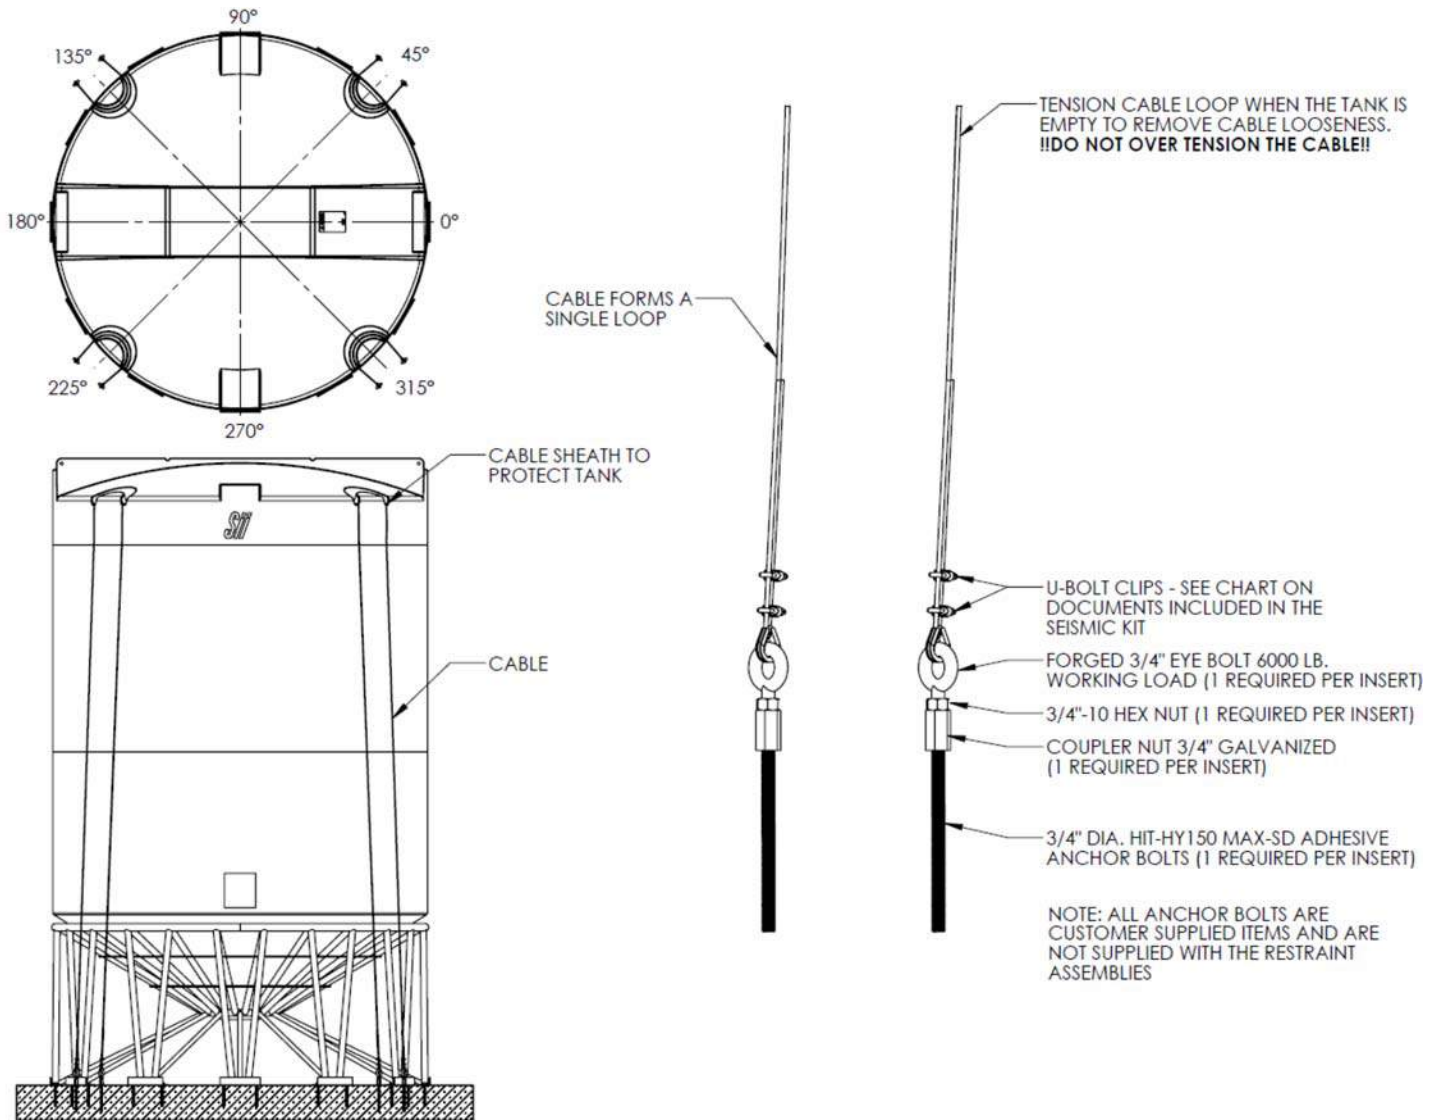


Figure 8.3

8.3.2 Locate the tank and stand on the concrete pad as desired. The pad required for the restraint system must be 24" larger in diameter than the tank diameter for proper application of 3/4" adhesive anchor bolts (assumes 10" edge distance required). Lay out the four anchors provided directly below the tank tie down locations. Make sure all anchors are located so the hole in the anchor aligns with the tank wall. Mark all the anchor bolt locations (stand and anchor positions), remove the stand and anchors and install the required Hilti adhesive model HVA anchor bolts as specified by the assembly drawing and the SII seismic restraint drawing B-3182. These anchor bolts are not provided by the manufacturer and must be purchased by the customer.

8.3.3 Replace the stand and anchors and secure to the concrete pad. Install the 3/4" eyebolts loosely as shown by the drawing. Fasten the tank to the concrete pad with the required cable (make sure the cable sheath is on the cable and located around the lug locations) as shown by the assembly drawing utilizing the cable thimbles and clamps provided. Tension the cable before filling the tank to remove cable looseness. Do not over-tension the cables as this may cause tank damage. The cable tension will change with tank loading and temperature changes - **DO NOT** re-tension the cables.

#### 8.4 WIND/SEISMIC TANK RESTRAINT SYSTEM (DUAL CONTAINMENT TANK)

8.4.1 The wind/seismic tank restraint system is designed for dual containment tank restraint on an appropriate concrete pad under 150 MPH wind. Using the assembly drawing and table shown in Figure 8.4, verify that all parts are present.

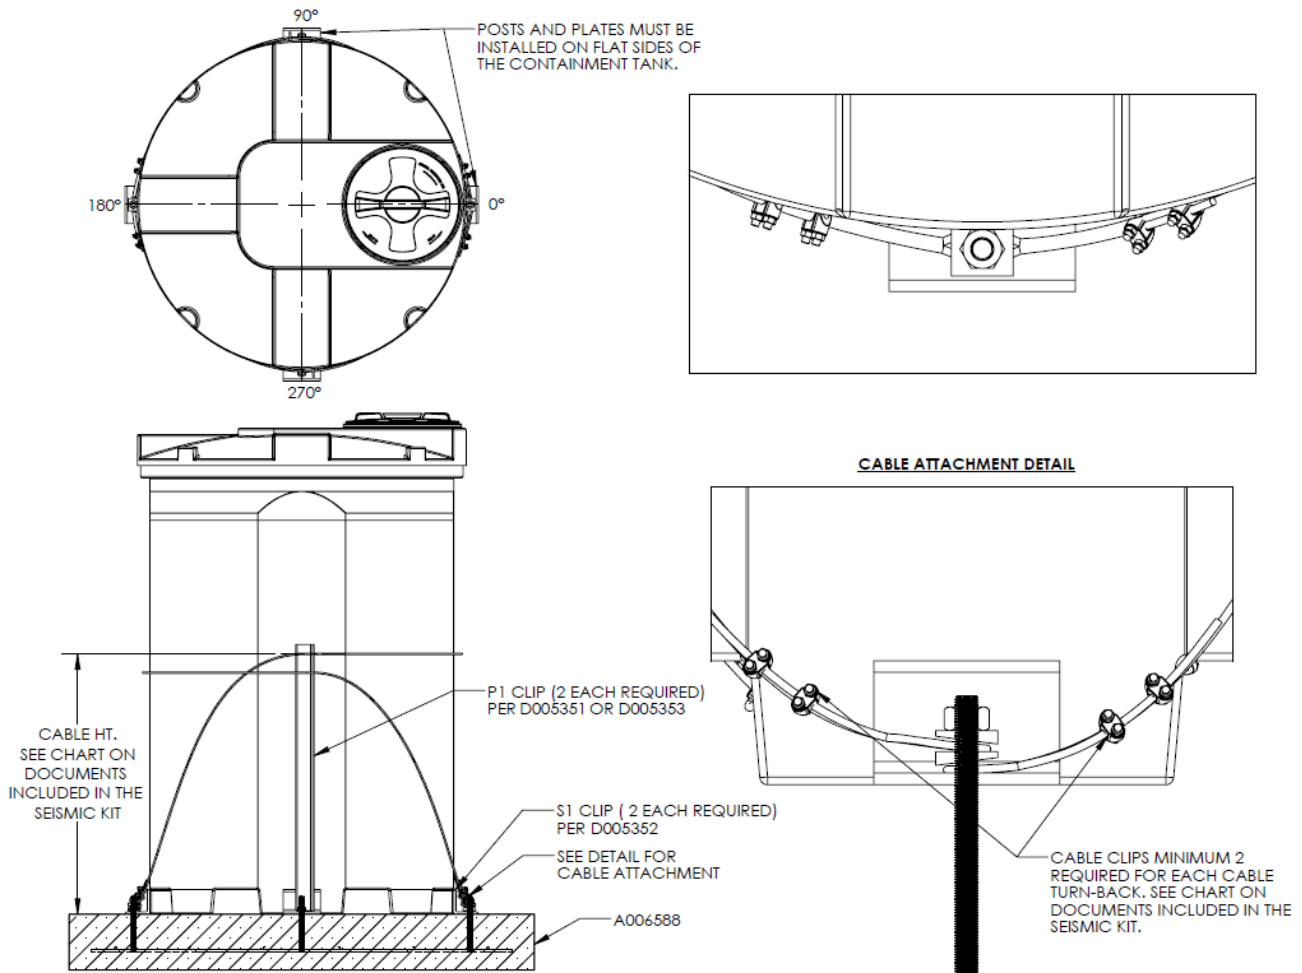


Figure 8.4

8.4.2 All construction shall meet local building code requirements and be approved by the building official. These guidelines have been provided to specify the restraint recommendations for Snyder Industries bulk storage tanks. The concrete shall have a minimum design as per drawing referenced in the specification chart above. Concrete pad design should be reviewed and approved by the building official based on specific application as other design parameters are possible depending upon site conditions.

8.4.3 All structural steel components shall be new and of basic open hearth process steel conforming to all applicable requirements of ASTM A36 (structural steel for bridges and buildings –  $F_y = 36,000$  psi. All arc welding electrodes shall conform to ASTM A233 for steel arc welding electrodes. Electrodes shall be as recommended by the manufactures for the positions and other conditions of actual use. Welding shall conform to requirements of American Welding Society AWS 0121. All sharp edges and corners shall be removed on all structural steel components. Cables to be 7 X 19 stranded core construction sized per chart above. Material to be specified by customer order (minimum breaking strength equal to or greater than 304 SS rating). Anchor bolts to be HILTI adhesive anchors, model HIT-RE 500-SD with size, material, and embedment as specified per specification chart above. Special inspection is required. All other fastener materials must correspond to the type of anchor selected.

## 8.5 STEEL LADDERS

---

8.5.1 Steel ladders are designed in accordance with OSHA 1910.27 and are to be mounted next to the tank on a concrete pad at the same elevation as the bottom of the tank. The concrete pad area that the ladder mounts to must be of sufficient size as to comply with OSHA standards regarding proper access to and from the ladder. This should be determined by the construction site engineer based on the specific application. The pad must be of sufficient size to allow proper attachment of 1/4" anchor bolts (check with anchor bolt manufacturer for embedment and edge distance required). The ladder mounting system is designed to allow for tank expansion and contraction due to temperature and loading changes. Using the assembly drawing and table shown in Figure 8.5, verify that all parts are present and assemble accordingly.

**NOTE: This ladder is provided for tank inspection only. At no time should the operator step off this ladder onto the tank unless stepping onto an approved work platform with guard rails or utilizing some other approved safety device.** Proper safety equipment, (i.e. guard rails, safety harness, etc.) must be used to step onto the tank. Consult applicable regulations to determine proper equipment for other than inspection work.

8.5.2 Attach the two pivoting attachment arms to the ladder using 1 ea. 1/2"-13 x 2" hex head bolt and 2 ea. 1/2" - 13 hex nuts. Double nut each bolt by tightening the first nut to 75 ft. - lbs. of torque and then jamming the second nut to the first nut by holding the first nut and tightening the second to 75 ft. - lbs. of torque. Position the ladder on the tank and attach the top pivoting attachment arms to the tank with the ladder attachment tube and cotter pin provided (see Figure 8.5). Position the ladder parallel with the side of the tank and mark the 1/4" anchor bolt locations. Install appropriate 1/4" anchor bolts and attach the bottom of the ladder to the concrete pad. Anchor bolts are not provided by the manufacturer and must be purchased by the customer.

## 8.6 STEEL LADDER CAGES

8.6.1 Using the assembly drawing shown in Figure 8.6 and the instructions in section 8.5.2, verify that all parts are present and assemble accordingly. These cages are designed for use only with the SII steel ladder design. Cages are required for ladders used to ascend to heights exceeding 20 ft.

NOTE: Assembly is easier if the cages are installed on the ladder before the ladder installation to the tank.

8.6.2 Install the cages loosely using the u-bolts provided starting with the top cage unit (4 ft. unit with a larger bolt pattern). The bottom cage unit must have a larger diameter at the bottom than at the top of the unit and the bottom edge of the unit be located a minimum of 7 feet and a maximum of 8 feet above the ground. When the cage units have been properly located and spaced evenly, tighten the u-bolts securely.

## 8.7 FRP LADDERS (up to 300" height)

8.7.1 FRP ladders are designed in accordance with OSHA 1910.27 and are to be mounted next to the tank on a concrete pad at the same elevation as the bottom of the tank. The concrete pad area that the ladder mounts to must be of sufficient size as to comply with OSHA standards regarding proper access to and from the ladder. This should be determined by the construction site engineer based on the specific application. The pad must be of sufficient size to allow proper attachment of 5/8" anchor bolts (check with anchor bolt manufacture for embedment and edge distance required). The ladder mounting system is designed to allow for tank expansion and contraction due to temperature and loading changes. Using the assembly drawing and table shown in Figure 8.7, verify that all parts are present and assemble accordingly.

NOTE: ALL LADDERS REQUIRE AN ATTACHMENT ASSEMBLY KIT. SII WILL SHIP THE KIT TO THE END CUSTOMER ATTACHED TO THE LADDER SECTIONS.

DRAWING B-5950 = PN: 99800078  
 ANY TIME A REVISION IS DONE TO THIS DRAWING A PDF COPY MUST BE SAVED TO THE CUTSHEET DATABASE, OVERWRITING THE EXISTING 99800078.PDF FILE.

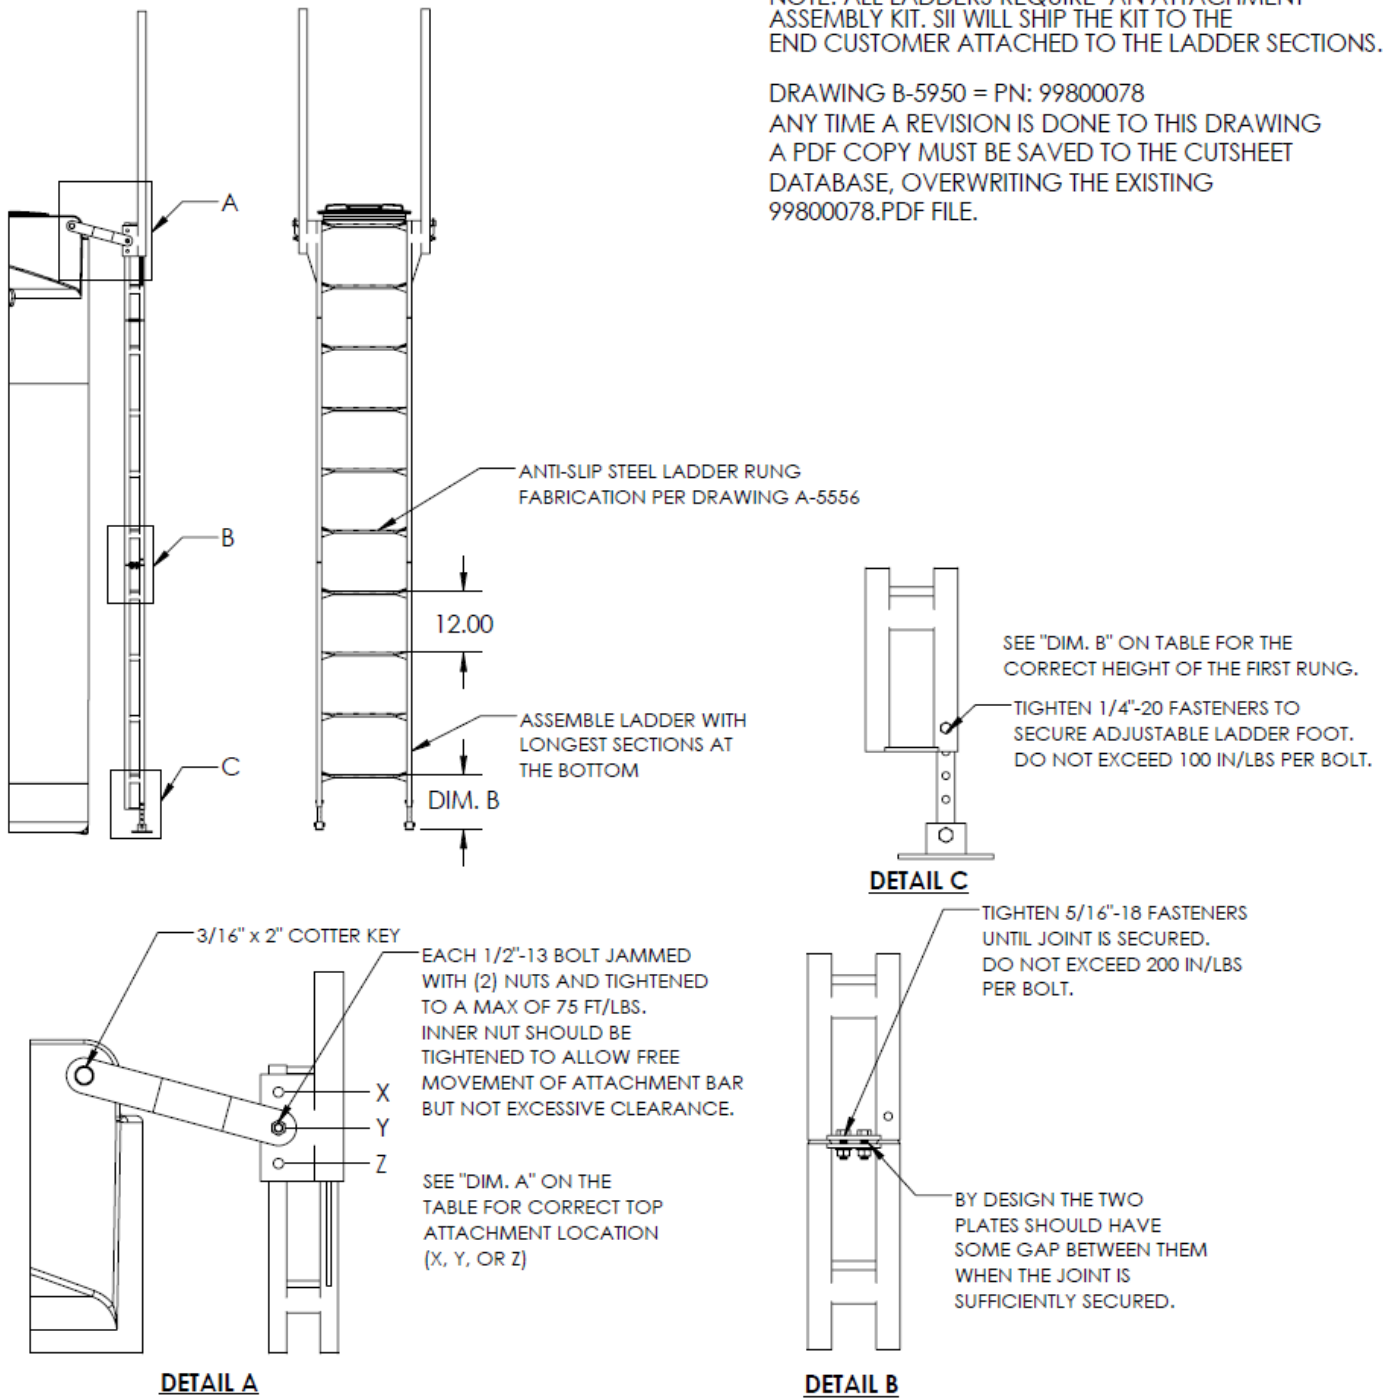


Figure 8.5



MODULAR STEEL LADDER DESIGN TABLE						S:\REF_FILES\EXCEL		
TANK SIZE	TANK P/N	LADDER SECTIONS REQUIRED				TOP ATTACHMENT (DIM A)	BOTTOM RUNG HEIGHT (DIM B)	ASM PN
		3 FT.	4 FT.	5 FT.	6 FT.			
2000 x 90	505xx			1		X	11	34701685
2000 x 96	50503			1		Z	10	34701685
2500 x 90	509xx	1	1			Y	8	34701674
2500 x 96	50903				1	Z	11	34701690
3000 x 90	513xx		2			X	11	34701671
3000 x 96	51303	1	1			Y	11	34701674
3000 x 102	741xx				1	Z	11	34701690
3900 x 90	519xx			1	1	X	11	34701687
4000 x 120	74211	1	1			Z	8	34701674
4100 x 102	736xx		1	1		Z	8	34701686
4100 x 120	82000				1	Y	11	34701690
4400 x 90	521xx		2	1		Y	9	34701675
4400 x 90 CB	52000					X	11	34701672
4500 X 102	742XX			2		Z	9	34701683
4600 x 120	70005		2			Z	8	34701671
4900 X 90	548XX			3		Z	8	34701689
5000 x 102	10021			1	1	Z	8	34701687
5500 x 90	702xx			2	1	Y	11	34701688
5500 x 120	700xx		1	1		Z	10	34701686
5600 x 142	525xx				1	Y	11	34701690
6000 x 102	743xx		2	1		X	11	34701675
6000 x 120	71403			2		Z	11	34701683
6200 x 120	822xx			2		Z	8	34701683
6500 x 120	714xx			1	1	Z	8	34701687
6600 x 120	53004			1	1	X	8	34701687
7000 x 142	530xx	1	1			Y	11	34701674
7500 x 102	744xx			1	2	Y	11	34701678
8000 x 120	53006		2	1		Y	11	34701675
8500 x 120	740xx		2		1	Z	11	34701670
8750 x 142	536xx		1	1		Z	9	34701686
9500 x 120	745xx		1		2	Z	8	34701672
10500 x 142 L&P	533xx				2	Z	11	34701677
10500 x 144 CH	53303		2		1	Z	8	34701670
11500CB x 142	744xx			1	2	Z	8	34701678
12500 x 142	535xx		2		1	Y	11	34701670
15000 x 142	537xx			1	2	Y	11	34701678
16500 x 142	538xx		1	3		Y	11	34701669
550CCS	50400	1				X	11	34701684
1100CCS	54700	1	1			Z	8	34701674
1550CCS	54900		1	1		Y	11	34701686
2000CCS	55700	1	1			Z	8	34701674
2500CCS	55800		2			Y	11	34701671
3000CCS	55900			2		Z	8	34701683
3500CCS	56000			1	1	Y	11	34701687
4000CCS	56100		2	1		Z	8	34701675
4500CCS	56200		2		1	X	11	34701670
5000CCS	56300			2	1	Z	9	34701688
5500CCS	56600				2	Y	11	34701677
6500CCS	56700		2		1	X	11	34701670
8700CCS	10064		2		1	X	11	34701670
10000CCS	10066			1	2	Z	8	34701678
12500CCS	10311	1			3	Z	8	34702464

Figure 8.5


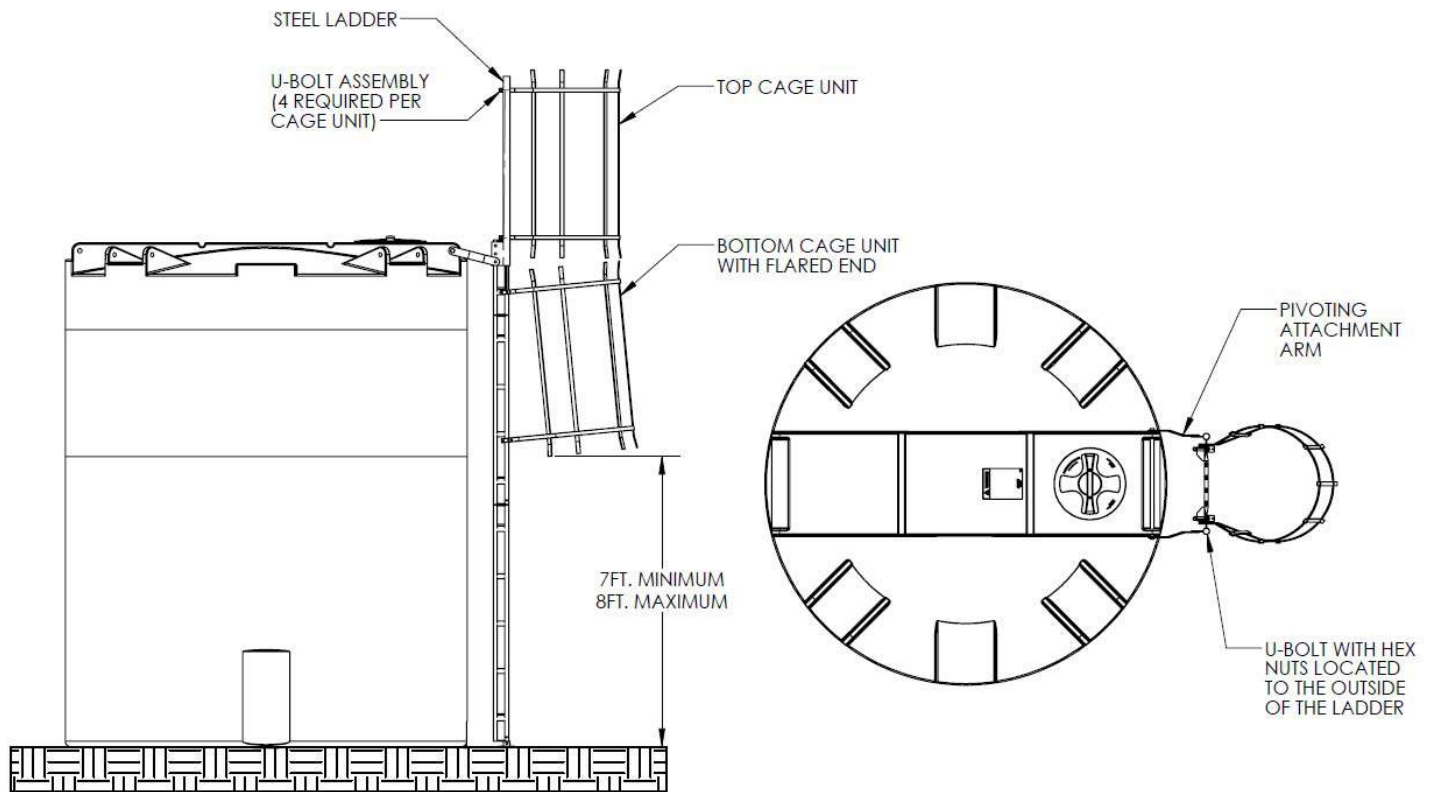


Figure 8.6

**NOTE:** This ladder is provided for tank inspection only. At no time should the operator step off this ladder onto the tank unless stepping onto an approved work platform with guard rails or utilizing some other approved safety device. Proper safety equipment (i.e. guard rails, safety harness, etc.) must be used to step onto the tank. Consult applicable regulations to determine proper safety equipment.

8.7.2 Attach the stainless steel top pivoting attachment arms to the ladder using the 1/2" bolt and 3/4" bushing assemblies (2 required) as shown in Figure 8.7. Position the ladder on the tank and attach the top pivoting attachment arms to the tank with the ladder attachment tube and cotter keys provided (see assembly drawing). Position the ladder parallel with the side of the tank and mark 4 ea. 5/8" anchor bolt locations. Install appropriate 5/8" anchor bolts and attach the bottom of the ladder to the concrete pad. Anchor bolts are not provided by the manufacturer and must be purchased by the customer.

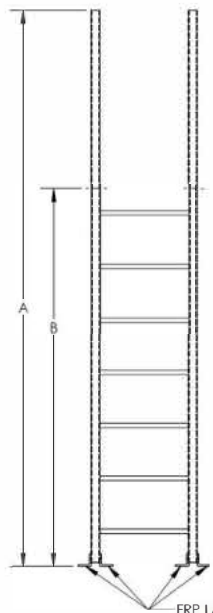

TANK SIZE	TANK P/N	A	B	SPACER
2000 X 90	505XXX	126.0	85.5	NO
2500 X 90	509XXX	145.0	105.0	NO
3000 X 90	513XXX	166.0	122.0	NO
3000 X 102	741XXX	137.0	93.0	NO
3900 X 90	519XXX	202.0	158.0	NO
4400 X 90	521XXX	219.0	178.0	NO
4500 X 102	742XXX	182.0	138.0	NO
4900 X 90	548XXX	238.0	197.0	NO
5500 X 90	702XXX	258.0	214.0	NO
5500 X 120	700XXX	160.0	120.0	YES
5600 X 142	525XXX	126.0	87.0	NO
6000 X 102	743XXX	227.0	183.0	NO
6500 X 120	714XXX	181.0	140.0	YES
7000 X 142	530XXX	147.0	106.0	NO
7500 X 102	744XXX	270.0	226.0	NO
8750 X 142	536XXX	170.0	130.0	NO
10500 X 142	533XXX	193.0	152.0	NO
12500 X 142	535XXX	222.0	181.0	NO
15000 X 142	537XXX	258.0	217.0	NO

FRP LADDER ANCHOR  
BOLT MOUNTING CLIPS

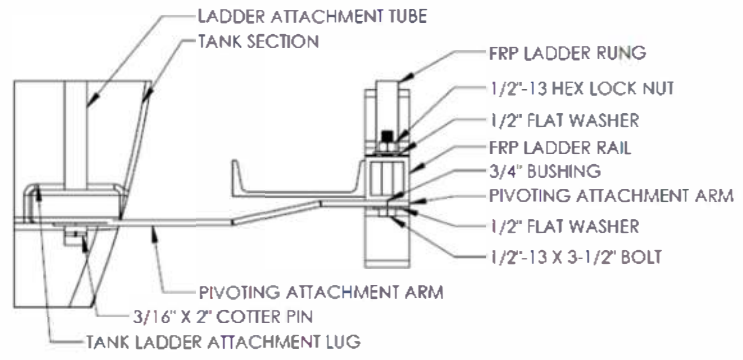
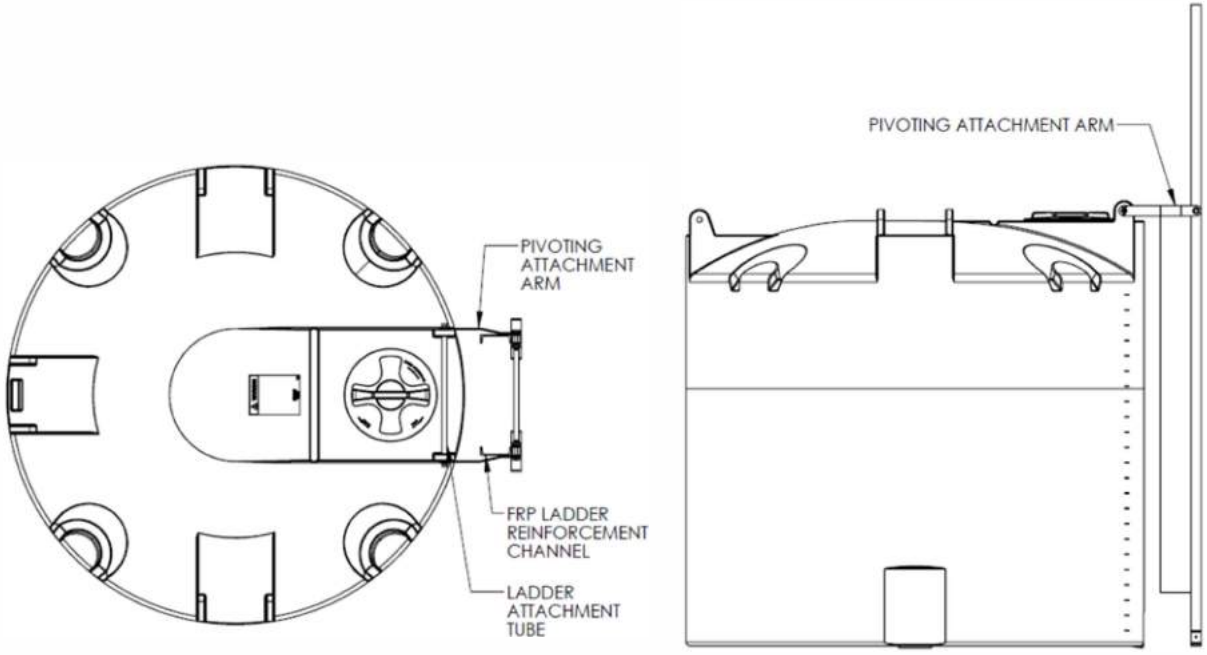


Figure 8.7

## 8.8 FRP LADDER CAGES

8.8.1 Using the assembly drawing shown in Figure 8.8 and the instructions in section 8.7.2, verify that the correct number of fasteners have been shipped to attach the FRP cage unit. These cages are designed for use only with the SII FRP ladder design. Cages are required for ladders used to ascend to heights exceeding 20 ft.

NOTE: Assembly is easier if the cage unit is installed on the ladder before ladder installation.

8.8.2 Position the cage unit on the ladder with the flared end toward the ladder base. Attach the cage to the ladder using the 3/8" stainless steel bolts provided (4 bolt assemblies per cage hoop).

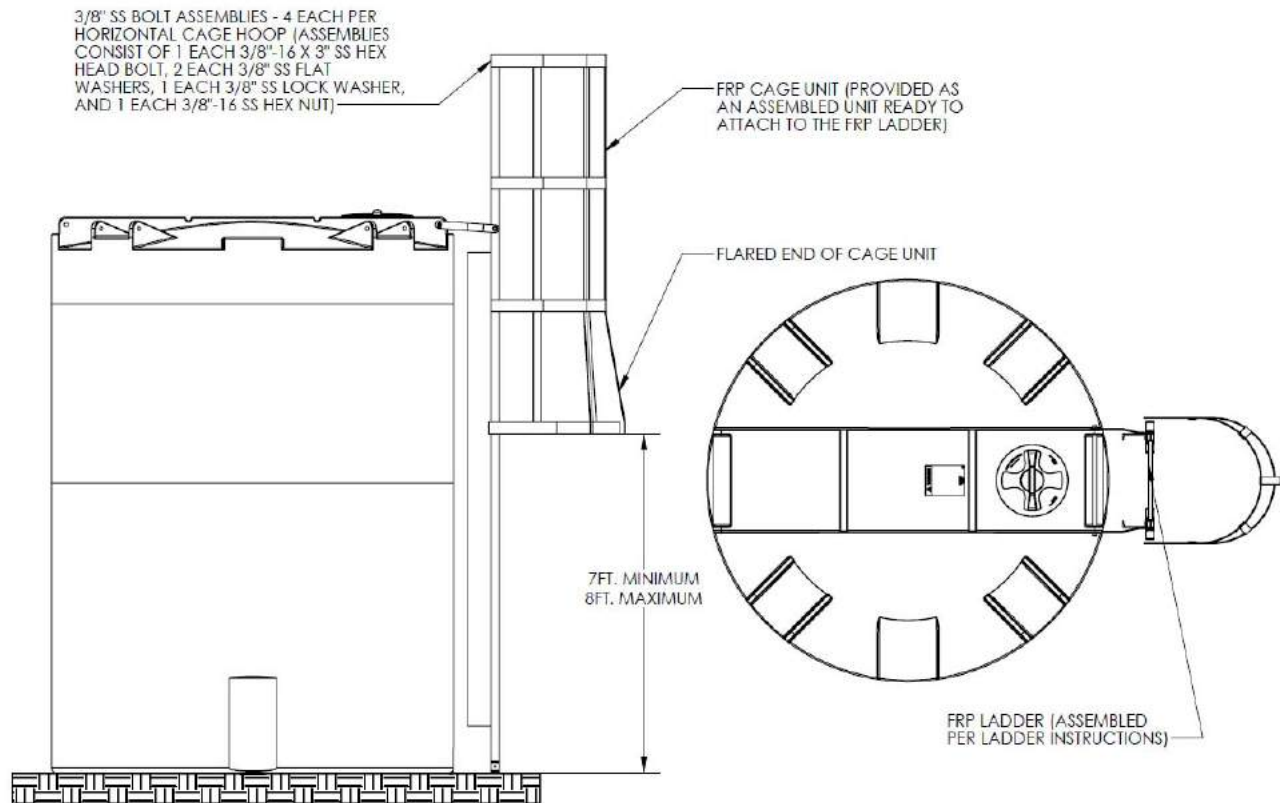


Figure 8.8

## 8.9 HORIZONTAL LEG TANK INSTALLATION

8.9.1 Horizontal leg tanks are to be used only with adequate support. The hoop pipe restraints restrain the leg tank and give it structural support. Hoop restraints are available for tanks 525 gallons and larger. Hoops are required on tank sizes above 730 gallons. An example assembly drawing is shown in Figure 8.9.

8.9.2 With one person on each side of the tank, insert J-bolts into the hoop holes and lift the hoop into position directly above the tank legs. Spread the hoop slightly while sliding the hoop (centered in the pipe guide channel formed into the tank legs) onto the tank. Install the bevel washer, lock washer, and hex nut on each of the J-bolts loosely. Do not tighten the hex nuts yet. See view A-A shown in Figure 8.9 for an illustration of the loosely assembled J-bolt/hoop assembly.

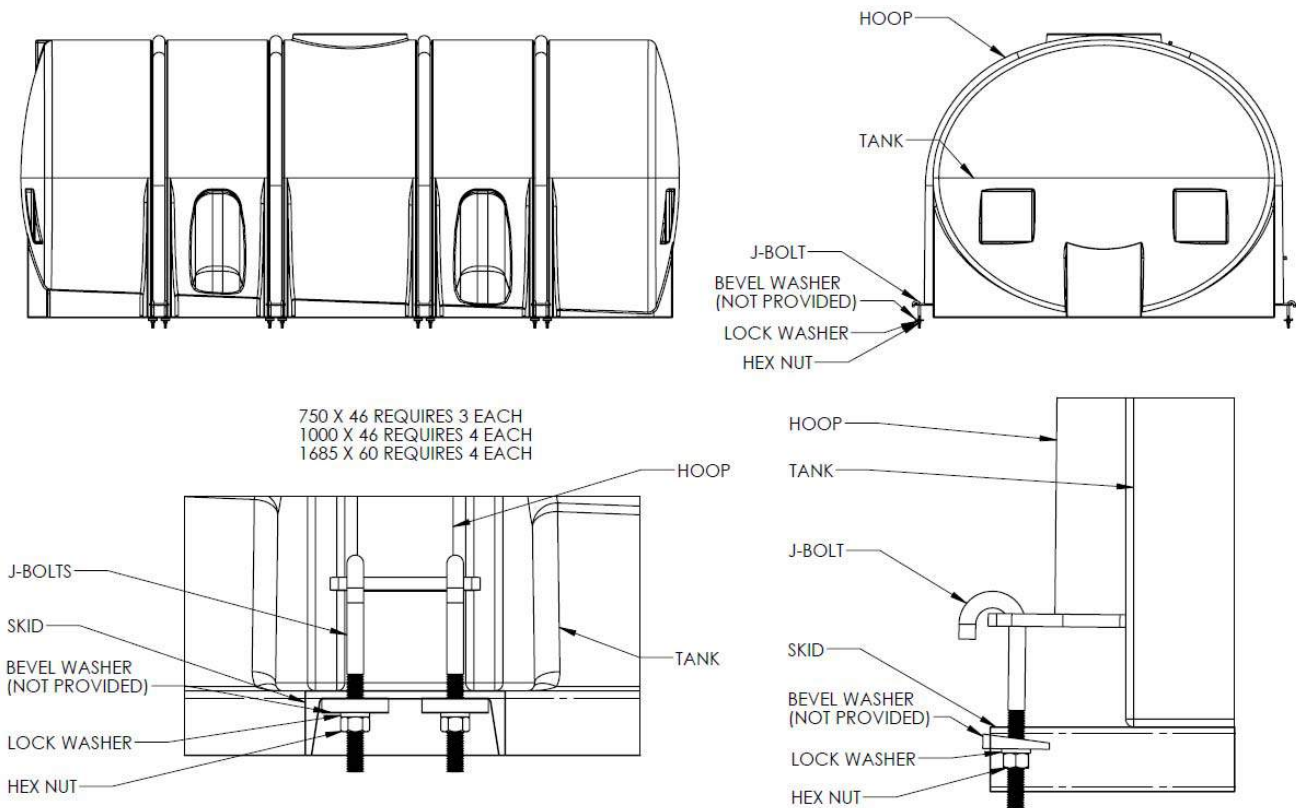


Figure 8.9

8.9.4 Repeat the procedure as detailed in section 8.8.3 for each of the remaining hoops required. When all hoops have been loosely installed, check the tank and hoop alignment to make sure the placement is correct. When proper alignment has been established, start tightening the hex nuts on each hoop. Tighten both sides of the hoop equally until the top of the hoop is tight all the way around the top of the tank and proper tension is obtained. Proceed to the next hoop and repeat the tightening procedure until all of the hoops have proper tension. Recheck the hoop tension after the tank has been filled. Tighten the hoops as necessary until the top of the hoop is tight all the way around the top of the tank.

8.9.5 Additional baffling may be required on horizontal tanks over 1000 gallons if the tank is used to haul liquid over the road. The additional baffling is used to reduce sloshing during transports (starting and stopping).

## 8.10 CONE BOTTOM TANK STAND EXTENSIONS

8.10.1 Cone bottom tank stand extensions are designed specifically for use with SII cone bottom tank stands. Cone bottom tank stands equipped with extensions are not approved for seismic restraint applications. The extensions are provided in 20" and 40" welded units and are used to increase cone bottom tank clearance 20" or 40".

8.10.2 Install the extensions onto the cone stand legs with the bolt assemblies provided. Tighten bolts to 300 ft.-lbs of torque. With the extensions in place, proceed with the cone stand installation as previously described.

## 8.11 HEATED TANKS

8.11.1 Heated tanks are insulated with a minimum of 2" of 2-3 lb./ft.<sup>3</sup> polyurethane foam material with an "R" value of 8.33/in. The insulation is sealed with 2 coats of acrylic latex mastic. Although this appears to be a tough, resilient covering, it can be easily torn or broken if the tank is not properly transported. **Use only carpeted and padded equipment to move an insulated tank.** Do not allow the tank to drop or roll on rough surface as this may damage the insulation.

8.11.2 Heated tanks are equipped with at least 1 control box with maintenance temperature and over-limit temperature settings. The maintenance temperature setting should be set at the desired maintenance temperature. The over-limit temperature setting should be adjusted to 10 degrees above the desired maintenance temperature. The maximum temperature the over-limit control should be set to is 140° F for crosslinked polyethylene tanks and 130° F for high density linear polyethylene tanks. Be sure to check tank material type and design before setting any control temperatures over 100° F. It is best to keep the tank at the lowest temperature necessary to accomplish the desired objective. The Figure 8.11 shows a standard 110 VAC control box front cover with the control functions shown. This control box has calibration functions for the temperature probes. The control box is factory calibrated and should not need recalibrated. If there are any questions about control box calibration, consult the factory. Figure 8.12 shows a schematic of the terminal connections possible located under the control box front cover. The terminals available for customer connection are: line in, over-limit alarm relay, and low-limit alarm relay. There are other control boxes available with different functions not detailed in these instructions. Please consult the factory with questions regarding other types of control boxes available. Do not expose control box to atmosphere during or after installation for extended periods of time as this could cause condensation. Refer to the control box instructions and schematics sent with each tank for further details.

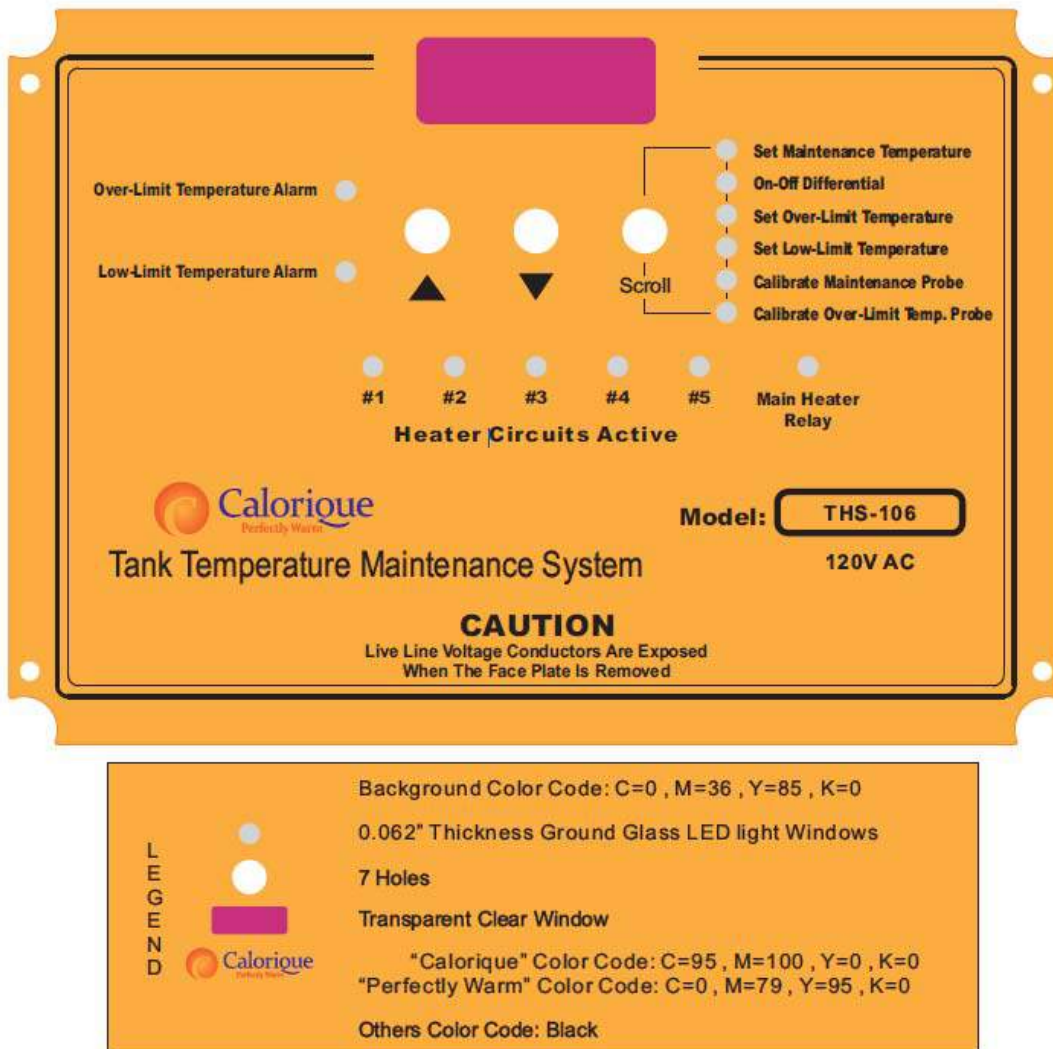


Figure 8.11

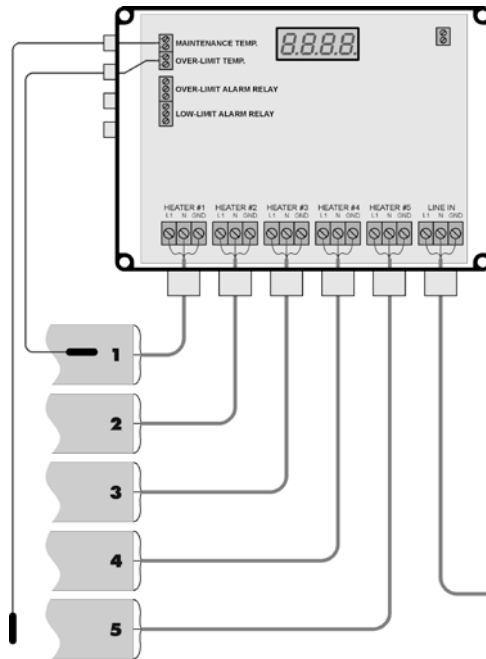


Figure 8.12

## 9. TANK MAINTENANCE

### 9.1 TANK INSPECTION

9.1.1 Simple periodic inspections of the tank installation can prevent problems and chemical loss from occurring. Inspection intervals should be consistent with site usage (the more times liquid is processed through the tank site, the more frequent the inspections). Prior to any inspection the tank needs to be emptied and cleaned. This inspection should occur annually at a minimum. The checking procedure should be as follows:

1. Inspect the tank for physical damage such as cuts, impacts, cracks, swelling, softening of tank walls, and stress cracks (caused by long term exposure to environmental conditions and stress). NOTE: A tank inspection guide is available on the SII website at the following address: [www.snydernetwork.com](http://www.snydernetwork.com) or can be obtained for tank analysis and inspection through the Customer Service Department at SII.
2. Inspect the fittings for broken parts, cracks, wear marks, or other signs of potential leaks.
3. Inspect gaskets for deterioration. Look for discoloration, bulges, checking or crazing. All of these symptoms could indicate potential failure.
4. Inspect any valves and/or pumps that may be connected to the tank. Also inspect the hoses and connections for any signs of wear.

## 10. SII PRODUCT POLICY STATEMENTS

### 10.1 SII STANDARD LIMITED WARRANTY

10.1.1 Distributors and their authorized distribution have the responsibility of calling to the attention of their customers the following Snyder Industries, Inc. standard limited warranty, prior to acceptance of an order from the customer for any Snyder Industries, Inc. product. Record all required warranty information in section 2.1 and retain this information for use in the advent of a warranty question.

10.1.2 Snyder Industries, Inc. warrants to the purchaser for use that if any manufactured tank product is proven to be defective in material or workmanship within 3 YEARS from the date of original invoice from factory, and Snyder Industries, Inc. is notified within 15 days after such defect is discovered, Snyder Industries, Inc. will (at company option) either re-

---

place or repair said part. Snyder Industries, Inc. warrants to the purchaser for use that if any tank fitting, attachment, or accessory product is proven to be defective in material or workmanship within 1 YEAR from the date of original invoice from factory, and Snyder Industries, Inc. is notified within 15 days after such defect is discovered, Snyder Industries, Inc. will (at company option) either replace or repair said part. This Snyder Industries Standard Limited Warranty does not apply to damage resulting from misuse, improper application of recommended materials, neglect, material wear, accident, or improper installation or maintenance. Said part will not be considered defective if it substantially fulfills performance specifications. THE FOREGOING STANDARD LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OF MERCHANTABILITY, FITNESS FOR PURPOSE AND OF ANY OTHER TYPE, WHETHER EXPRESSED OR IMPLIED. Snyder Industries, Inc. neither assumes nor authorizes anyone to assume for it any other obligation or liability in connection with said tank product and will not be liable for incidental or consequential damages. THE REMEDIES STATED HEREIN SHALL BE THE EXCLUSIVE REMEDIES AVAILABLE UNDER THIS STANDARD WARRANTY. CLAIMS UNDER THIS STANDARD LIMITED WARRANTY SHALL BE HANDLED UNDER THE SNYDER INDUSTRIES, INC. SERVICE POLICY. Snyder Industries, Inc. will not be responsible for any charges incurred in repairing or servicing any Snyder Industries, Inc. product except as such repairs are made at Snyder Industries, Inc. or by Snyder Industries, Inc. personnel or as approved in writing from Snyder Industries, Inc. Customer Service.

## 10.2 SII WARRANTY EXCEPTIONS

10.2.1 Distributors and their authorized distribution have the responsibility of calling to the attention of their customers any exceptions to the Snyder Industries, Inc. standard limited warranty, prior to acceptance of an order from the customer for any Snyder Industries, Inc. product.

10.2.2 Due to the uniqueness of tank applications, Snyder Industries, Inc. may offer warranties other than the standard warranty. These warranty statements will be in writing from Snyder Industries, Inc. The warranty period may be longer than 3 years as in the case for purchased extended warranties, or the warranty period may be shorter than 3 years as in the case for certain chemical/material applications. Please consult Snyder Industries, Inc. if you have any questions regarding warranty coverage and/or requirements.

## 10.3 RETURN MERCHANDISE/WARRANTY CLAIM PROCEDURE

10.3.1 SII has specific procedures for return of unused merchandise and warranty claims. You must obtain a Return Merchandise Authorization (RMA) number from SII prior to returning any product. Any product returned to SII without an RMA number will be refused. Use the RMA number on all return shipping paperwork and correspondence. Return the merchandise freight prepaid. Freight collect shipments will be refused. Upon receipt, SII will inspect the merchandise and issue appropriate credit. A restocking fee may be assessed. To ensure employee safety, SII will not accept used chemical tanks at its facilities. To make a claim, please contact the Customer Service Department at SII by mail, phone or e-mail:

Snyder Industries, Inc.  
6940 O Street, Suite #100  
Lincoln, NE 68510  
(402) 467-5221  
FAX: (402) 467-6493  
E-mail: sales@snydernet.com

The following information will be required to assist in filing your claim:

1. Product identification (tank size, part number, serial number, etc.)
2. SII customer order number
3. Name and phone number of person making the claim
4. Distributor/company name, address, and phone number
5. Description of reason for claim
6. Pictures of failure and installation
7. MSDS of chemicals stored
8. Temperature of tank application



# NOTICE OF SMALL BUSINESS SELF-CERTIFICATION



The Department is pleased to announce that  
**DESIGN PLASTIC SYSTEMS INC**

has successfully completed the Pennsylvania Department of General Services' process for self-certification as a small business under the Commonwealth's Small Business Contracting Program, with the following designation:

BUSINESS TYPE(s):

**Construction Stocking Supplier**

CERTIFICATION NUMBER: **124895-2023-05-SB**

CERTIFICATION TYPE: **SMALL BUSINESS**

ISSUE DATE: **05/24/2023**

EXPIRATION DATE: **05/24/2025**

RECERTIFIED DATE:

A handwritten signature in black ink that reads "Kerry L. Kirkland". The signature is written in a cursive, flowing style.

Kerry L. Kirkland, Deputy Secretary  
Bureau of Diversity, Inclusion & Small Business Opportunities



---

## STANDARD LIMITED WARRANTY

Distributors and their authorized distribution have the responsibility of calling to the attention of their customers any exceptions to the Snyder Industries standard limited warranty, prior to acceptance of an order from the customer for any Snyder Industries product.

Snyder Industries warrants to the purchaser for use that if any manufactured tank product is proven to be defective in material or workmanship within 3 YEARS from the date of original invoice from factory, and Snyder Industries is notified within 15 days after such defect is discovered, Snyder Industries will (at company option) either replace or repair said part. Snyder Industries warrants to the purchaser for use that if any tank fitting, attachment, or accessory product is proven to be defective in material or workmanship within 1 YEAR from the date of original invoice from factory, and Snyder Industries is notified within 15 days after such defect is discovered, Snyder Industries will (at company option) either replace or repair said part. This Snyder Industries Standard Limited Warranty does not apply to damage resulting from misuse, improper application of recommended materials, neglect, material wear, accident, or improper installation or maintenance. Said part will not be considered defective if it substantially fulfills performance specifications. THE FOREGOING STANDARD LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OF MERCHANTABILITY, FITNESS FOR PURPOSE AND OF ANY OTHER TYPE, WHETHER EXPRESSED OR IMPLIED. Snyder Industries neither assumes nor authorizes anyone to assume for it any other obligation or liability in connection with said tank product and will not be liable for incidental or consequential damages. THE REMEDIES STATED HEREIN SHALL BE THE EXCLUSIVE REMEDIES AVAILABLE UNDER THIS STANDARD WARRANTY. CLAIMS UNDER THIS STANDARD LIMITED WARRANTY SHALL BE HANDLED UNDER THE SNYDER INDUSTRIES SERVICE POLICY. Snyder Industries will not be responsible for any charges incurred in repairing or servicing any Snyder Industries product except as such repairs are made at Snyder Industries or by Snyder Industries personnel or as approved in writing from Snyder Industries Customer Service.

Due to the uniqueness of tank applications, Snyder Industries may offer warranties other than the standard warranty. These warranty statements will be in writing from Snyder Industries. The warranty period may be longer than 3 years as in the case for purchased extended warranties, or the warranty period may be shorter than 3 years as in the case for certain chemical/material applications. Please consult Snyder Industries if you have any questions regarding warranty coverage and/or requirements.

### WARRANTY CLAIM PROCEDURE

Snyder Industries has specific procedures for return merchandise and warranty claims. To make a claim, please contact the Customer Service Department at Snyder Industries by mail, phone or e-mail:

Snyder Industries  
6940 "O" Street, Suite 100  
Lincoln, NE 68510  
(402) 467-5221  
FAX: (402) 465-1220  
E-mail: sales@snydernet.com

The following information will be required to assist in filing your claim:

1. Product identification (tank size, part number, serial number, etc.)
2. Snyder Industries customer order number
3. Name and phone number of person making the claim
4. Distributor/company name, address, and phone number
5. Description of reason for claim
6. Pictures of failure and installation
7. MSDS of chemicals stored
8. Temperature of tank application